

Diamond Sani-Brom

Part of a Two Part Disinfection System for Spas and Hot Tubs
Effective, Easy to Use.
pH Adjusted.
Must be used in Conjunction With Sani-Start

ACTIVE INGREDIENT: Sodium Bromide 35%
OTHER INGREDIENTS 65%
TOTAL 100%

EPA REG NO. 3432-58

EPA EST. NO. 3432-PA-1


KEEP OUT OF REACH OF CHILDREN

CAUTION

Harmful if Swallowed

NET CONT. 1 QT. (32 FL. OZS.)

Mfg. By: N. Jonas & Co., Inc.
Bensalem, PA 19020

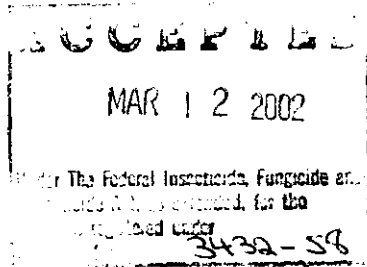

PRECAUTIONARY STATEMENTS
HAZARDS TO HUMANS AND DOMESTIC ANIMALS
CAUTION. Harmful if swallowed. Wash thorough with soap and water after handling.

FIRST AID	
IF SWALLOWED	<ul style="list-style-type: none">• Call a poison control center or doctor immediately for treatment advice.• Have person sip a glass of water if able to swallow.• Do not induce vomiting unless told to do so by the poison control center or doctor.• Do not give anything by mouth to an unconscious person.• Call a poison control center or doctor for further treatment advice
Have the product container or label with you when calling a poison control center or doctor, or going for treatment.	

This product when used in conjunction with SANI_START is an effective disinfectant treatment for Spas and Hot Tubs. SANI-BROM is compatible with most chemicals normally used to treat spa and hot tub water such as sanitizers, acids, bases and algicides.

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

For initial treatment add 8 oz. (1 cup) of SANI-BROM for each 500 gallons of water. Immediately add 8 oz. (1 cup) for each 500 gallons of water of SANI-START to release the bromine. Check pH of water with pH of Test Kit and adjust to 7.4-7.8 when necessary. Each day, use Bromine Test Kit and check bromine reading which should be 3-5 ppm. If lower, add 4 oz. (1/2 cup) SANI-START for each 500 gallons of water. Circulate the water while adding to assure rapid and thorough mixing. After 15 minutes recheck bromine level and add additional SANI-START if still necessary. (Below 3 ppm). Check pH level every day and maintain at 7.4-7.8 in order to prevent corrosion of metal parts. Since bromine level is affected by water temperature and bather load, check often and maintain bromine level in the 3-5 ppm range. Do not use pool when residual is above this level. At the end of each day add 4 oz. (1/2 cup) of SANI-START for each 500 gallons of water before turning off pump. Once a week add 2 oz. of SANI-BROM for each 500 gallons of water.

STORAGE AND DISPOSAL: Do not reuse empty container. Rinse thoroughly with water and discard in trash.

To Calculate Capacity of Spa or Hot Tub: Rectangular: Multiply length x width x depth of Spa (all in feet) x 7.5 = gallons. Round: Multiply diameter x diameter x depth of Spa (all in feet) x 5.9 = gallons.

3432-58
3/12/2002
Page 1 of 1