



ANTI-FOULING BOTTOM PAINT #9805

Porcelite Anti-Fouling Paints for Steel Hulls are designed to give maximum protection, durability and performance for boats which remain in fresh or salt water. They effectively resist all types of fouling, such as <u>barnacles</u>, <u>algae</u> (plant growth) and <u>Toredo</u> <u>Worms</u>. Anti-fouling bottom paints must be applied as a system with underwater primer and anti-corrosive paint in order to give complete protection to the hull. The following recommendations should be followed.

New Steel Hulls: Complete removal of rust or mill scale by sandblasting—apply one (1) coat — Wash Coat Primer at once, apply three (3) coats Lead Chroxide Primer — 24 hours apart. Maximum seven (7) days — between coats — apply one (1) coat Anti-Corrosive Standard and one (1) coat Anti-Fouling. Hull must be put in water within three (3) days after Anti-Fouling is applied. Before ship delivery apply one (1) coat Anti-Corrosive Standard and one (1) coat Anti-Fouling.

Repaint, Steel Hulls: Surface must be cleaned thoroughly and washed down with fresh water. Bare areas must be wired brushed or sandblasted. Apply one (1) coat Wash Coat Primer to bare spots — follow with two (2) coats Lead Chroxite. Finish entire hull with one (1) coat Lead Chroxide Primer. one (1) coat Anti-Corrosive Barrier Coat and one (1) coat Anti-Fouling Paint. Hull must be put back in water within 48 hours. For thinning when necessary use Mineral Spirits or Hi Flash Naphtha.

IF SWALLOWED, CALL PHYSICIAN IMMEDIATELY. COMBUSTIBLE. Keep away from heat and open flame. Avoid prolonged contact with skin and breathing of vapor or spray mist. Wash hands before eating or smoking. Close container after each use.

Use with adequate ventilation.

KEEP OUT OF THE REACH OF CHILDREN.



THOMSON-PORCELITE PAINT CO. MAIN PLANT & OFFICE 2301 S. 53rd St.





ANTI-FOULING BOTTOM PAINT = 9805

Porcelite Anti-Fouling Paints for Steel Hulls are designed to give maximum protection, durability and performance for boats which remain in fresh or salt water. They effectively resist all types of fouling, such as barnacles, algae (plant growth) and Toredo Worms. Anti-touling bottom paints must be applied as a system with underwater primer and anti-corrosive paint in order to give complete protection to the hull. The following recommendations should be followed.

New Steel Hulis: Complete removal of rust or mill scale by sandblasting—apply one (1) coat — Wash Coat Primer at once, apply three (3) coats Lead Chroxide Primer — 24 hours apart. Maximum seven (7) days — between coats — apply one (1) coat Anti-Corrosive Standard and one (1) coat Anti Fouling. Hull must be put in water within three (3 days after Anti-Fouling is applied. Before ship delivery apply one (1) coat Anti-Corrosive Standard and one 1 coat Anti-Fouling.

Repaint: Steel Hulls: Surface must be cleaned thoroughly and washed down with fresh water. Bare areas must be wired brushed or sandblasted. Apply one (1) coat Wash Coat Primer to bare spets – follow with two (2) coats Lead Chroxite. Finish entire hull with one 1 coat Lead Chroxide Primer, one (1) coat Anti-Corrosive Barrier Coat and one (1) coat Anti-Fouling Paint. Hull must be put back in water within 48 hours. For thinning when necessary use Mineral Spirits or Hi Flash Naphtha.


F SWALLOWED, CALL PHYSICIAN IMMEDIATELY COMBUSTIBLE. Keep usay from heat and open flame. Avoid prolonged contact with skin and streathing of valier or spray mist. Wash hands before eating or smoking the container after each use.

Use with adequate ventilation.

KEEP OUT OF THE REACH OF CHILDREN



MAIN PLANT & OFFICE 2301 S. 53rd St.

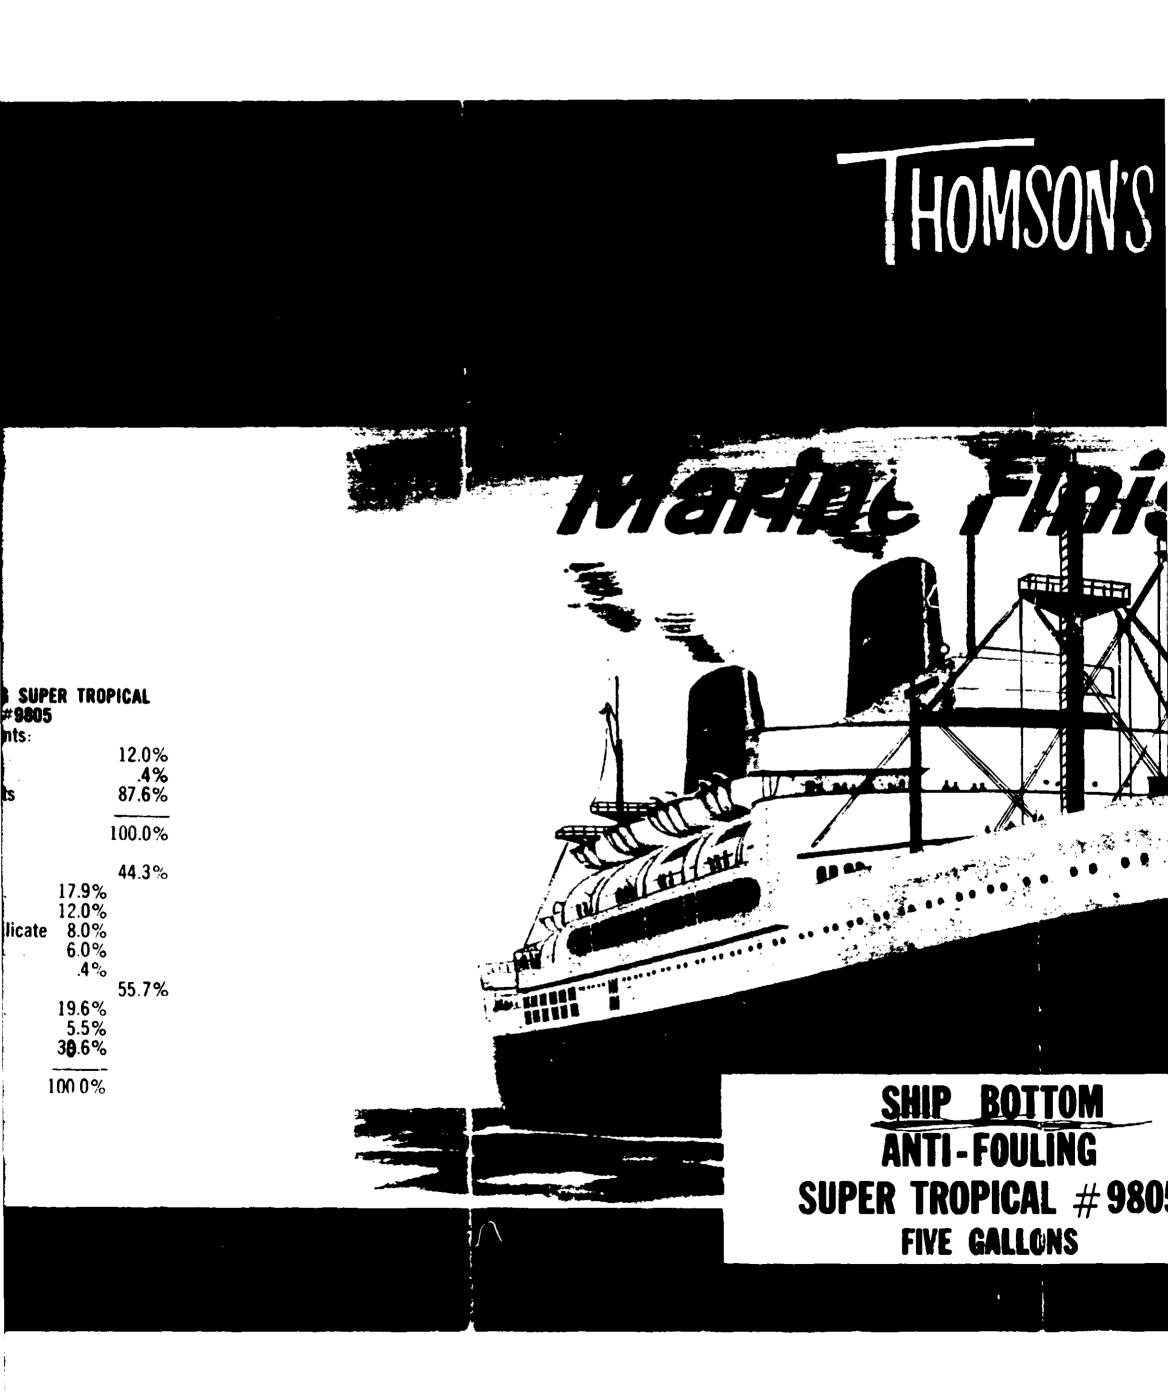

THOMSON PORCELITE PAINT COMPANY + PHILADELPHIA 43. PENNSYLVANIA

FOR US SHIP BOTTOM

ANTI-FOULING

SUPER TROPICAL = 9805

FIVE GALLENS

....

Marine Finishes

G SUPER TROPICAL **980**5



WARNING!

KEEP OUT OF THE REACH OF CHILDREN See back panel for additional cautions