

PENNSAN XXX

DIRECTIONS FOR USE ON DAIRY FARMS:

Bulk Milk Cooling Tanks - Prior to filling the tank with milk, sanitize tank with PENNSAN XXX solution (1 oz. per 5 gallons water) by brush or spray method. Drain solution from tank.*

Farm Dairy Utensils - Prior to milking, sanitize utensils with PENNSAN XXX solution (1 oz. per 5 gallons water) by rinse or spray.*


Pipeline Milkers - After cleaning by recommended procedure, rinse with warm water and sanitize with PENNSAN XXX solution (1 oz. per 5 gallons water). Circulate for 1 to 2 minutes.

Udder Sanitation - Wash and massage udders before milking with solution of 1 oz. of PENNSAN XXX per 5 gallons of warm water (110°-115°F). Individual disposable paper towels for each cow should be used. After milking, dip each teat in dip cup containing PENNSAN XXX (1 oz. per 5 gallons water) solution. Never use the same solution for more than 3-4 animals. Replace solution if it becomes cloudy or visibly dirty.

Inflations - Brush inflations after milking with warm (110°-120°F) PENNSAN XXX solution (1 oz. per 5 gallons water) using good inflation brush. Rinse thoroughly and store as directed by sanitarians or fieldmen. Prior to milking, sanitize with PENNSAN XXX solution (1 oz. per 5 gallons water).*

* RINSE EQUIPMENT WITH POTABLE WATER FOLLOWING SANITIZING RINSE.

This product when used as directed fulfills the criteria of Appendix F of the Grade "A" Pasteurized Milk Ordinance 1965 Recommendations of the U.S. Public Health Service.

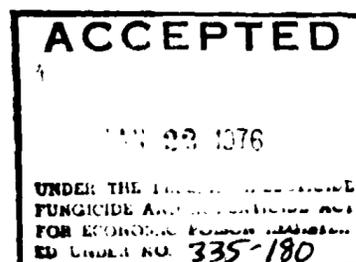

ACCEPTED WITH COMMENTS