


Table 1. Representative Count of CYTHION in MALATHION 25% Concentrate Aerosol. Data obtained from a Microscopic Slides Coated with DRI-FLU.

Eye-piece Divisions (D)	Number of Droplets (N)	DAN	Sum of Total DYN x DAN	Accumulative Percentages
1	5	5	0.31	0.31
2	10	20	1.22	1.53
3	9	27	1.65	3.18
4	12	48	2.93	6.11
5	15	75	4.55	10.69
6	12	72	4.40	15.09
7	25	175	10.70	25.79
8	14	112	6.85	32.64
9	23	207	15.40	48.04
10	19	190	11.61	59.65
11	14	154	9.41	69.06
12	10	120	7.33	76.39
13	6	78	4.77	81.16
14	4	56	3.42	84.58
15	11	165	10.12	94.70
16	2	32	1.96	96.66
17	2	36	2.21	98.87
18	1	18	1.15	99.99
Total	199	1636		

*Measurements were taken at 500x magnification. Each drop in diameter is 1.75 microns. 35 microns from the 35 spread factor.

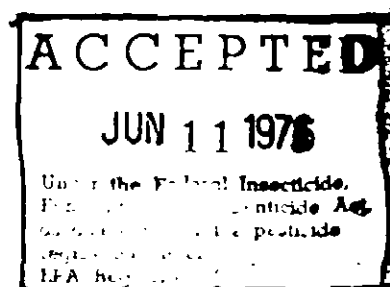

CYTHION

MALATHION 25%
CONCENTRATE