


10/1/75

Page 1 of 4

WYANDOTTE (TM)
MULTI-CHLOR
Highly-Soluble Chlorinating Sanitizer

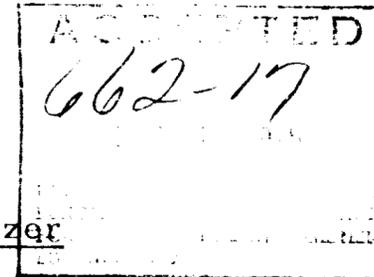

EPA Reg. No. 662-17

PURPOSE AND USE

Wyandotte Multi-Chlor is a rapid acting, highly-soluble, granular chlorinating sanitizer. Multi-Chlor is designed for sanitizing food and beverage equipment in dairies, dairy farms, food plants, breweries, restaurants and taverns.

FEATURES

1. Easily soluble
2. Clear solutions
3. Economical

BENEFITS

1. Adaptable for making stock solutions.
2. Does not form films on equipment.
3. Can be used at 100 ppm for most sanitizing operations.

EFFECTIVENESS

Wyandotte Multi-Chlor fulfills the criteria of Appendix F, the Grade "A" Pasteurized Milk Ordinance 1965 Recommendations of the United States Public Health Service when tested by the A.O.A.C. Germicidal and Detergent Sanitizer Test.

Do not rinse after sanitizing with Wyandotte Multi-Chlor solution unless required by local health regulations, then rinse with potable water.


USE DIRECTIONS

- I. Terminal Sanitizing Rinse for Glasses, Dishes and Utensils.
 1. Scrape and pre-flush articles to be washed.
 2. Wash with recommended Wyandotte brand products.
 3. Rinse with potable water.

4. Sanitize -- by immersion in Wyandotte Multi-Chlor solution using 1 oz. to each 6 gals. of water (100 ppm available chlorine). Immerse all utensils for at least two minutes or for contact time specified by governing sanitary regulations. Test periodically with chlorine test kit. When solution depreciates to 50 ppm available chlorine, discard.
5. Air dry on clean drain board.

II. Sanitizing Dairy, Beverage, Food Processing Equipment

1. Rinse equipment immediately after use.
2. Wash with recommended Wyandotte brand product.
3. Rinse with potable water.
4. Air dry -- protect from dust and dirt.
5. Sanitize immediately before reuse with Multi-Chlor solution; use 1 oz. per 6 gals. of water (100 ppm available chlorine).

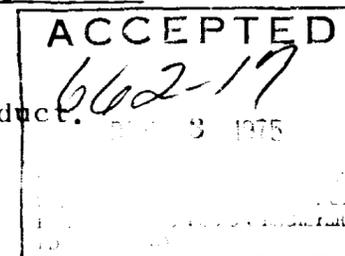

Test periodically with chlorine test kit. When solution depreciates to 50 ppm available chlorine, discard.

Do not rinse after sanitizing with Wyandotte Multi-Chlor solution unless required by local health regulations, then rinse with potable water.

METRIC EQUIVALENTS

1.25 grams/liter = 1 oz./6 gals. This provides 100 ppm available chlorine.

SPECIAL APPLICATIONS

1. Deodorizing Non-Food Contact Surfaces

Use 1 oz. Multi-Chlor in 1 gal. of water, 600 ppm available chlorine. Spray or rinse odor problem area

2. Stock solutions

Stock solutions may be required in automatic sanitizing units for milk and beverage bottles. Stock solutions can be made up to 10 oz. per gal. of water, 6000 ppm. Stock solutions may be held as long as 48 hours without excessive chlorine loss. Use cold or warm water (100°F.) to make Multi-Chlor stock solutions.

TEST PROCEDURE

Use Wyandotte Chlorine Test Kit.

PHYSICAL PROPERTIES

Multi-Chlor is a white, free-flowing, soluble powder.

CHEMICAL PROPERTIES

Active Ingredient

$\sqrt{\text{Monotrichloro}}\text{-tetra-(monopotassiumdichloro)}\text{-}$ $\text{-penta-(s)-triazinetrione}$	12.0%
Inert Ingredients	88.0%
	<hr/> 100.0%

Available chlorine, minimum 8%

HANDLING PRECAUTIONS

Storage:

- Store in cool dry place.
- Avoid steam pipes and moist areas.
- Do not store in hot areas or on hot surface.
- Keep cover tightly closed.

Use Areas:


- Replace cover after each use.
- Avoid exposure to moisture or hot surfaces.

Container Disposal:

The empty container should be thoroughly rinsed with water and discarded.

WARNING

- KEEP OUT OF REACH OF CHILDREN.
- MAY BE HARMFUL IF SWALLOWED.
- Undiluted product may cause skin irritation.
- Avoid contamination of food.
- Avoid contact with eyes.

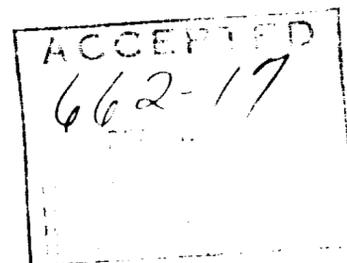

FI-64 Rev.


10/1/75


Page 4 of 4

First Aid:

In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. For eyes, call a physician immediately.

If swallowed, drink milk, egg white, starch paste, milk of magnesia, aluminum hydroxide gel, or magnesium trisilicate gel. Call a physician. Avoid sodium bicarbonate because of the release of carbon dioxide. Do not use acid first aid.

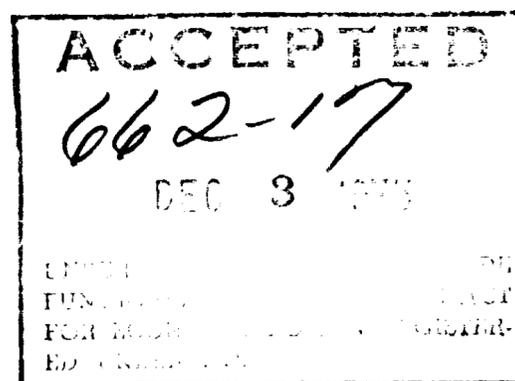

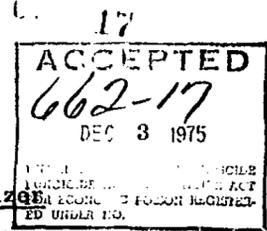

WYANDOTTE (TM)
MULTI-CHLOR

Highly-Soluble Chlorinating Sanitizer

EPA Reg. No. 662-17

PURPOSE AND USE

Wyandotte Multi-Chlor is a rapid acting, highly-soluble, granular chlorinating sanitizer. Multi-Chlor is designed for sanitizing food and beverage equipment in dairies, dairy farms, food plants, breweries, restaurants and taverns.

FEATURES

1. Easily soluble
2. Clear solutions
3. Economical

BENEFITS

1. Adaptable for making stock solutions.
2. Does not form films on equipment.
3. Can be used at 100 ppm for most sanitizing operations.

EFFECTIVENESS

Wyandotte Multi-Chlor fulfills the criteria of Appendix F, the Grade "A" Pasteurized Milk Ordinance 1965 Recommendations of the United States Public Health Service when tested by the A.O.A.C. Germicidal and Detergent Sanitizer Test.

Do not rinse after sanitizing with Wyandotte Multi-Chlor solution unless required by local health regulations, then rinse with potable water.


USE DIRECTIONS

- I. Terminal Sanitizing Rinse for Glasses, Dishes and Utensils.
 1. Scrape and pre-flush articles to be washed.
 2. Wash with recommended Wyandotte brand products.
 3. Rinse with potable water.

4. Sanitize -- by immersion in Wyandotte Multi-Chlor solution using 1 oz. to each 6 gals. of water (100 ppm available chlorine). Immerse all utensils for at least two minutes or for contact time specified by governing sanitary regulations. Test periodically with chlorine test kit. When solution depreciates to 50 ppm available chlorine, discard.
5. Air dry on clean drain board.

II. Sanitizing Dairy, Beverage, Food Processing Equipment

1. Rinse equipment immediately after use.
2. Wash with recommended Wyandotte brand product.
3. Rinse with potable water.
4. Air dry -- protect from dust and dirt.
5. Sanitize immediately before reuse with Multi-Chlor solution; use 1 oz. per 6 gals. of water (100 ppm available chlorine).

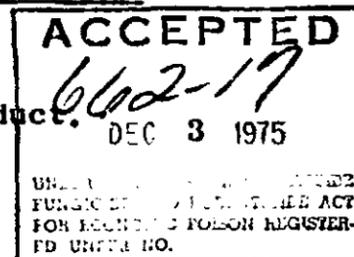

Test periodically with chlorine test kit. When solution depreciates to 50 ppm available chlorine, discard.

Do not rinse after sanitizing with Wyandotte Multi-Chlor solution unless required by local health regulations, then rinse with potable water.

METRIC EQUIVALENTS

1.25 grams/liter = 1 oz./6 gals. This provides 100 ppm available chlorine.

SPECIAL APPLICATIONS

1. Deodorizing Non-Food Contact Surfaces

Use 1 oz. Multi-Chlor in 1 gal. of water, 600 ppm available chlorine. Spray or rinse odor problem area.

2. Stock solutions

Stock solutions may be required in automatic sanitizing units for milk and beverage bottles. Stock solutions can be made up to 10 oz. per gal. of water, 6000 ppm. Stock solutions may be held as long as 48 hours without excessive chlorine loss. Use cold or warm water (100°F.) to make Multi-Chlor stock solutions.

TEST PROCEDURE

Use Wyandotte Chlorine Test Kit.

19

PHYSICAL PROPERTIES

Multi-Chlor is a white, free-flowing, soluble powder.

CHEMICAL PROPERTIES

Active Ingredient

$\sqrt{\text{Monotrichloro}}\text{-tetra-(monopotassiumdichloro)}_7$
 $\text{-penta-(s)-triazinetriene}$

Inert Ingredients	12.0%
	88.0%
	<u>100.0%</u>

Available chlorine, minimum	8%
---------------------------------------	----

HANDLING PRECAUTIONS

Storage:

Store in cool dry place.
 Avoid steam pipes and moist areas.
 Do not store in hot area or on hot surface.
 Keep cover tightly closed.

Use Areas:

Replace cover after each use.
 Avoid exposure to moisture or hot surfaces.

Container Disposal:

The empty container should be thoroughly rinsed with water and discarded.

WARNING

KEEP OUT OF REACH OF CHILDREN.
 MAY BE HARMFUL IF SWALLOWED.

Undiluted product may cause skin irritation.
 Avoid contamination of food.
 Avoid contact with eyes.

ACCEPTED
 662-17
 DEC 3 1975
UNDER THE PROVISIONS OF THE
 FUNGICIDE ACT
 FOR PERSONS REGISTERED
 AS DEALERS

127

FI-64 Rev.

10/1/75

Page 4 of 4

First Aid:

20

In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. For eyes, call a physician immediately.

If swallowed, drink milk, egg white, starch paste, milk of magnesia, aluminum hydroxide gel, or magnesium trisilicate gel. Call a physician. Avoid sodium bicarbonate because of the release of carbon dioxide. Do not use acid first aid.

