



ECHO

NEW

for use on:

**DAIRY, BEVERAGE and
FOOD PROCESSING EQUIPMENT;
TANKS, PAILS, STRAINERS,
MILKING MACHINE PARTS**

11-30-67
1214-35

• Meets the requirements of Appendix F of the Grade A Curried Milk Ordinance, 5 recommendations and 1953 recommendations of the U.S. Public Health Service when tested by the Chambers method.

Active Ingredients:	
Sodium dichloro- Triazine Triene*	7.0%
Inert Ingredients:	93.0%
*Providing 4.5% available chlorine	

U.S.D.A. Registration No. 1214-35

DIRECTIONS FOR USE

- Rinse equipment and utensils immediately after use with clean water. Wash with recommended ECHO product, rinse with clean water, and allow to dry. Protect equipment and utensils from dust and dirt.

To Sanitize Pre-Cleaned Equipment and Utensils:

Make a solution of 2 ounces ECHO Formula 19-P in 6 gallons of water (100 ppm) and apply solution to pre-cleaned surfaces by brushing and by circulating solution through all lines.

For Utensils and Small Parts:

Immerse in a solution of 2 ounces ECHO Formula 19-P in 6 gallons of water (100 ppm) for at least 2 minutes, drain and allow to dry. Do not rinse

after sanitizing with ECHO Formula 19-P unless required by local Health Authorities, then rinse with potable water.

For Spraying Pre-Cleaned Holding Tanks and Vats:

Use a solution of 2½ ounces ECHO Formula 19-P in 3 gallons of water (250 ppm) and allow to dry. Rinse with potable water before use.

For Deodorizing and Sanitizing Refrigerators, Walls, Floors, Cold Storage Rooms, Refuse Containers:

Use a solution of 4 ounces ECHO Formula 19-P in 3 gallons of water (400 ppm) and apply to the surface by brushing or spraying.

CAUTION

KEEP OUT OF REACH OF CHILDREN

Harmful if swallowed. Do not take internally. If swallowed, induce vomiting and call a physician. Do not mix with other chemicals. Avoid contamination of foodstuffs. Keep cover tightly closed when not in use. Avoid inhalation of Dust. Prolonged contact may cause irritation of skin, eyes, or nose.

NET CONTENTS

manufactured exclusively by

ECHO PRODUCTS

• P. O. BOX 1082 • ATLANTA, GA. 30301 •

DIRECTION

For Sanitizing Food and Beverage Equipment
Food Plants and Restaurants.

Rinse Equipment and Utensils immediately
Wash with recommended Echo product
equipment and utensils from dust and dirt.

To Sanitize Pre-Cleaned Equipment
For Brushing or Circulating Sanitizing
tanks - make a solution using $\frac{1}{2}$ oz.
water. (100 ppm). Circulate or brush
all surfaces are contacted by this solution.

For Immersing Utensils and Small Equipment
make a solution using $\frac{1}{2}$ oz. Formula 20 P
(100 ppm). Keep immersed for at least 10
to dry.


For Spraying Tanks, Vats and other
 $1\frac{1}{4}$ oz. Formula 20 P in 5 gallons of water
all surfaces making sure the surface is wet.

Do not rinse after sanitizing unless
authorities, then use potable water.

For Deodorizing and Sanitizing Refuse
Storage Rooms, Refuse Containers -
a solution of 2 oz. Formula 20 P in
allow to dry.

U.S.D.A.

Net Content

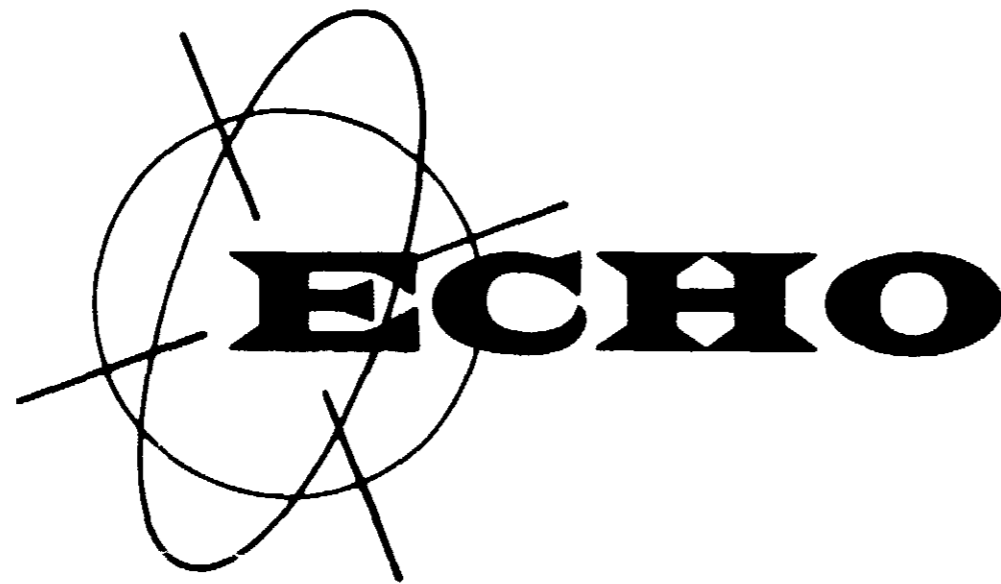

NEW

for use on:

**DAIRY, BEVERAGE and
FOOD PROCESSING EQUIPMENT;
TANKS, PAILS, STRAINERS,
MILKING MACHINE PARTS**

11-30-67
1214-35

• Meets the requirements of Appendix F of the Grade A Sterilized Milk Ordinance, 1955 recommendations and 1953 recommendations of the U.S. Public Health Service when tested by the Chambers method.

Active Ingredients:	
Sodium dichloro-s-Triazine Trione*	7.0%
Inert Ingredients:	93.0%
*Providing 4.5% available chlorine	

U.S.D.A. Registration No. 1214-35

FORMULA 19-P

SANITIZER • DEODORIZER

DIRECTIONS FOR USE

- Rinse equipment and utensils immediately after use with clean water. Wash with recommended ECHO product, rinse with clean water, and allow to dry. Protect equipment and utensils from dust and dirt.

To Sanitize Pre-Cleaned Equipment and Utensils:

Make a solution of 2 ounces ECHO Formula 19-P in 6 gallons of water (100 ppm) and apply solution to pre-cleaned surfaces by brushing and by circulating solution through all lines.

For Utensils and Small Parts:

Immerse in a solution of 2 ounces ECHO Formula 19-P in 6 gallons of water (100 ppm) for at least 2 minutes, drain and allow to dry. Do not rinse

after sanitizing with ECHO Formula 19-P unless required by local Health Authorities, then rinse with potable water.

For Spraying Pre-Cleaned Holding Tanks and Vats:

Use a solution of 2½ ounces ECHO Formula 19-P in 3 gallons of water (250 ppm) and allow to dry. Rinse with potable water before use.

For Deodorizing and Sanitizing Refrigerators, Walls, Floors, Cold Storage Rooms, Refuse Containers:

Use a solution of 4 ounces ECHO Formula 19-P in 3 gallons of water (400 ppm) and apply to the surface by brushing or spraying.

CAUTION

KEEP OUT OF REACH OF CHILDREN


Harmful if swallowed. Do not take internally. If swallowed, induce vomiting and call a physician. Do not mix with other chemicals. Avoid contamination of foodstuffs. Keep cover tightly closed when not in use. Avoid inhalation of Dust. Prolonged contact may cause irritation of skin, eyes, or nose.

NET CONTENTS

manufactured exclusively by

ECHO PRODUCTS

• P. O. BOX 1082 • ATLANTA, GA. 30301 •

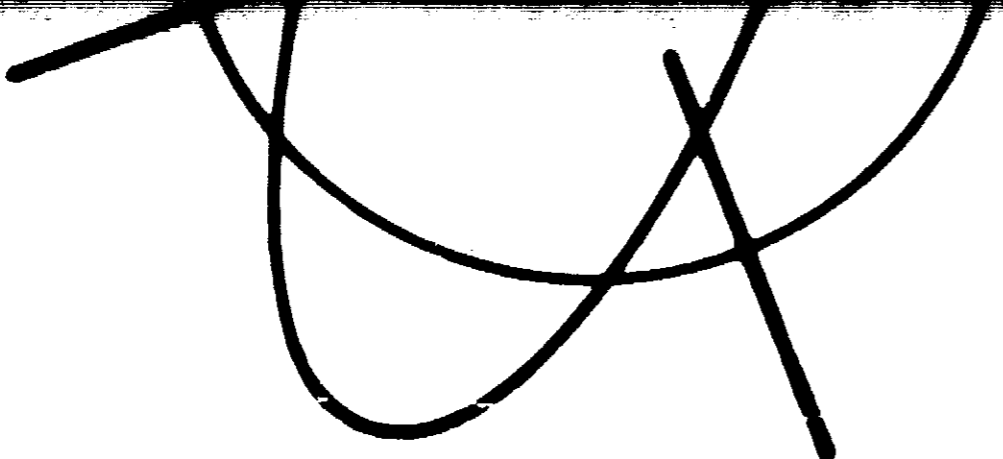

11-30-67
1214-35

UNDER THE FEDERAL INSECTICIDE
FUNGICIDE AND ROVANTICIDE ACT
ECHO FORMULA 19-P
ECHO FORMULA 19-P
ECHO FORMULA 19-P

● Meets the requirements of Appendix F of the Grade A Sterilized Milk Ordinance of 1955 recommendations and 1953 recommendations of the U.S. Public Health Service when tested by the Chambers method.

Active Ingredients:
Sodium dichloro-s-Triazine Trione* 7.0%
Inert Ingredients: 93.0%
*Providing 4.5% available chlorine

U.S.D.A. Registration No. 1214-35

DIRECTIONS FOR USE

● Rinse equipment and utensils immediately after use with clean water. Wash with recommended ECHO product, rinse with clean water, and allow to dry. Protect equipment and utensils from dust and dirt.

To Sanitize Pre-Cleaned Equipment and Utensils:

Make a solution of 2 ounces ECHO

after sanitizing with ECHO Formula 19-P unless required by local Health Authorities, then rinse with potable water.

For Spraying Pre-Cleaned Holding Tanks and Vats:

Use a solution of 2½ ounces ECHO Formula 19-P in 3 gallons of water (250 ppm) and allow to dry. Rinse

FORMULA SANITIZER • DE