

FLASH

Foaming Cleanser

For Use in Schools, Offices, Municipal Buildings and Industrial Plants

Now for Hospitals and Health Care Centers

ACTIVE INGREDIENTS

n-Alkyl (50% C14, 30% C16, 5% C12, 5% C18) dimethyl benzyl ammonium chlorides.....0.15%

n-Alkyl (68% C12, 32% C14) dimethyl ethylbenzyl ammonium chlorides.....0.15%

INERT INGREDIENTS*.....99.70%

TOTAL.....100.00%

*Inert ingredients include detergents, cleaners, builders and propellant.

EPA Reg. No. 1769-283

EPA Est. 4140-TX-1

KEEP OUT OF REACH OF CHILDREN

CAUTION

(See side panel for additional precautionary statement.)

Net Weight: 18 Oz./510 G.

- CLEANS
- DISINFECTS
- SANITIZES
- DEODORIZES

EFFECTIVE AGAINST

- Staphylococcus aureus
- Salmonella choleraesuis
- Pseudomonas aeruginosa

Quick, Dependable Cleaning for Water-Soluble Stains


Use FLASH, the non-rinsing cleanser, on all water-soluble stains. FLASH cleans, sanitizes and deodorizes.

Use FLASH to spot clean rugs, upholstery, drapes . . . to clean and disinfect soils and fingerprints from walls, woodwork, floors, cabinets, metal beds, carts, hampers, dressing carts and wheelchairs . . . excellent for cleaning and disinfecting sinks, basins, tubs, shower stalls, toilet seats, refuse cans, urinals and other environmental areas.

DIRECTIONS FOR USE

It is a violation of federal law to use this product in a manner inconsistent with its labeling.

This product is not to be used as a terminal sterilant/high level disinfectant on any surface or instrument that (1) is introduced into the human body, either into or in contact with the bloodstream or normally sterile areas of the body, or (2) contacts intact mucous membranes but which does not ordinarily penetrate the blood barrier or otherwise enter normally sterile areas of the body. This product may be used to pre-clean critical or semi-critical medical devices prior to sterilization or high level disinfection.

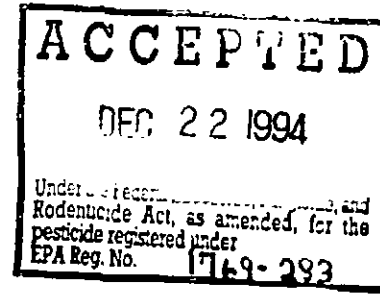

SHAKE WELL

CLEANING - To clean soiled surfaces, spray on and wipe off. Prior to disinfection of heavily soiled surfaces, a preliminary cleaning is required. Spray onto soiled surfaces, allow to penetrate, and wipe off. For cleaning carpets, spray over spotted or stained area, gently work in with soft brush and absorb with paper tissue or towel.

DISINFECTING - To disinfect hard, nonporous, inanimate surfaces, spray until thoroughly wet, allow to remain wet for 10 minutes and wipe off surface foam.

To sanitize non-food contact surfaces after cleaning, lightly spray on FLASH and wipe off surface foam.

Always test fabric for colorfastness in an inconspicuous spot before using the product.

NOTE: To prevent clogging due to any buildup of concentrate, wash the aerosol nozzle after each use.

STORAGE AND DISPOSAL

CONTAINER DISPOSAL

Replace the cap and securely wrap the original container in several layers of newspaper and discard in trash. Do not incinerate or puncture.

PRECAUTIONARY STATEMENTS

HAZARDS TO HUMANS AND DOMESTIC ANIMALS

CAUTION

Do not breathe spray mist. Avoid contact with skin, eyes or clothing. In case of contact, immediately flush eyes or skin with plenty of water. Get medical attention if irritation persists.

STATEMENT OF PRACTICAL TREATMENT

IF INHALED: Remove the victim to fresh air. Apply artificial respiration if indicated.

IF ON SKIN: Remove contaminated clothing and wash affected areas with soap and water.

IF IN EYES: Flush eyes with plenty of water. Call a physician immediately.

PHYSICAL AND CHEMICAL HAZARDS

Contents under pressure. Do not use or store near heat or open flame. Do not puncture or incinerate container. Exposure to temperatures above 130°F/54°C may cause bursting.

For medical or environmental emergencies, call 214-438-1381.

Not for Resale

MADE IN THE U.S.A.

5020A0LA

9M41C