

CONTENTS

1 QUART

GENACIDE

Sanitizer and Disinfectant

10%

A POWERFUL GERMICIDE

ACTIVE INGREDIENTS:

Methyl dodecyl benzyl trimethyl ammonium chloride	8.0%
Methyl dodecyl xylylene bis trimethyl ammonium chloride	2.0%

INERT INGREDIENTS:


Water and Octyl phenoxy polyethoxy ethanol	90.0%
--	-------

Do not mix with Soap or Synthetic Detergents

— CAUTION —

KEEP OUT OF REACH OF CHILDREN. Avoid contamination of food. Harmful if swallowed. Avoid contact with skin and eyes. In case of contact, flush with plenty of water. If irritation persists, get medical attention.

U.S.D.A. Reg. No. 1811-4

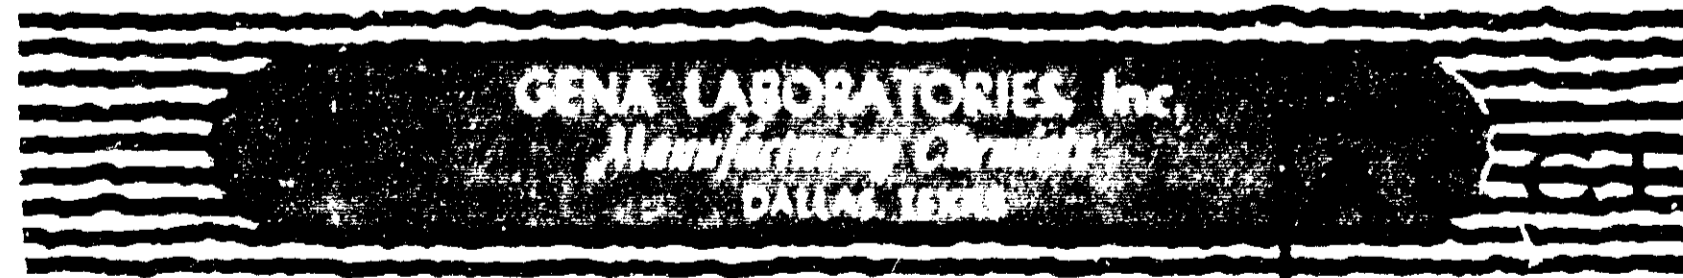

SANITIZATION OF DAIRY EQUIPMENT

Clean and Rinse thoroughly. Then immerse in a solution of GENACIDE containing two Tablespoons per four gallons of water. Milk cans and other equipment should be air dried. Prior to reuse, all treated food contact surfaces must be thoroughly rinsed with a potable water.

GENERAL DISINFECTION FOR HOSPITALS, PUBLIC ROOMS, AND AT HOME

General disinfection of inanimate objects—hospital wards, sickrooms, operating rooms, refrigerators, lavatories, urinals, hoppers, floors, walls, etc.: After cleaning thoroughly, add two Tablespoons of GENACIDE to each gallon water and apply freely over surfaces to be disinfected.

DISINFECTION FOR VETERINARY USE (Germicide and Decolorizer)

Before and after examining or treating animals, sanitize hands and disinfect previously cleaned instruments and other equipment in a solution containing two Tablespoons of GENACIDE to one gallon of water. To disinfect kennels and other animal quarters, clean thoroughly and then mop, spray or dip inanimate objects with a solution containing two Tablespoons of GENACIDE in two gallons of water.

DISINFECTION OF BARBER SHOP AND BEAUTY PARLOR EQUIPMENT
Clean thoroughly then soak combs, brushes, razors, etc., for ten minutes in a solution of two Tablespoons of GENACIDE per gallon of water.

DISINFECTION OF RUBBER GOODS
Clean thoroughly then soak in a solution containing two Tablespoons of GENACIDE per two gallons of water.

DISINFECTION OF SURGICAL INSTRUMENTS (Cold Method)

Clean thoroughly rinse and immerse in a solution of two Tablespoons of GENACIDE per gallon of water for ten minutes. One Tablespoon of Sodium Nitrite should be added to each gallon of the solution as a corrosion inhibitor.

REPTED

1-15-69

1811-4