

Directions

Osmose Special K-33 Preservative should be liberally brushed into all cut or machined areas and allowed to soak into the wood.

Osmose Special K-33 Preservative, when used as a supplement to pressure preserved wood will provide positive protection against attack by decay and termites. It is not, however, intended as replacement for pressure treatment.

Osmose Special K-33 Preservative meets the American Wood-Preservers' Association Standard M4.1 for use on cuts, holes, or other exposed surfaces resulting from fabrication or framing after treatment.

Manufactured By
Osmose Wood Preserving Co.
of America, Inc.
980 Ellicott Street
Buffalo, New York 14209



SPECIAL K-33 PRESERVATIVE

For treatment of areas on Pressure Treated Wood that have been exposed through fabrication or damage.



WARNING POISONOUS IF SWALLOWED

May cause rash or external ulcers.

Read warning statement on side panel.

Active Ingredients:

Arsenic Pentoxide	9.0% 4.08
Copper Oxide	3.7% 1.74
Chromic Acid	7.0% 3.18


Inert Ingredients:

Water	80.3% 91.00
	100.0%

Total Arsenic as Metallic	5.8% 2.63
Water-Soluble Arsenic as Metallic	5.8% 2.63

Net Contents: One Gallon

DANGER KEEP OUT OF REACH OF CHILDREN

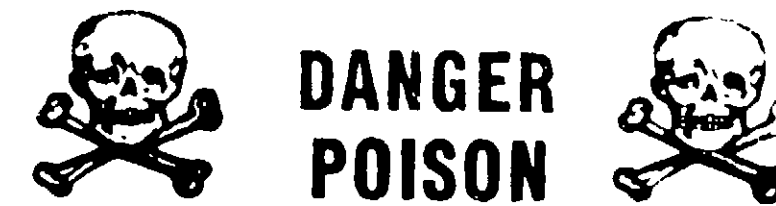

WARNING

POISONOUS IF SWALLOWED

May cause rash or external ulcers. Wear goggles or face shield and rubber gloves when handling. Avoid contact with skin, eyes or clothing. In case of contact, flush skin or eyes with plenty of water. For eyes get medical attention. Wash thoroughly after using. Wash clothing before re-use. Do not breathe spray mist.

All waste pesticide should be removed from this container and empty container decontaminated thoroughly before disposal in any other manner.

ANTIDOTE

Give two tablespoons of milk of magnesia or aluminum hydroxide gel suspended in water (the whites of two or three eggs may be used). Follow with an emetic (a tablespoon of mustard or table salt in a glass of warm water). Then give olive oil or mucilaginous drink. Never give anything by mouth to an unconscious person. **CALL A PHYSICIAN IMMEDIATELY.**

DIRECTIONS FOR DISPOSAL

After emptying this container, rinse thoroughly with water and bury waste pesticide and rinse water. Puncture and bury cleaned container.

DO NOT REUSE CONTAINER

Do Not Contaminate Streams or Ponds.

U.S.D.A. Reg. No. 3008-21

ACCEPTED