WASHINGTON, DC 20460

NOTICE OF PESTICIDE:

REGISTRATION REREGISTRATION

(Under the Federal Insecticide, Fungicide, and Rodenticide Act, as amended)

pacine, PI 53403

NAME OF PESTICIDE PRODUCT

Mirex II (Peady to Use

NAME AND ADDRESS OF REGISTRANT (Include ZIP code)

_

S.C. Johnson & Bob, Inc. 1525 Home Street

L

┙

NOTE: Changes in labeling formula differing in substance from that accepted in connection with this registration must be submitted to and accepted by the Registration Division prior to use of the label in commerce. In any correspondence on this product always refer to the above U.S. EPA registration number.

On the basis of information furnished by the registrant, the above named pesticide is hereby Registered/Reregistered under the Federal Insecticide, Fungicide, and Rodenticide Act.

A copy of the labeling accepted in connection with this Registration/Reregistration is returned herewith.

Registration is in no way to be construed as an indorsement or approval of this product by this Agency. In order to protect health and the environment, the Administrator, on his motion, may at any time suspend or cancel the registration of a pesticide in accordance with the Act. The acceptance of any name in connection with the registration of a product under this Act is not to be construed as giving the registrant a right to exclusive use of the name or to its use if it has been covered by others.

The solution of its could be considered as constant and constant

- The invertebrate off cath enumers of a strategian action and approximation of a component of the SERE section 3(a)(t) on t(t) and the Augustian in the strategian t and t are strategian t and t and t are strategian t and t ar
- is task the labeline bankes linter table of gas who reterrs the gold for the solution
 - The state of the second of the property of the second of t
 - . Or the reference sheet, revise "ischeriche colo (1)" to read

Pecherich; oli Miner (co

- referred interpolator is a substitute of the object of the object.
- ing the property of Material against the property of the second of the contract of the contrac

The Control of the Co

ATTACHMENT IS APPLICABLE

BEST AVAILABLE COPY

SIGNATURE OF APPROVING OFFICIAL

DATE

EPA Form 8570-6 (Rev. 5-76)

PREVIOUS EDITION MAY BE USED UNTIL SUPPLY IS EXHAUSTED.

61592:I:CR-31:V.G.:L31-3:KENCO:11/24/90:12/23/90:DD:JH:DD

3. If these conditions are not complied with, the registration will be subject to cancellation in accordance with FIFRA section 6(e). Your release for shipment of the product constitutes acceptance of these conditions.

A stamped copy of the label is enclosed for your records.

John H. Lee Froduct Manager (31) Antimicrobial Program Branch Registration Division (H7505C)

Enclosure

S.C. JOHNSON WAX COMMERCIAL MARKETS

DEC 07 1990

WID FOR THE TOTAL TOTAL

VIREX II/Ready To Use One Step Germicidal Cleaner and Deodorant

4822-358

Pseudomonacidal Staphylocidal Salmonellacidal Fungicidal *Virucidal

ACTIVE INGREDIENTS:	
Didecyl dimethyl ammonium chloride	034%
n-Alkyl [C14 50%, C12 40%, C16 10%] dimethyl	
benzyl ammonium chloride0.	032%
INERT INGREDIENTS99.	934%

KEEP OUT OF REACH OF CHILDREN

CAUTION

See back label for additional precautionary statements.

Virex II/Ready To Use is a germicidal cleaner and deodorant that requires no dilution before use (ready-to-use). Virex II/Ready To Use is labor saving providing broad spectrum disinfection, mold and mildew control, and odor elimination with mild cleaning.

Virex II/Ready To Use is recommended for use in hospitals, nursing homes, schools and colleges, veterinary clinics, animal life science laboratories, and hotels on non-food contact surfaces.

Virex II/Ready To Use is specially formulated to be non-dulling to floor finishes. Virex II/Ready To Use eliminates the time and labor normally required for rinsing.

Virex II/Ready To Use is bactericidal against Pseudomonas aeruginosa ATCC# 15442, Staphylococcus aureus ATCC# 6538, and Salmonella choleraesuis ATCC# 10708 according to the AOAC Use Dilution Test Method. (See reference sheet for complete list of pathogenic organisms).

Virex II/Ready To Use is fungicidal against Tricophyton mentagrophytes ATCC #9533, Candida albicans ATCC# 10231 and Aspergillus niger ATCC# 6275 according to the AOAC Use Dilution Test.

Virex II/Ready To Use is virucidal against *HIV-1 (AIDS virus), Influenza A₂/J305 ATCC# VR-100, Herpes Simplex Type I ATCC# VR-735, Herpes Simplem Type 2 ATCC# VR-734, and Adenovirus Type 2 ATCC# VR-2 according to the virucidal qualification test.

DIRECTIONS FOR USE:

DEC 07 1990

It is a violation of Federal Law to use this product in a manner inconsistent with its labeling.

GENERAL USE DIRECTIONS FOR DISINFECTING:

For use on hard inanimate non-porous surfaces such as floors, walls, metal surfaces, porcelain, and plastic surfaces. Remove gross filth and heavy soil deposits the thoroughly wet surfaces as required. Use full strength (no dilution) for a minimum of ten (10) minute contact time in a single application. Can be applied with a mop, sponge, or cloth as well as spraying or soaking. Rinsing is not necessary unless floors are to be waxed or polished. Previous a fresh solution daily or when use solution becomes visibly dirty.

*See accompanying literature regarding HIV-1 (AIDS virus).

Precautionary Statements
Hazards to Humans and Domestic Animals
Causes eye irritation. Avoid contact with skin, eyes, and clothing.
Harmful if swallowed. Wash thoroughly with soap and water after handling.

Statement of Practical Treatment

In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. Get medical attention if irritation persists.

.. DEC 07 1990

STORAGE AND DISPOSAL

PROHIBITIONS 4879-328

Do not contaminate water, food or feed by storage or disposal. Open dumping is prohibited. Do not reuse empty container.

PESTICIDE DISPOSAL

Pesticide wastes are acutely hazardous. Improper disposal of excess pesticide, spray mixture, or rinsate is a violation of Federal Law. If these wastes can not be disposed of by use according to label instructions, contact your State Pesticide or Environmental Control Agency, or the Hamardous Waste representative at the nearest EPA Regional Office for guidance.

CONTAINER DISPOSAL

PLASTIC CONTAINERS

To le rinse or equivalent. Then offer for recycling or reconditioning, or puncture and dispose of in a sanitary landfill, or by incineration or, if allowed by state and local authorities, by burning. If burned, stay out of smoke.

FIBER DRUMS WITH LINERS

Completely empty liner by shaking and tapping sides and bottom to losen clinging particles. Empty residue into application e ipment. Then dispose of liner in a sanitary landfill or by incineration, if allowed by state and local authorities. If drum is contaminated and can not be reused, dispose of in the same manner.

METAL CONTAINERS

Triple rinse or equivalent. Then offer for recycling or reconditioning, or puncture and dispose of in a sanitary landfill or by other procedures approved by state and local authorities.

GF"TRAL

GFTRAL
Consult federal, state, or local disposal authorities for approval productions of the consult federal approval consults for a of alternative procedures such as limited open burning.

EPA Registration No. 4822-

EPA Est. No. 4822-WI-1

Net Contents 1, 5, or 55 gallons

1989 S. C. Johnson & Son, Inc. Racine, WI 53403-5011, U.S.A. All Rights Reserved

ACCEPTED

With COTTO

TO THE

REFERENCE SHEET

DEC 07 1990

VIREX II/Ready To Use ONE STEP GERMICIDAL CLEANER AND DEODORANT

4822-358

VIREX II/Ready To Use is a germicidal cleaner and deodorant that requires no dilution before use (ready to use). Virex II/Ready To Use is labor saving providing broad spectrum disinfection, mold and mildew control, and odor elimination with mild cleaning.

Effective against the following pathogenic bacteria according to the AOAC Use Dilution Test, current edition, modified in the presence of 400 ppm synthetic hard water (calculated as CaCO3) plus 5% organic serum:

Staphylococcus aureus ATCC# 6538
Salmonell* choleraesuis ATCC# 10708
Pseudomonas aeruginosa ATCC# 15442
Klebsiella pneumoniae ATCC# 4352
Streptococcus faecalis PI #523(1)
(clinical isolate)
Salmonella pullorum PI #3751(1)
Proteus mirabilis PI #366(1)
Escherichia coli (4)
(clinical isolate)
Listeria monocytogenes 20A OHIO(4)
(clinical isolate)


Proteus vulgaris ATCC# 13315
Salmonella typhi ATCC# 6539
Serratia marcescens ATCC# 14756
Streptococcus pyogenes ATCC# 9342
Staphylococcus aureus SCJ #225(2)
(clinical isolate)
Streptococcus agalactiae PI #517(1)
Salmonella enteritidis ATCC# 13076
Salmonella enteritidis E40 (4)
(clinical isolate)
Staphylococcus aureus SCJ #226(3)
(methicillin resistant)

Fungicidal testing against Trichophyton metagrophytes ATCC# 9533, Candida albicans ATCC# 10231, and Aspergillus niger ATCC# 6275 according to the AOAC Use Dilution test, current edition, modified in the presence of 400 ppm hard water (calculated as CaCO3) plus 5% organic serum.

Virucidal against *HIV-1 (AIDS virus), Adenovirus type 2 ATCC# VR-2, Herpes Simplex type I ATCC# VR-735, Herpes Simplex 2 ATCC# VR-734, and Influenza A2/J305 ATCC# VR-100 according to the Virucidal Qualification test, modified in the presence of 400 ppm hard water (calculated as CaCO3) plus 5% organic serum.

- * See accompanying literature regarding HIV-1 (AIDS virus)
- (1) Presque Isle Associates
- (2) St. Mary's Hospital, Racine, Wisconsin
- (3) Parl. West Hospital, Knoxville, Tennessee
- (4) Food Research Institute, Madison, Wisconsin

Note: Organisms followed by a number in parenthesis represent clinical isolates.

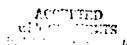

DEC 0: 1990

VIREX II/Ready To Use

* Kills HIV-1 (AIDS virus) on precleaned environmental surfaces/
objects previously soiled with blood/body fluids in health care 4833-358
settings or other settings in which there is an expected
likelihood of soiling of inanimate surfaces/objects with blood or
body fluids, and in which the surfaces/objects likely to be soiled
with blood or body fluids can be associated with the potential for
transmission of human immunodeficiency virus type 1 (HIV-1)
(associated with AIDS).

Special instructions for cleaning and decontamination against HIV-1 (AIDS virus) of surfaces/objects soiled with blood/body fluids.

PERSONAL PROTECTION: Disposable latex or vinyl gloves, gowns, face masks, or eye coverings as appropriate, must be worn during al cleaning of body fluids, blood, and decontamination procedures.

CLEANING PROCEDURES: Blood and body fluids must be thoroughly cleaned from surfaces and objects before application of disinfectant.

CONTACT TIME: HIV-1 (AIDS virus) is inactivated after one (1) minute contact time. Use a ten (10) minute contact time for d infection against all other bacteria, fungi, and viruses listed on labeling.

DISPOSAL OF INFECTIOUS MATERIALS: Blood and other body fluids should be autoclaved and disposed of according to federal, state, and local regulations for infectious waste disposal.

J. S. S. Carlotte Company