




POISON

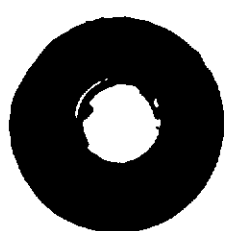

ARCO CHEMICAL CORP.

4071 N. 119th STREET

MILWAUKEE, WIS. 53225



POISON



ARCO CHEMICAL CORP.

4071 N. 119th STREET

MILWAUKEE, WIS. 53225



TO CONNECT TO DISCHARGE LINE, UNSCREW VALVE OUTLET CAP AND ATTACH YOKE CLAMP AND ADAPTER (OR SPECIAL UNION) — NEVER USE PIPE FITTINGS HAVING STANDARD TAPERED THREAD — USE THE NEW LEAD GASKETS SUPPLIED WITH CONTAINER EACH TIME CONNECTION IS MADE.

OPEN VALVE BY TURNING TO LEFT (COUNTER-CLOCKWISE) — ONE COMPLETE TURN OPENS VALVE WIDE. NEVER EXCEED 1 1/4 TURNS. PACKING NUT MAY BE SLIGHTLY LOOSENED, IF NECESSARY, TO RELIEVE TIGHT VALVE, BUT RETIGHTEN PROMPTLY TO AVOID LEAK.

CLOSE VALVE PROMPTLY WHEN CONTAINER IS EMPTY TO PREVENT WATER AND OTHER FOREIGN SUBSTANCES ENTERING CONTAINER.

ALWAYS REPLACE VALVE OUTLET CAP AND VALVE PROTECTION COVER.

ACCEPTED

3-14-74

8866-8

IN THIS CONTAINER IS UNDER PRESSURE WHICH INCREASES WHEN WARMED. VAPOR HAZARDOUS. DO NOT INHALE. DO NOT GET IN EYES OR ON SKIN.

THIS NEEDLE VALVE IS STANDARD FOR CHLORINE. ALL THREADS ARE RIGHT HAND. TURN CLOCKWISE TO TIGHTEN. USE ONE OF THE SPECIAL WRENCHES SHOWN ON OTHER SIDE OF THIS TAG.


DO NOT TAMPER WITH FUSIBLE SAFETY PLUG
FUSIBLE METAL MELTS AT 158° F.

ACTIVE INGREDIENT
CHLORINE 99.9%
INERT INGREDIENTS 0.9%
100.0%

LIQUID CHLORINE

INSTRUCTIONS FOR USE—READ CAREFULLY


WHERE IS YOUR CHLORINE GAS MASK?

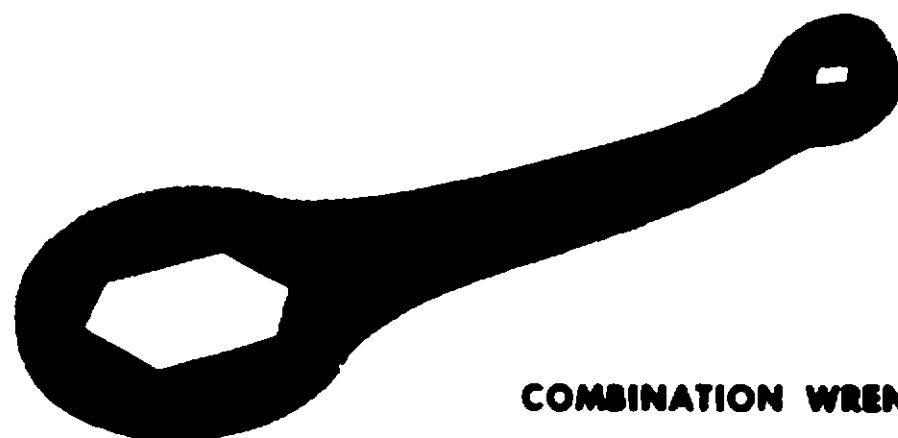


COMBINATION WRENCH

3/8" OPENING FOR VALVE
STEM AND YOKE SCREW

1 1/4" OPEN END FOR PACKING NUT AND OUTLET CAP

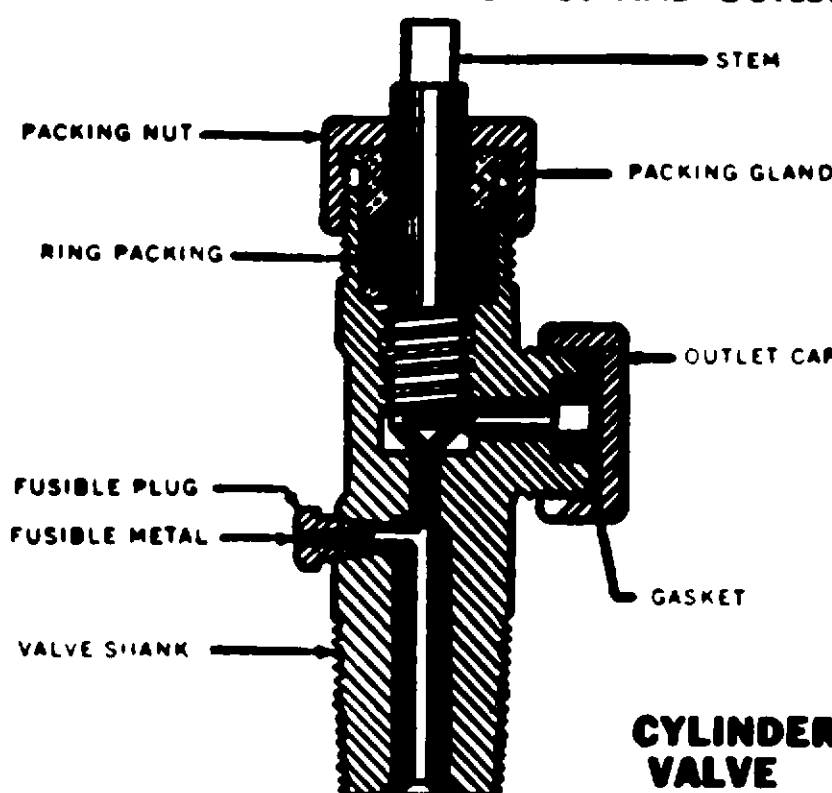

CYLINDER VALVE

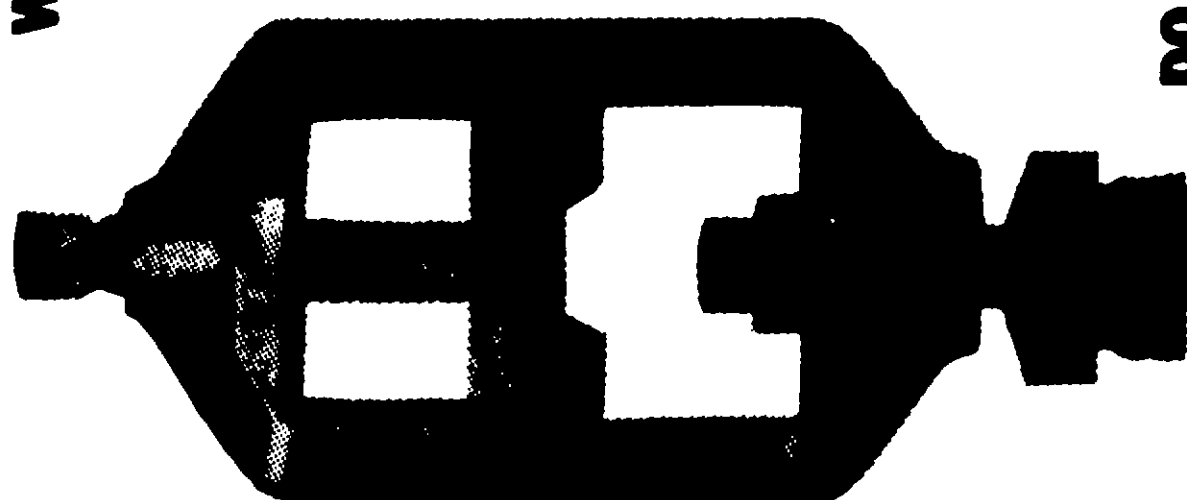

YOKE & ADAPTER

DO NOT USE WRENCH LONGER THAN 4-INCH

DANGER! HAZARDOUS LIQUID GAS UNDER PRESSURE
KEEP OUT OF REACH OF CHILDREN
HANDLE AND USE ONLY IN ACCORDANCE
WITH INSTRUCTIONS ON THIS CARD.

Do not breathe air containing this gas.
Do not get in eyes or on skin.
Do not heat cylinders.
Gas mask must have the approval of U.S. Bureau of Mines for chlorine service.
In case of inhalation, remove patients to fresh air, keep him warm and quiet, administer oxygen and call for a physician.

EYE CONTACT:
*FLUSH EYES immediately with copious amounts of running water for 15 minutes.
*Forcibly hold eyelid apart to ensure complete irrigation of all eye and lid tissues.
*Call a Physician.
SKIN CONTACT:
*Emergency shower removing clothes in shower.
*Wash well with copious amounts of soap and water.
*Call a Physician.

NET WEIGHT

EPA Reg. No. 8866-8

EPA Est. 8866-WI-1

DANGER! HAZARDOUS LIQUID GAS UNDER PRESSURE
KEEP OUT OF REACH OF CHILDREN
HANDLE AND USE ONLY IN ACCORDANCE
WITH INSTRUCTIONS ON THIS CARD.

Do not breathe air containing this gas.
Do not get in eyes or on skin.
Do not heat cylinders.
Gas mask must have the approval of U.S. Bureau of Mines for chlorine service.
In case of inhalation, remove patients to fresh air, keep him warm and quiet, administer oxygen and call for a physician.

EYE CONTACT:
*FLUSH EYES immediately with copious amounts of running water for 15 minutes.
*Forcibly hold eyelid apart to ensure complete irrigation of all eye and lid tissues.
*Call a Physician.
SKIN CONTACT:
*Emergency shower removing clothes in shower.
*Wash well with copious amounts of soap and water.
*Call a Physician.

NET WEIGHT

EPA Reg. No. 8866-8

EPA Est. 8866-WI-1