

FRONT PANEL

BACK PANEL



Sanitizer / Bacteristatic  
**WIG CLEANER**

USDA REG. NO. 10701-1

**ACTIVE INGREDIENTS**

n-Alkyl (50% C14, 40% C12, 10% C16) Dimethyl Benzyl Ammonium Saccharinate	0.950%
n-Alkyl (60% C14, 30% C16, 5% C12, 5% C18) Dimethyl Benzyl Ammonium Chloride	1.500%
n-Alkyl (50% C12, 30% C14, 17% C16, 3% C18) Dimethyl Ethylbenzyl Ammonium Chloride	1.500%
	3.950%
<b>INERT INGREDIENTS</b>	96.050%

Includes Conditioners & Detergent

**WARNING:**

Keep out of the reach of children.  
See other precautions on back panel.

**HIBNER PRODUCTS MFG., INC.**  
16 FL. OZ. (1 PT.)

16—  
15—  
14—  
13—  
12—  
11—  
10—  
9—  
8—  
7—  
6—  
5—  
4—  
3—  
2—  
1—

WE DO NOT RECOMMEND  
RINSING AFTER CLEANING

**DIRECTIONS:**

Brush all snarls and teasing from wig before cleaning. Add 1 oz. of wig cleaner to 31 oz. of warm water. Use deep container or bowl large enough to hold wig. Saturate wig with cleaner working liquid along all wig strands for 10 minutes with finger tips until wig is clean. Do not rinse. Pin wig on block and comb out excess cleaner. Set wig on rollers while wig is still wet. On your modacrylic or fibre wig, after cleaning, place on wig block and allow to dry in air or with aid of hair dryer set on low heat. Leaves wig soft, lustrous, and easy to style.

CONTENTS: ONE PINT MAKES 4 GALLONS

**Sanitizer / Bacteristatic**

**BENEFITS**

1. Sanitizes itself (cleaning solution) as well as wig.
2. Imparts bacteria static film on the wig.
3. Minimizes the hazard of hand infections of operators or technicians from the solution by its sanitizing action.
4. Conditions the wig.
5. Deodorizes the wig.
6. Reduces static build-up while setting the wig.

**WARNING:**

Corrosive. May cause skin and eye damage. Do not get in eyes or on skin. Protect eyes and skin when handling the concentrate. In case of contact, flush with plenty of water. For eyes, get medical attention. Avoid contamination of food.

FIRST AID: If swallowed, drink promptly a large quantity of milk, egg whites, gelatin solution, or if these are not available, drink large quantities of water. Avoid alcohol. Call a physician immediately.

**HIBNER PRODUCTS MFG., INC.**  
CLEVELAND, OHIO 44113

**Cold Disinfection** — For disinfection of previously cleaned surgical instruments, barber tools and dental equipment, simply submerge instruments into solution containing 1½ ounce Trophy No-Bac per gallon of water for 10 minutes.

**FOR ROOM FOGGING**


**DIRECTIONS:** To minimize the danger of cross-contamination from environmental surfaces apply solution of Trophy No-Bac as a fog as described below, before applying standard routine terminal cleaning and disinfecting practices. **1.** Remove all human, animal, and plant life from room. **2.** Open closet doors and drawers. **3.** Set up 34" revolving platform in center of room. **4.** Mount Jet FOG-MASTER TRI-JET MODEL 6208 or other fogging device delivering equivalent spray at 3 RPM. **5.** Fill sprayer reservoir with 1.5 oz. of Trophy No-Bac to 1 gallon of water to produce 1150 ppm active ingredients. **6.** Set sprayer mechanism to deliver 1 gallon of solution. **7.** Fog for 15 minutes for an average 2100 cu. ft. room. For different room sizes, vary spray time proportionately to ensure complete wetting of exposed surfaces. **8.** Wait 2 hours before entering room after treatment. **9.** Rinse fogging equipment thoroughly with clear water following use.

**DANGER** — Keep Out of Reach of Children. Corrosive. Causes severe eye and skin damage. Do not get in eyes, on skin or on clothing. Protect eyes and skin when handling concentrate. Harmful if swallowed. Avoid contamination of food.

**FIRST AID** — In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. For eyes, call a physician. Remove and wash all contaminated clothing before reuse. If swallowed, drink milk, egg whites, gelatin solution, or if these are not available, drink large quantities of water. Call a physician.

**NOTE TO PHYSICIAN:** Probable mucosal damage may contraindicate the use of gastric lavage. Measures against circulatory shock, respiratory depression and convulsion may be needed. Rinse empty container thoroughly with water and discard.

EPA Est. No. 10710-WI-1 EPA Reg. No. 10710-3

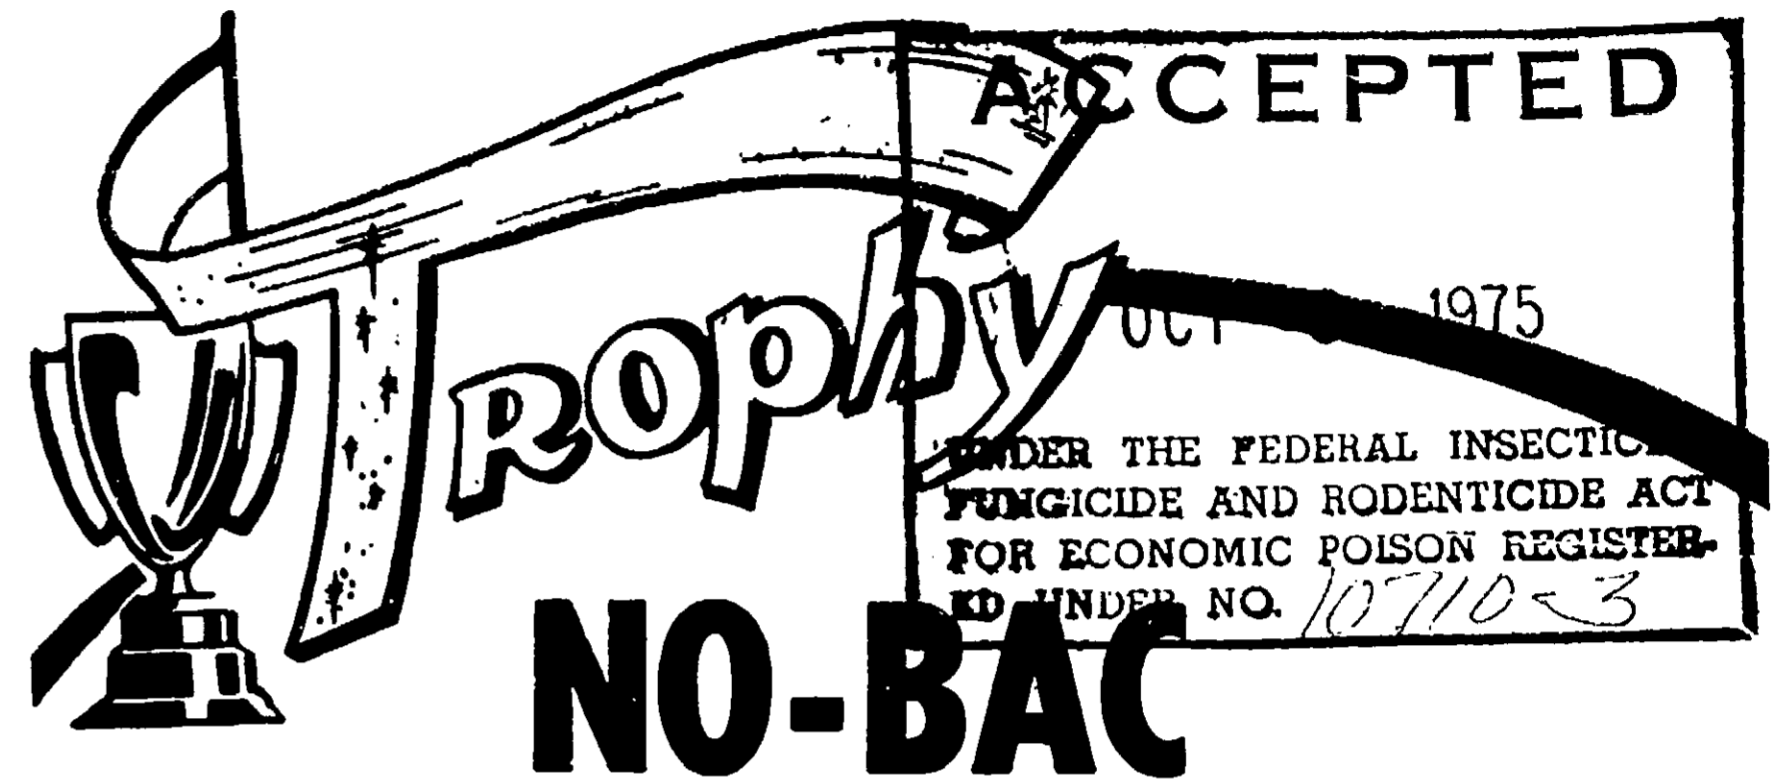

**DISINFECTANT • DEODORIZER • SANITIZER**

**ACTIVE INGREDIENTS:**

n-Alkyl (60% C <sub>14</sub> , 30% C <sub>16</sub> , 5% C <sub>12</sub> , 5% C <sub>18</sub> )	
dimethyl benzyl ammonium chlorides	5%
n-Alkyl (68% C <sub>12</sub> , 32% C <sub>14</sub> ) dimethyl	
ethylbenzyl ammonium chlorides	5%

<b>INERT INGREDIENTS:</b>	90%
	<u>100%</u>

Trophy No-Bac is a concentrate and should be diluted before using.

**DANGER: KEEP OUT OF REACH OF CHILDREN.**

(See other precautionary and first aid statements on left side panel.)

**PURDY PRODUCTS INC.**  
MILWAUKEE, WISCONSIN 53208

**WARRANTY**

Our recommendations for use of this product are based upon tests believed to be reliable. The use of this product being beyond the control expressed or implied, is made as to the effects of such or the results to be obtained if not used in accordance with directions or estimates. We assume all responsibility, including injury or damage, resulting from its misuse as such, or in combination with other materials. Our products are not to be construed as recommending the infringement of any patent, and no liability for infringement arising out of any

U  
H  
ir  
G  
st  
1  
3  
co  
H  
ir  
T  
p  
th  
a  
a  
F  
c  
o  
p  
R  
D  
P  
O  
T  
N  
O  
R  
c  
t  
o  
a  
T  
f  
l  
v