


IODINE (Technical Grade) A Drinking Water Disinfectant for use only in an Iodinator

Active Ingredient: Iodine—99.5%
Inert Ingredient: —00.5%



POISON

NET WEIGHT

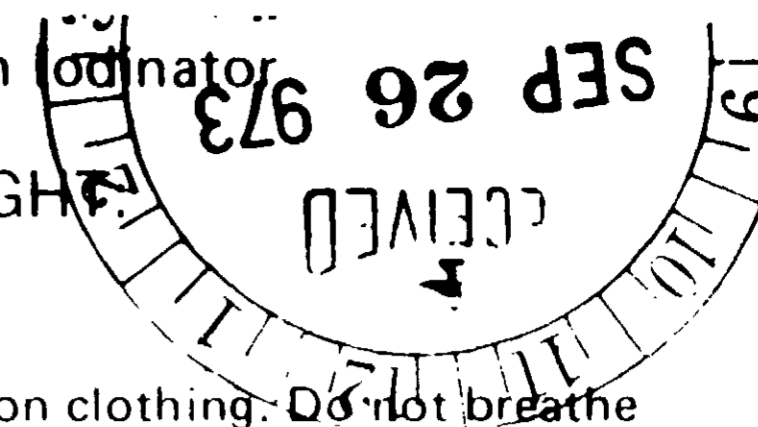

DANGER KEEP OUT OF REACH OF CHILDREN

CORROSIVE: May be fatal if swallowed. May be intensely irritating. Do not get in eyes, on skin or on clothing. Do not breathe vapor.

ANTIDOTE, INTERNAL: Drink freely a thin paste of starch or flour (2 tablespoonfuls with water) or Sodium Thiosulfate (2 grams—approximately 1/2 teaspoonful in water) followed by Emetic of Mustard in water (preferably warm) or other Emetic. **CALL A PHYSICIAN IMMEDIATELY.**

FOR SKIN IRRITATION: Flush freely with water or wash gently with soap and water or with a solution of Sodium Thiosulfate, 2 teaspoonfuls or more in a pint of water.

FOR EYES: Flush thoroughly with water. **CALL A PHYSICIAN IMMEDIATELY.**

Keep Container tightly closed. Store in a cool place. Do not reuse empty container. Destroy by burying with waste or burning. Stay away from smoke or fumes.

DIRECTIONS FOR USE: To pre-treat and disinfect well water in a storage tank for drinking purposes: Make a concentrated aqueous solution of titratable Iodine (Approximately 300 parts per million [ppm] at 65°-70° F.) by passing approximately 1 gallon of water slowly through a bed of Iodine for at least 20 minutes in an Iodinator. The water to be treated may be used to make this solution. Add this concentrated solution of titratable Iodine to the water to be disinfected in an amount sufficient to provide a residual of 0.5 ppm to 1.0 ppm titratable Iodine at all times. Consult the Regulatory Agency in your jurisdiction for additional requirements. Thirty minutes or more after the concentrated Iodine solution has been added, use the ppm test kit provided to determine the residual of titratable Iodine in the treated water. Test the water at least once a week for Iodine residual. Refer to accompanying information sheet for use of Iodinamics Iodinator.

EPA REGISTRATION NO. 21166-1

DISTRIBUTED by: IODINAMICS Corp. Box 295, Willow Street, Pa. 17584 USA

