



OFFICE OF CHEMICAL SAFETY AND POLLUTION PREVENTION

WASHINGTON, D.C. 20460

October 10, 2025

Jean Killoren
Killoren Regulatory Consulting, LLC
Authorized Agent for ConSeal International Inc.
Electronic Transmittal: Killoren.reg@me.com

Subject: PRIA Label and CSF Amendment – Revising the label and adding claims, updating Basic CSF, and adding Alt 1-4 CSFs.
Product Name: Stericide
EPA Registration Number: 58300-25
Received Date: 1/25/2024
Action Case Number: 00497865

Dear Jean Killoren:

The amended label and CSFs referred to above, submitted in connection with registration under the Federal Insecticide, Fungicide and Rodenticide Act, as amended, are acceptable. This approval does not affect any conditions that were previously imposed on this registration. You continue to be subject to existing conditions on your registration and any deadlines connected with them.

A stamped copy of your labeling is enclosed for your records. This labeling supersedes all previously accepted labeling. Pursuant to 40 CFR 156.10(a)(6), you must submit one copy of the final printed labeling before you release the product for shipment with the new labeling. In accordance with 40 CFR 152.130(c), you may distribute or sell this product under the previously approved labeling for 18 months from the date of this letter. After 18 months, you may only distribute or sell this product if it bears this new revised labeling or subsequently approved labeling. "To distribute or sell" is defined under FIFRA section 2(gg) and its implementing regulation at 40 CFR 152.3.

Please note that the record for this product currently contains the following CSFs:

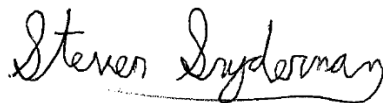
- Basic CSF dated 8/23/2024
- Alternate CSF 1 dated 8/23/2024
- Alternate CSF 2 dated 9/30/2025

- Alternate CSF 3 dated 9/30/2025
- Alternate CSF 4 dated 8/23/2024

Should you wish to add/retain a reference to the company's website on your label, then please be aware that the website becomes labeling under FIFRA and is subject to review by the Agency. See FIFRA section 2(p)(2). If the website is false or misleading, the product would be misbranded and unlawful to sell or distribute under FIFRA section 12(a)(1)(E). 40 CFR 156.10(a)(5) lists examples of statements EPA may consider false or misleading. In addition, regardless of whether a website is referenced on your product's label, claims made on the website may not substantially differ from those claims approved through the registration process, FIFRA section 12(a)(1)(B). Therefore, should the Agency find or if it is brought to our attention that a website contains false or misleading statements or claims substantially differing from the EPA approved registration, the website will be referred to the EPA's Office of Enforcement and Assurance.

Your release for shipment of the product constitutes acceptance of these conditions. If these conditions are not complied with, the registration will be subject to cancellation in accordance with FIFRA section 6. If you have any questions, please contact Kasey Chambers via email at chambers.katelyn@epa.gov.

Sincerely,

A handwritten signature in black ink that reads "Steven Snyderman". The signature is fluid and cursive, with a horizontal line extending from the end of the name.

Steven Snyderman, Product Manager 33
Regulatory Management Branch II
Antimicrobials Division (7510M)
Office of Pesticide Programs

Enclosure: Stamped Final Label

SteriCide

[RTU Sterilant]

[SteriCide is for use as a detergent, cleaner, deodorizer, disinfectant, fungicide, sporicide* and sterilant on non-porous hard surfaces in commercial, hospital, and medical environments.]

ACTIVE INGREDIENTS:

Hydrogen peroxide..... 6.14%

Peracetic acid..... 0.60%

OTHER INGREDIENTS 93.26%

Total 100.00%

DANGER/PELIGRO

Si usted no entiende la etiqueta, busque a alguien para que se la explique a usted en detalle.
(If you do not understand the label, find someone to explain it to you in detail.)

KEEP OUT OF REACH OF CHILDREN

[See [booklet] [side] [back] panel for additional Precautionary Statements [and First Aid]]

{Note to Reviewer: In accordance with 40 CFR 156.68(d), all first aid statements, as prescribed, will appear on the front panel of the product label}

FIRST AID	
IF IN EYES	Hold eye open and rinse slowly and gently with water for 15-20 minutes. Remove contact lenses, if present, after the first 5 minutes, and then continue rinsing. Call a poison control center or doctor for treatment advice.
IF SWALLOWED	Call a poison control center or doctor immediately after treatment for advice. Have a person sip a glass of water if able to swallow. Do not induce vomiting unless told to do so by the poison control center or doctor. Do not give anything by mouth to an unconscious person.
IF ON SKIN OR CLOTHING	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. Call a poison control center or doctor for treatment advice.
Have the product container with you when calling a poison control center or going for treatment. You may also contact 1-800-222-1222 for emergency medical treatment information.	
NOTE TO PHYSICIAN: Probable mucosal damage may contraindicate the use of gastric lavage.	

ACCEPTED

10/10/2025

Under the Federal Insecticide, Fungicide
and Rodenticide Act as amended, for the
pesticide registered under

EPA Reg. No. 58300-25

PRECAUTIONARY STATEMENTS

HAZARDS TO HUMAN AND DOMESTIC ANIMALS

DANGER. CORROSIVE. Causes irreversible eye damage. Harmful if swallowed. Avoid contact with skin or on clothing. Do not get in eyes or on clothing. Wear protective eyewear (goggles, face shield, or safety glasses). Wash thoroughly with soap and water after handling and before eating, drinking, chewing gum, using tobacco. Remove and wash contaminated clothing before reuses.

PHYSICAL AND CHEMICAL HAZARDS

Strong Oxidizing Agent. Corrosive. Never mix or use this product in combination with other sanitizers, cleaners or organic substances.

ENVIRONMENTAL HAZARDS

This pesticide is toxic to birds, fish and aquatic invertebrates. Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans, or other waters unless in accordance with the requirements of a National Pollutant Discharge Elimination System (NPDES) permit and permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact you State Water Board or Regional Office at the EPA.

[QR code graphic. Para obtener información sobre seguridad, almacenamiento y eliminación en Español. (For information on safety, storage, and disposal in Spanish.)]

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

This product is not to be used as a terminal sterilant/high level disinfectant on any surface or instrument that (1) is introduced directly into the human body, either into or in contact with the bloodstream or normally sterile areas of the body, or (2) contacts intact mucous membranes but which does not ordinarily penetrate the blood barrier or otherwise enter normally sterile areas of the body. This product may be used to preclean or decontaminate critical or semi-critical medical device prior to sterilization or high-level disinfection.

Suitable for use on most hard, non-porous surfaces in commercial or health care sites including:

[Academic Facilities	Dental Facilities	Office Buildings
Airports	Exam rooms	Recreational/Entertainment Facilities
Animal Hospitals and Veterinary Facilities	Farms	Retail and Wholesale Establishments
Animal Life Science Laboratories	Funeral Homes	Salons
Animal Shelters/Care Facilities	Hospitals	Spas
Autopsy Facilities	Health Care Facilities	Sports/Physical Fitness Facilities
Bars/Restaurants/Cafeterias	Health Care Environments	University Laboratories
Cleanrooms/Anterooms	Hotels	Waiting rooms]
	Industrial Facilities	

Suitable for Use as a Disinfectant and Fungicide on most hard, non-porous surfaces [(e.g., linoleum, vinyl, sealed asphalt, sealed nonporous concrete, sealed nonporous brick and stone, glazed porcelain and ceramic tile, plastic (vinyl, polyethylene, and polypropylene), and glass)]. This product is compatible with stainless steel and aluminum surfaces. If this product is intended to be used on other metal surfaces it is recommended that you apply this product to a small test area to determine compatibility before proceeding with its use. Areas of appropriate use as a disinfectant and/or fungicide include:

[Appliances	Countertops	Lockers
Attics	Crutches	Phones
Banisters/Hand railings	Desks	Railings

Bathrooms/Restrooms – fixtures/appliances	Devices and equipment – non-electrical and non-critical health care related	Remote Controllers
Benches – bench tops	Doors – handles/knobs	Stairs/Steps
Bottles	Fans	Seats
Cabinets/Shelves	Faucets/Spickets	Tables
Cages	Fences/Gates/Partitions	Tires
Cans	Floors	Toys
Carts	Garbage/Trash/Refuse/Waste – cans/bins/chutes/carriers/compactors	Walls
Chairs/Wheelchairs	Kitchens – appliances/fixtures at room temperature	Windows – frames/sills
Ceilings	Light – switches/covers	Window glass
Containers	Laminar flow hoods	Wheels
Coolers	Poles/Posts	Anterooms]

Suitable for Use as a Disinfectant and Fungicide on most hard, non-porous surfaces in transportation applications, including:

[Ambulances/Patient transfer vehicles
Bicycles
Cars
Taxis/Buses/Subways
Trains/Planes/Ships/Boats/Cruise Ships
Trucks/Fire trucks
Other public transportation and mass transit]

Suitable for Use as a detergent, cleaner and deodorizer on most surfaces, including:

Suitable Materials	Stains	
[Counter tops	Blood	Ice cream
Floors	Chocolate	Jellies and Jams
Table tops	Coffee	Ketchup
Vinyl tile floor	Cranberry juice	Marker
Walls	Grape juice	Pen
White boards	Grass stain	Tea
Blue jean**	Grease	Wine]
Carpet**		
Fabric**		
Khaki**		

** Will not disinfect porous surfaces.

{Optional Cleaning Claims include:}

[Cleaning examples include:

Removing Permanent markers such as Sharpie, Stanley Industrial Grade, Just Basics, and Bic Permanent markers off of floors, table tops and white boards.

SteriCide easily removes pen, marker, crayons marks, black heel scuff marks, grease and tar;

SteriCide removes black heel scuff marks off a vinyl tile floor;

SteriCide removes soap scum in bathtub and sink with hardly any effort;

SteriCide removes dirt from small cracks around sink drain;

SteriCide removes old/dried red children's sun tan lotion from vinyl tile;

Also an excellent laundry presoak for a variety of known and unidentified stains –

- Tea
- Coffee
- Grape juice
- Cranberry juice
- Grass stain
- Ketchup
- Ice cream
- Chocolate
- Jellies and Jams]

To Clean [Remove Stains]:

SteriCide is an effective cleaner. Remove visible soil prior to application of SteriCide. Apply by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry.

To Disinfect:

SteriCide is an effective broad-spectrum hospital or medical environment disinfectant against gram positive and gram-negative bacteria (*Staphylococcus aureus*°, Methicillin Resistant *Staphylococcus aureus* (MRSA)°, *Salmonella enterica*°, and *Pseudomonas aeruginosa*°). Visibly soiled surfaces must be pre-cleaned prior to disinfection; remove visible soil and then wash with SteriCide followed by thorough potable water rinse. Apply this product by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry. SteriCide may be used in general (household) commercial and medical environments to clean, disinfect, and deodorize inanimate surfaces.

To Kill Fungi:

SteriCide is an effective fungicide against *Trichophyton mentagrophytes*° and *Aspergillus niger*°. Visibly soiled surfaces must be pre-cleaned prior to disinfection; remove visible soil and then wash with SteriCide followed by thorough potable water rinse. Apply this product by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry. Reapply weekly or when mold and mildew growth reappear.

[To Kill Spores:

Stericide [RTU Sterilant] [sporicidal disinfectant] [disinfectant] [solution] is [an] effective [sporicidal disinfectant] against *Bacillus subtilis*°, and *Clostridium sporogenes*° on hard, non-porous inanimate surfaces with a 20 minute contact time. Visibly soiled surfaces must be pre-cleaned prior to disinfection; remove visible soil and then wash with SteriCide followed by thorough potable water rinse. Apply this product by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 20 minutes, then wipe with a clean cloth or allow to air dry.]

{or}

Sporicidal [disinfection]: Stericide [RTU Sterilant] [sporicidal disinfectant] [disinfectant] [solution] is [an] effective [sporicidal disinfectant] on hard, non-porous inanimate surfaces with a 20 minute contact time. Prior to use of Stericide [RTU Sterilant] [disinfectant] [solution] [as a sporicidal disinfectant], remove any obvious debris or organic material and pre-clean surfaces to be treated. Apply Stericide [RTU Sterilant] [use dilution] [sporicidal disinfectant] [disinfectant] [liquid] [solution] with a spray applicator device, or other means that ensures that the surface is thoroughly wet. Allow surfaces to remain wet for 20 minutes; then, wipe with a dry, clean cloth or allow to air dry.]

{or}

[Sporicidal [disinfection]: Stericide [RTU Sterilant] [sporicidal disinfectant] [disinfectant] [solution] is [an] effective [sporicidal disinfectant] against *Bacillus subtilis*°, and *Clostridium sporogenes*° on hard, non-porous inanimate surfaces with a 20 minute contact time. Prior to use of Stericide [RTU Sterilant] [disinfectant] [solution] [as a sporicidal disinfectant], remove any obvious debris or organic material and pre-clean surfaces to be treated. Apply Stericide [RTU Sterilant] [use dilution] [sporicidal disinfectant] [disinfectant] [liquid] [solution] with a spray applicator device, or other means that ensures that the surface is thoroughly wet. Allow surfaces to remain wet for 20 minutes; then, wipe with a dry, clean cloth or allow to air dry.]

Use as a Sporicide* (and Sterilant) {this use will only appear on container sizes ≥ 1 quart}

SteriCide is not to be used as a sterilant on any surface or instrument that is introduced directly into the human body, either into or in contact with the bloodstream or other normally sterile areas of the body. This product is not approved for use as a sterilant on electrical and critical/semi-critical health care related devices.

[As required to be a Sterilant, SteriCide has been shown to be an effective sporicide against *Bacillus subtilis*° [and] *Clostridium sporogenes*° when used as directed.]

[*A Sterilizer is an antimicrobial pesticide that destroys or eliminates all forms of microbial life° in the inanimate environment, including bacterial spores.

[This product is suitable for use as a sporicide (and sterilant) on most hard non-porous materials and articles. It is compatible with stainless steel, aluminum, linoleum, glazed porcelain and ceramic tile, plastic (vinyl, polyethylene, and polypropylene), and glass. [If this product is intended to be used on other metal surfaces, it is recommended that you apply this product to a small test area to determine compatibility before proceeding with its use.]]

[Sterilization by Flooding: Flooding application may be used in situations where a large volume can be spread over a floor or pan surface where the liquid can be contained for the entire contact time without complete evaporation. Visibly soiled areas must be pre-cleaned prior to sterilization. Use enough product to cover the surface to be treated, ensuring that the surface is covered with the product for the entire 20-minute contact time. Reapply product if it begins to dry out during the 20-minute contact time.]

[Sterilization by Immersion: Immersion may be used to treat immersible non-electrical articles, tools, and devices that are not related to critical/semi-critical health care [(e.g., jewelry, keys, eyewear, small containers, coins, toys, etc.)]. Visibly soiled areas must be pre-cleaned prior to sterilization. Dismantle devices prior to pre-cleaning, if necessary. Pour appropriate amount of SteriCide into a tray or receptacle that will hold the items to be treated and allow for their complete immersion in, and surface contact with, the solution. Immerse articles for a minimum of 20 minutes. Transfer the treated articles to a water rinse bath to remove the treatment solution. Dry the SteriCide treated articles prior to reassembly or use.]

Note: SteriCide may cause bleaching of treated surfaces; test item if unsure. Before using SteriCide on metal surfaces other than stainless steel and aluminum, it is recommended that the product be tested on a small area to determine compatibility before proceeding with its use.

This product must not result in direct or indirect contamination of food products.

{Box format will be used for Storage and Disposal, providing space permitting}

STORAGE AND DISPOSAL

Do not contaminate water, food, or feed by storage or disposal.

Pesticide Storage

Avoid storage at high temperatures. Store in a cool dry place. Do not return SteriCide to the original container after it has been removed. Avoid all contaminants, especially dirt, reducing agents and metals. Contamination may reduce shelf life and can induce decomposition. [In case of decomposition douse container with cool water and dilute with large volumes of water.] Avoid damage to containers. Keep container closed at all times when not in use. Keep container out of direct sunlight.

Procedure for Leaks or Spills

Stop leak if this can be done without risk. Shut off ignition sources: no flames, smoking, flares, or spark producing tools. Keep combustible and organic materials away. Flush spilled material with large quantities of water.

Pesticide Disposal

Pesticide wastes are acutely hazardous. Improper disposal of excess pesticide mixture, or rinsate is in violation of Federal Law. If these wastes cannot be disposed of by use according to label instruction, contact your State Pesticide or Environmental Control Agency, or Hazardous Waste representative at the nearest EPA Regional Office for guidance. If material has been spilled, an acceptable method of disposal is to dilute with at least 20 volumes of water followed by discharge into suitable treatment system in accordance with all local, state, and Federal environmental laws, rules, regulations, standards, and other requirements.

Container Disposal: Nonrefillable container. Do not reuse or refill this container.

{1 gallon or less} If empty, securely wrap original container in several layers of newspaper and discard in trash or offer for recycling if available. If partly filled, call your local solid waste agency for disposal instructions.]

{≥1 to 5 gallons} Triple rinse as follows: Fill container ¼ full with water and recap. Shake for 10 seconds. Drain for 10 seconds after the flow begins to drip. Follow Pesticide Disposal instruction for rinsate disposal. Repeat procedure two more times. Then offer for recycling if available or reconditioning, or puncture and dispose of in a sanitary landfill, or incineration, or, if allowed by state and local authorities, by burning. If burned, stay out of smoke.

[OR]

{>5 Gallons} Triple rinse (or equivalent) promptly after emptying. Triple rinse as follows: Empty the remaining contents into application equipment or a mix tank. Fill the container ¼ full with water. Replace and tighten closures. Tip container on its side and roll it back and forth, ensuring at least one complete revolution, for 30 seconds. Stand the container on its end and tip it back and forth several times. Turn the container over onto its other end and tip it back and forth several times. Empty the rinsate into application equipment or a mix tank or store rinsate for later use or disposal. Repeat this procedure two more times. Then offer for recycling if available or reconditioning, or puncture and dispose of in a sanitary landfill, or incineration, or, if allowed by state and local authorities, by burning. If burned, stay out of smoke. [Empty drums and bottles are not returnable to ConSeal unless special arrangements have been made.]

Manufactured by:
ConSeal International, Inc.
90 Kerry Place, Suite
Norwood, MA 02062

EPA Reg. No.: 58300-25
EPA Est. No.: 58300-FL-2

[WARRANTY]

ConSeal International Inc. warrants that this product complies with the specifications expressed on the label. To the extent consistent with applicable law, **ConSeal International Inc.** makes no other warranties, and disclaims all other warranties, express or implied, including but not limited to warranties of merchantability and fitness for the intended purpose.]

{The following statements and its corresponding table is optional marketing language}

- [This product has been demonstrated efficacy against the following specific organisms:

Organism	ATCC No./ Strain	Contact Time
<i>Pseudomonas aeruginosa</i>	15442	2 minutes
<i>Salmonella enterica</i>	10708	90 seconds
<i>Staphylococcus aureus</i>	6538	90 seconds
Methicillin Resistant <i>S. aureus</i> (MRSA)	33592	90 seconds
<i>Trichophyton metagrophytes</i>	9533	2 minutes
<i>Aspergillus niger</i>	6275	2 minutes
<i>Aspergillus brasiliensis</i>	16404	1 minutes
<i>Influenza A Virus (H1N1)</i>	A/PR/8/34	2 minutes
<i>Influenzas A Virus (H3N2)</i>	A/Hong Kong/8/68	2 minutes
<i>Avian Influenza Virus (H9N2)</i>	A/Turkey/Wis/66	2 minutes
<i>Canine Parvovirus</i>	VR-2017	2 minutes

<i>Spore Forming Bacteria*</i>		
<i>Bacillus subtilis</i>	19659	20 minutes
<i>Clostridium sporogenes</i>	3584	20 minutes

- During the 20 minute time required to sterilize a treated surface, SteriCide kills bacteria and fungi in the first 90 second to 2 minutes.
 - [Suitable] [Perfect] For use in commercial, hospital & medical environments
 - [Suitable] for use as a detergent, cleaner, deodorizer, disinfectant, fungicide and sporicide* and sterilant for use on most hard non-porous materials and surfaces.
 - Destroys or eliminates all forms of microbial life[◇], including bacterial spores*, in the inanimate environment
 - Staphylococcus aureus[◇]
 - Methicillin Resistant S. aureus (MRSA)[◇]
 - Salmonella enterica[◇]
 - Pseudomonas aeruginosa[◇]
 - Trichophyton metagrophytes[◇]
 - Aspergillus niger[◇]
 - Aspergillus brasiliensis[◇]
 - Bacillus subtilis*[◇]
 - Clostridium sporogenes*[◇]
 - Influenza A Virus (H1N1) [◇]
 - Influenzas A Virus (H3N2) [◇]
 - Avian Influenza Virus (H9N2) [◇]
 - Canine Parvovirus[◇]
 - [For use as a] detergent, cleaner, deodorizer, disinfectant, fungicide, and sporicide*/sterilant on non-porous hard surfaces [in commercial, hospital, and medical environments].
 - Detergent, cleaner, deodorizer, disinfectant, fungicide, and sporicide* and sterilant for use on non-porous hard surfaces [in commercial, hospital, and medical environments]
 - •Detergent •Cleaner •Deodorizer •Disinfectant •Fungicide •Sporicide* •Sterilant for use on non-porous hard surfaces [in commercial, hospital, and medical environments].
 - All in one: Sporicide* and Sterilant, Disinfectant, Fungicide, Cleaner and Detergent
 - Formula is ready to use, no mixing required
 - Ready to Use [RTU]
 - Biodegradable
 - Multi-purpose surface disinfecting.
 - For use on hard non-porous areas such as tables, carts, counters, laminar flow hoods, benches, floors and walls.
 - Compatible on hard, non-porous surfaces.
 - Pleasant Scent
-

Non-Label Claim
Emerging Viral Pathogen Claim

This product qualifies for emerging viral pathogen claims per the EPA’s ‘Guidance to Registrants: Process for Making Claims Against Emerging Viral Pathogens not on EPA-Registered Disinfectant Labels’ when used in accordance with the appropriate use directions indicated below.

This product meets the criteria to make claims against certain emerging viral pathogens from the following viral categories:

- Enveloped Viruses
- Large Non-Enveloped Viruses
- Small Non-Enveloped Viruses

For an emerging vial pathogen that is a/an Follow the sterilant directions for use on hard non-porous surfaces
Enveloped virus	
Large, non-enveloped virus	
Small, non-enveloped virus	

SteriCide has demonstrated effectiveness against viruses similar to [name of emerging virus] on hard, non-porous surfaces. Therefore, SteriCide can be used against [name of emerging virus] when used in accordance with the directions for sterilization on hard, non-porous surfaces. Refer to the [CDC or OIE] website at [pathogen-specific website address] for additional information.

[Name of illness/outbreak] is caused by [name of emerging virus]. SteriCide kills similar viruses and therefore can be used against [name of emerging virus] when used in accordance with the directions for sterilization on hard, non-porous surfaces. Refer to the [CDC or OIE] website at [website address] for additional information.

{Sub-label – may contain optional accepted bullet points and variations in approved use sites}

SteriCide

[RTU Sterilant

[[SteriCide is] for use as a detergent, cleaner, deodorizer, disinfectant, fungicide, sporicide* and sterilant on non-porous hard surfaces in commercial, hospital, and medical environments.]

ACTIVE INGREDIENTS:	
Hydrogen peroxide	6.14%
Peracetic acid	0.60%
OTHER INGREDIENTS	93.26%
Total	100.00%

DANGER/PELIGRO

Si usted no entiende la etiqueta, busque a alguien para que se la explique a usted en detalle. (If you do not understand the label, find someone to explain it to you in detail.)

KEEP OUT OF REACH OF CHILDREN

[See [booklet] [side] [back] panel for additional Precautionary Statements]

{Note to Reviewer: In accordance with 40 CFR 156.68(d), all first aid statements, as prescribed, will appear on the front panel of the product label}

FIRST AID	
IF IN EYES	Hold eye open and rinse slowly and gently with water for 15-20 minutes. Remove contact lenses, if present, after the first 5 minutes, and then continue rinsing. Call a poison control center or doctor_for treatment advice.
IF SWALLOWED	Call a poison control center or doctor immediately after treatment for advice. Have a person sip a glass of water if able to swallow. Do not induce vomiting unless told to do so by the poison control center or doctor. Do not give anything by mouth to an unconscious person.
IF ON SKIN OR CLOTHING	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. Call a poison control center or doctor for treatment advice.
Have the product container with you when calling a poison control center or going for treatment. You May also contact 1-800-222-1222 for emergency medical treatment information.	
NOTE TO PHYSICIAN: Probable mucosal damage may contraindicate the use of gastric lavage.	

{Back/Side panel}

PRECAUTIONARY STATEMENTS

HAZARDS TO HUMAN AND DOMESTIC ANIMALS

DANGER. CORROSIVE. Causes irreversible eye damage. Harmful if swallowed. Avoid contact with skin or on clothing. Do not get in eyes or on clothing. Wear protective eyewear (goggles, face shield, or safety glasses). Wash thoroughly with soap and water after handling and before eating, drinking, chewing gum, using tobacco. Remove and wash contaminated clothing before reuses.

PHYSICAL AND CHEMICAL HAZARDS

Strong Oxidizing Agent. Corrosive. Never mix or use this product in combination with other sanitizers, cleaners or organic substances.

ENVIRONMENTAL HAZARDS

This pesticide is toxic to birds, fish and aquatic invertebrates. Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans, or other waters unless in accordance with the requirements of a National Pollutant Discharge Elimination System (NPDES) permit and permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact your State Water Board or Regional Office at the EPA.

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

Suitable for use as a Detergent, Cleaner, Deodorizer, Disinfectant, Fungicide Sporicide* and Sterilant for use on most hard non-porous materials and surfaces in commercial or health care sites including [airports, animal hospitals and veterinary facilities, animal shelters/care facilities, bars/restaurants/cafeterias, farms, hospitals, healthcare facilities, office buildings, salons, spas]. It is compatible with stainless steel, aluminum, linoleum, glazed porcelain and ceramic tile, plastic (vinyl, polyethylene, and polypropylene), and glass.]

Note: SteriCide may cause bleaching of treated surfaces; test item if unsure. Before using SteriCide on metal surfaces other than stainless steel and aluminum, it is recommended that the product be tested on a small area to determine compatibility before proceeding with its use.

This product must not result in direct or indirect contamination of food products.

To Clean [Remove Stains]:

SteriCide is an effective cleaner. Remove visible soil prior to application of SteriCide. Apply by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry.

To Disinfect:

SteriCide is an effective broad-spectrum hospital or medical environment disinfectant against gram positive and gram-negative bacteria (*Staphylococcus aureus*°, Methicillin Resistant *Staphylococcus aureus* (MRSA)°, *Salmonella enterica*°, and *Pseudomonas aeruginosa*°). Visibly soiled surfaces must be pre-cleaned prior to disinfection; remove visible soil and then wash with SteriCide followed by thorough potable water rinse. Apply this product by wiping, mopping or as a coarse spray. Allow surface to remain thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry. SteriCide may be used in general (household) commercial and medical environments to clean, disinfect, and deodorize inanimate surfaces.

To Kill Fungi:

SteriCide is an effective fungicide against *Trichophyton mentagrophytes*° and *Aspergillus niger*°. Visibly soiled surfaces must be pre-cleaned prior to disinfection; remove visible soil and then wash with SteriCide followed by thorough potable water rinse. Apply this product by wiping, mopping or as a coarse spray. Allow surface to remain

thoroughly wet for at least 2 minutes, then wipe with a clean cloth or allow to air dry. Reapply weekly or when mold and mildew growth reappears.

Use as a Sporicide* (Sterilant) {this use will only appear on container sizes ≥ 1 quart}

SteriCide is not to be used as a sterilant on any surface or instrument that is introduced directly into the human body, either into or in contact with the bloodstream or other normally sterile areas of the body. This product is not approved for use as a sterilant on electrical and critical/semi-critical health care related devices.

As required to be a Sterilant, SteriCide has been shown to be an effective sporicide against *Bacillus subtilis*^o [and] *Clostridium sporogenes*^o] when used as directed.

[* A Sterilizer is an antimicrobial pesticide that destroys or eliminates all forms of microbial life^o in the inanimate environment, including bacterial spores.]

[Sterilization by Flooding: Flooding application may be used in situations where a large volume can be spread over a floor or pan surface where the liquid can be contained for the entire contact time without complete evaporation. Visibly soiled areas must be pre-cleaned prior to sterilization. Use enough product to cover the surface to be treated, ensuring that the surface is covered with the product for the entire 20 minute contact time. Reapply product if it begins to dry out during the 20 minute contact time.]

[Sterilization by Immersion: Immersion may be used to treat immersible non-electrical articles, tools, and devices that are not related to critical/semi-critical health care [(e.g., jewelry, keys, eyewear, small containers, coins, toys, etc.)]. Visibly soiled areas must be pre-cleaned prior to sterilization. Dismantle devices prior to pre-cleaning, if necessary. Pour appropriate amount of SteriCide into a tray or receptacle that will hold the items to be treated and allow for their complete immersion in, and surface contact with, the solution. Immerse articles for a minimum of 20 minutes. Transfer the treated articles to a water rinse bath to remove the treatment solution. Dry the SteriCide treated articles prior to reassembly or use.]

{Box format will be used for Storage and Disposal, providing space permitting}

STORAGE AND DISPOSAL

Do not contaminate water, food, or feed by storage or disposal.

Pesticide Storage

Avoid storage at high temperatures. Store in a cool dry place. Do not return SteriCide to the original container after it has been removed. Avoid all contaminants, especially dirt, reducing agents and metals. Contamination may reduce shelf life and can induce decomposition. Avoid damage to containers. Keep container closed at all times when not in use. Keep container out of direct sunlight.

Procedure for Leaks or Spills

Stop leak if this can be done without risk. Shut off ignition sources: no flames, smoking, flares, or spark producing tools. Keep combustible and organic materials away. Flush spilled material with large quantities of water.

Pesticide Disposal

Pesticide wastes are acutely hazardous. Improper disposal of excess pesticide mixture, or rinsate is in violation of Federal Law. If these wastes cannot be disposed of by use according to label instruction, contact your State Pesticide or Environmental Control Agency, or Hazardous Waste representative at the nearest EPA Regional Office for guidance. If material has been spilled, an acceptable method of disposal is to dilute with at least 20 volumes of water followed by discharge into suitable treatment system in accordance with all local, state, and Federal environmental laws, rules, regulations, standards, and other requirements.

Container Disposal: Nonrefillable container. Do not reuse or refill this container.

{1 gallon or less}

If empty, securely wrap original container in several layers of newspaper and discard in trash or offer for recycling if available. If partly filled, call your local solid waste agency for disposal instructions.

{≥1 to 5 gallons}

Triple rinse as follows: Fill container ¼ full with water and recap. Shake for 10 seconds. Drain for 10 seconds after the flow begins to drip. Follow Pesticide Disposal instruction for rinsate disposal. Repeat procedure two more times. Then offer for recycling if available or reconditioning, or puncture and dispose of in a sanitary landfill, or incineration, or, if allowed by state and local authorities, by burning. If burned, stay out of smoke.

[OR]

{>5 Gallons}

Triple rinse (or equivalent) promptly after emptying. Triple rinse as follows: Empty the remaining contents into application equipment or a mix tank. Fill the container ¼ full with water. Replace and tighten closures. Tip container on its side and roll it back and forth, ensuring at least one complete revolution, for 30 seconds. Stand the container on its end and tip it back and forth several times. Turn the container over onto its other end and tip it back and forth several times. Empty the rinsate into application equipment or a mix tank or store rinsate for later use or disposal. Repeat this procedure two more times. Then offer for recycling if available or reconditioning, or puncture and dispose of in a sanitary landfill, or incineration, or, if allowed by state and local authorities, by burning. If burned, stay out of smoke. [Empty drums and bottles are not returnable to ConSeal unless special arrangements have been made.]

Manufactured by:
ConSeal International, Inc.
90 Kerry Place, Suite
Norwood, MA 02062

EPA Reg. No.: 58300-25
EPA Est. No.: 58300-FL-2

[WARRANTY]

ConSeal International Inc. warrants that this product complies with the specifications expressed on the label. To the extent consistent with applicable law, **ConSeal International Inc.** makes no other warranties, and disclaims all other warranties, express or implied, including but not limited to warranties of merchantability and fitness for the intended purpose.]
