



UNITED STATES ENVIRONMENTAL PROTECTION AGENCY
WASHINGTON, DC 20460

OFFICE OF CHEMICAL SAFETY
AND POLLUTION PREVENTION

November 22, 2017

Coleen Waldenmayer
Scientist
PeroxyChem, LLC.
2005 Market Street
Suite 3200
Philadelphia, PA 19103

Subject: PRIA Label and CSF Amendment – Changing the Expiration Date
Product Name: Phase VTA
EPA Registration Number: 65402-11
Application Date: 07/18/2017
Decision Number: 531605

Dear Ms. Waldenmayer:

The amended label and CSF referred to above, submitted in connection with registration under the Federal Insecticide, Fungicide and Rodenticide Act, as amended, are acceptable. This approval does not affect any conditions that were previously imposed on this registration. You continue to be subject to existing conditions on your registration and any deadlines connected with them.

A stamped copy of your labeling is enclosed for your records. This labeling supersedes all previously accepted labeling. You must submit one copy of the final printed labeling before you release the product for shipment with the new labeling. In accordance with 40 CFR 152.130(c), you may distribute or sell this product under the previously approved labeling for 18 months from the date of this letter. After 18 months, you may only distribute or sell this product if it bears this new revised labeling or subsequently approved labeling. "To distribute or sell" is defined under FIFRA section 2(gg) and its implementing regulation at 40 CFR 152.3.

Please note that the record for this product currently contains the following CSF:

- Basic CSF dated 04/26/2017

Should you wish to add/retain a reference to the company's website on your label, then please be aware that the website becomes labeling under the Federal Insecticide Fungicide and Rodenticide Act and is subject to review by the Agency. If the website is false or misleading, the product would be misbranded and unlawful to sell or distribute under FIFRA section 12(a)(1)(E). 40 CFR 156.10(a)(5) list examples of statements EPA may consider false or misleading. In addition, regardless of whether a website is referenced on your product's label, claims made on the website may not substantially differ from those claims approved through the registration process. Therefore, should the Agency find or if it is brought to our attention that a website contains false

Page 2 of 2
EPA Reg. No. 65402-11
Decision No. 531605

or misleading statements or claims substantially differing from the EPA approved registration, the website will be referred to the EPA's Office of Enforcement and Compliance.


Your release for shipment of the product constitutes acceptance of these conditions. If these conditions are not complied with, the registration will be subject to cancellation in accordance with FIFRA section 6. If you have any questions, you may contact Aline Heffernan at 703-347-8602 or via email at heffernan.aline@epa.gov.

Sincerely,

A handwritten signature in blue ink, appearing to read 'Zeno Bain', with a long horizontal stroke extending to the right.

Zeno Bain, Product Manager 33
Regulatory Management Branch I
Antimicrobials Division (7510P)
Office of Pesticide Programs

Enclosure: Stamped Label

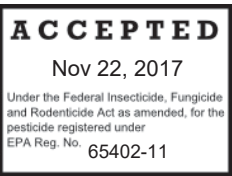

Phase VTA®

EPA Registration No. 65402-11
EPA Est. No. 65402-NY-001

ACTIVE INGREDIENTS:	
Peroxyacetic Acid	15%
Hydrogen Peroxide	10%
OTHER INGREDIENTS:	<u>75%</u>
TOTAL:	100%

KEEP OUT OF REACH OF CHILDREN DANGER

Phase VTA® is for use in aseptic food processing on food packaging materials to achieve commercial sterility.

Phase VTA® is for use as an antimicrobial rinse of Pre-cleaned or New Returnable or Non-Returnable Containers.



Manufactured by:
PeroxyChem, LLC
2005 Market St Ste 3200
Philadelphia PA 19103-7014

Net Contents: 55 Gallons (208 L) 495 lbs (224 kg)

Precautionary Statements
Hazards to Humans and Domestic Animals
DANGER

Corrosive, cause's eye and skin damage. Harmful if swallowed. Do not get in eyes, on skin or on clothing. Wear protective eyewear (goggles, face shield, or safety glasses), chemical resistant apron or coveralls and chemical resistant gloves when handling concentrate. Wash thoroughly with soap and water after handling. Do not breathe vapor or spray mist. Do not enter an enclosed area without proper respiratory protection.

Physical or Chemical Hazards

Strong oxidizing agent. Mix only with water. At temperatures exceeding 156°F, decomposition of Phase VTA® could occur, releasing oxygen. The oxygen released could initiate or promote combustion of other materials.

Environmental Hazards

This pesticide is toxic to birds, mammals, fish and aquatic invertebrates. Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans, or other waters unless in accordance with requirements of a National Pollutant Discharge Elimination System (NPDES) permit and the permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact your State Water Board or Regional Office of the EPA.

Any solution released from the system should be diluted with water and tested for residuals to ensure that there is less than 3 ppm peroxygen remaining.

First Aid

Have the product container or label with you when calling a poison control center or doctor, or going for treatment.

If in eyes

- Hold eye open and rinse slowly and gently with water for 15-20 minutes.
- Remove contact lenses, if present, after the first 5 minutes, then continue rinsing eye.
- Call a poison control center or doctor for treatment advice.

If on skin or clothing

- Take off contaminated clothing.
- Rinse skin immediately with plenty of water for 15-20 minutes.
- Call a poison control center or doctor for treatment advice.

If inhaled

- Move person to fresh air.
- If person is not breathing, call 911 or an ambulance, then give artificial respiration, preferably by mouth-to-mouth if possible.
- Call a poison control center or doctor for further treatment advice.

If swallowed

- Call poison control center or doctor immediately for treatment advice.
- Have person sip a glass of water if able to swallow.
- Do not induce vomiting unless told to do so by a poison control center or doctor.
- Do not give anything by mouth to an unconscious person.

Note to Physician: Probable mucosal damage may contraindicate the use of gastric lavage.

This product expires 5-months after the release-for-sale date and must not be used or distributed after that date. See batch label for expiration date.

STORAGE AND DISPOSAL

Do not contaminate water, food, or feed by storage or disposal.

STORAGE: NEVER RETURN Phase VTA® TO THE ORIGINAL CONTAINER AFTER IT HAS BEEN REMOVED. Avoid all contaminants, especially dirt, caustic, reducing agents, and metals. Contamination and impurities will reduce shelf life and can induce decomposition. In case of decomposition, isolate container, douse container with cool water and dilute with large volumes of water.

Avoid damage to containers. Keep container closed at all times when not in use. Keep container out of direct sunlight. To maintain product quality, store at temperatures below 86°F. Do not store on wooden pallets.

DISPOSAL

Pesticide Disposal

Phase VTA® which is to be discarded should be disposed of as hazardous waste after contacting the appropriate local, state, or Federal agency to determine proper procedures.

Container Disposal

Nonrefillable containers less than 5 gallons. Nonrefillable container. Do not reuse or refill this container. Offer for recycling, if available, or place [or put] in trash or sanitary landfill. Triple rinse container (or equivalent) promptly after emptying. Triple rinse as follows: Empty the remaining contents into application equipment or a mix tank and drain for 10 seconds after the flow begins to drip. Fill the container ¼ full with water and recap. Shake for 10 seconds. Pour rinsate into application equipment or a mix tank or store rinsate for later use or disposal. Drain for 10 seconds after the flow begins to drip. Repeat this procedure two more times.

Nonrefillable containers greater than or equal to 5 gallons.

Nonrefillable container. Do not reuse or refill this container. Offer for recycling, if available, or place [or put] in trash or sanitary landfill. Triple rinse container (or equivalent) promptly after emptying. Triple rinse as follows: Empty the remaining contents into application equipment or a mix tank. Fill the container ¼ full with water. Replace and tighten closures. Tip container on its side and roll it back and forth, ensuring at least one complete revolution, for 30 seconds. Stand the container on its end and tip it back and forth several times. Turn the container over onto its other end and tip it back and forth several times. Empty the rinsate into application equipment or a mix tank or store rinsate for later use or disposal. Repeat this procedure two more times. Empty drums are not returnable to PeroxyChem unless special arrangements have been made. Dispose of drums in accordance with local, state, and Federal regulations.

All Refillable containers. Refillable container. Refill this container with pesticide only. Do not reuse this container for any other purpose. Cleaning the container before final disposal is the responsibility of the person disposing of the container. Cleaning before refilling is the responsibility of the refiller. To clean the container before final disposal, empty the remaining contents from this container into application equipment or mix tank. Fill the container about 10 percent full with water. Agitate vigorously or recirculate water with the pump for 2 minutes. Pour or pump rinsate into application equipment or rinsate collection system. Repeat this rinsing procedure two more times. Return to PeroxyChem for reuse. If unable to return to PeroxyChem, offer for recycling if available or place [or put] in trash or sanitary landfill.

Procedure for Leak or Spill

Stop leak if this can be done without risk. Shut off ignition sources; no flames, smoking, flares, or spark producing tools. Keep combustible and organic materials away. Undiluted material should not enter confined spaces. If material has been spilled, an acceptable method of disposal is to dilute with at least 20 volumes of water followed by discharge into suitable treatment system in accordance with all local, state, and Federal environmental laws, rules, regulations, standards, and other requirements. Because acceptable methods of disposal may vary by location, regulatory agencies should be contacted prior to disposal.

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

Aseptic Food Processing Operations

This product may be used to achieve commercial sterility of food packaging prior to fill and of equipment used in aseptic food processing applications.

Food Packaging Materials

Apply Phase VTA® on the exterior and interior of food containers and closure systems (caps, seals, etc.). To achieve sterilization, apply 4000 ppm peroxyacetic acid at a minimum temperature of 65°C. The solution must remain in contact with the packaging surface for a minimum of 20 seconds. Rinse containers with sterile water prior to filling with processed food; in lieu of a rinse, films may be mechanically stripped of excess sanitizing solution.

For a fine mist or vapor application, no rinse of treatment solution is required: (1) solution application does not exceed 0.0175 mL treatment solution per ounce container capacity; (2) treatment solution has not been recycled; and (3) no treatment solution with a concentration of higher than 4000 ppm peroxyacetic acid has been added to the treatment solution reservoir.

This product may be used on food packaging as an aseptic packaging antimicrobial rinse in food packaging processing operation that has a scheduled process accepted by FDA. The aseptic food processing operation must comply with all applicable FDA regulations, including but not limited to 21 CFR parts 108, 110, 113, and/or 114. Use in an aseptic food processing operation includes testing required for the process validation.

Food Processing Equipment

This product may be used to achieve commercial sterility of non-porous food manufacturing, packaging and filling equipment.

Phase VTA® may be used as a manufacturing, filling (including rotary fillers) and packaging equipment.

1. Remove gross soil particles from equipment surfaces.
2. Clean surfaces thoroughly.
3. Rinse thoroughly with potable water.
4. To achieve sterilization, apply 4000 ppm peroxyacetic acid at a minimum temperature of 65°C.
5. Use immersion, coarse spray or circulation techniques to apply Phase VTA®. Automated application by fine mist or vapor deposition may be used within enclosed spaces.
6. Allow contact time of at least 20 seconds.
7. Allow to drain dry.
8. A final rinse with sterile water is optional.

This product may be used on equipment used in aseptic packaging antimicrobial rinse in food processing operation that has a scheduled process accepted by FDA. The aseptic food processing operation must comply with all applicable FDA regulations, including but not limited to 21 CFR parts 108, 110, 113, and/or 114. Use in an aseptic food processing operation includes testing required for the process validation. [U.S. Patent No. 9295744 or Pat. 9295744]

Antimicrobial Rinse of Pre-cleaned or New Returnable or Non-Returnable Containers

To reduce the number of nonpathogenic beverage spoilage organisms: *Aspergillus versicolor*, *Byssoschlamys fulva*, *Pediococcus damnosus*, *Lactobacillus buchnei*, and *Saccharomyces cerevisiae*, use 1 to 10 fluid ounces of product per 5 gallons of water. This provides 265 to 2700 ppm peroxyacetic acid and 175 to 1800 ppm hydrogen peroxide. After applying the antimicrobial rinse, allow containers to drain thoroughly. Optional rinse with sterile or potable water.

Phase VTA® may be mixed with the non-foaming agent, Peradigm™ and applied at room temperature or at a minimum of 25°C.

1. Mix a minimum of 0.5 fluid ounce Phase VTA® with Peradigm in 4.5 gallons of water.

2. Add a maximum of 43 fluid ounces of Paradigm to the dilute solution, and bring total volume to 5 gallons. This provides 125 ppm peroxyacetic acid and 85 ppm hydrogen peroxide.
3. Apply solution, allowing a minimum contact time of 30 seconds.
4. Rinse with sterile or potable water.

In all applications always prepare a new solution daily to ensure effectiveness. Do not re-use solutions. Dispose of unused solution.

Note: May cause bleaching of treated surfaces; test commodity if unsure.

Note: Before using Phase VTA to sanitize or clean metal surfaces, it is recommended that the diluted solution be tested on a small area to determine compatibility.

EMERGENCY TELEPHONE NUMBERS (24 HOURS)

MEDICAL: COLLECT 303-595-1409

TRANSPORTATION: 800-424-9300

OTHER: COLLECT 716-879-0400

4845-6889-0951, v. 2