# **Precautionary Statements**

Hazards to Humans and Domestic Animals Caution. Causes moderate eye irritation. Harmful if swallowed, inhaled or absorbed through the skin. Avoid contact with eyes or clothing. Wash thoroughly with soap and water after handling.

## **Environmental Hazards**

This product is toxic to fish and aquatic organisms.

# **Physical or Chemical Hazards**

Do not mix with acids or chlorine.

# CSR-1

Sanitizer For Use in the Control of Odor-Causing Bacteria, Mold and Fungi and Chemical Odors Associated with Ice Machines and Drip Pans

> (Pads) Ready-to-Use Formula

## Active Ingredient

Sodium Chlorite	5.0%
Inert Ingredients	95.0%
Total	100.0%

## KEEP OUT OF REACH OF CHILDREN

## CAUTION

#### <u>First Aid</u>

If in eyes: Flush with plenty of water. Call a physician if irritation persists.

If on skin: Wash with plenty of soap and water. Get medical attention if irritation persists.

If swallowed: Call a physician or Poison Control Center. Drink 1 or 2 glasses of water and induce vomiting by touching back of throat with finger. If person is unconscious, do not give anything by mouth and do not induce vomiting.

See side panel for additional precautionary statements.

EPA Reg. No. 70060-13 EPA Est. No.

Net Contents: \_\_\_\_\_ grams

Manufactured For: Engelhard Corporation Iselin, NJ 08830


# **DIRECTIONS FOR USE**

It is a violation of Federal law to use this product in a manner inconsistent with it labeling.

CSR-1 is breakthrough technology (patent pending) that releases, on a controlled basis, the antimicrobial agent chlorine dioxide. The generated chlorine dioxide eliminates odor-causing bacteria and fungi and destroys chemical odors in drip pans (pads).<sup>Rev</sup>

# STORAGE AND DISPOSAL

Do not contaminate water, food or feed by storage or disposal. Store in a cool, dry, well-ventilated area. Do not store at elevated temperatures. Discard used sachet in trash.

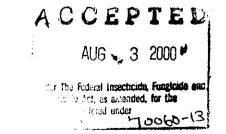

03/2000

# **Use Instructions**

## Drip Pans (Pads)

Use CSR-1 with drip pans (pads) in grocery store display cases. To Use: Tear open the foil patch and remove the 200 gram sachet. Place the sachet in the drip pan (pad) located <u>underneath</u> the grocery store display case.

### Ice Machines

1. Disassemble the ice machine following the manufacturer's instructions and dispose of any used CSR-1 sachets.

2. Clean and rinse all wetted internal surfaces of the freezing chamber following the manufacturer's cleaning instructions.

3. Open the foil pouch containing the CSR-1 sachet and hang or place the sachet in the freezing chamber of the ice machine out of direct contact with water or ice. Consult the table below for selecting the appropriate CSR-1 sachet. Note: The sachet size is based on the amount of water fed to the ice machine per day, not the amount of ice produced. Typically, a significant portion of water fed to an ice machine is sent to the drain and is not converted to ice. The exact amount depends upon the specific design of the ice machine.

Quantity of Water Processed per day (gallons)	10-20	20-30	30-40
Amount of CSR-1 in Sachet (grams)	50	100	150

ੋ 4. **ੋ Rečssemble the ice machine an**d resume ice making following the ੋ ਸ਼ੁਰੈਜੇufacturer's instructions

5. Repeat the process monthly.

. . . . .

14.