
The Dragonfly® Carbon Dioxide Cylinder

For use in the Dragonfly® System

* For outdoor use only.

* Attracts certain mosquitoes and other biting flies.

Active Ingredient:

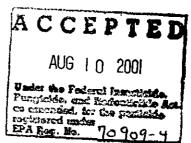

Keep Out of Reach of Children WARNING

FIRST AID	
If inhaled	 Move person to fresh air. If person if not breathing, call 911 or an ambulance, then give artificial respiration, preferably by mouth-to-mouth, if possible. Call a poison control center or doctor for further treatment advice.
Have the pr	oduct container or label with you when calling a poison control center or doctor, or going for treatment.

PRECAUTIONARY STATEMENTS

Hazards to Humans and Domestic Animals

Warning: May be fatal if inhaled. Do not breathe vapor.

Directions for Use

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

To install or replace the Dragonfly® Carbon Dioxide Cylinder:

Disconnect the power supply to the Dragonfly® Electronic Unit. Close the valve on the Carbon Dioxide Cylinder. Remove the CGA-320 fitting from the empty Cylinder. To install a full Carbon Dioxide Cylinder, attach the CGA-320 fitting to the valve on the full Carbon Dioxide Cylinder. Take care that the Teflon® seal in the CGA-320 connector sits firmly against the mating surface on the valve. Open the valve on the Carbon Dioxide Cylinder. Connect the power, turn the unit on and depress the RESET button to set the Carbon Dioxide meter to zero. In everyday use, the Carbon Dioxide Cylinder will last from 30 to 130 days, depending on the CO_2 release rate selected.

When a one-week supply of CO₂ remains, the red CO₂ light will illuminate. If you hear the discharge valve "click" but do not hear the "puff" of the CO₂ release, the Carbon Dioxide Cylinder is completely empty and must be refilled or exchanged for a full one.

Storage and Disposal

Store this product in a cool, dry place and out of the reach of children until ready to use. To refill the Carbon Dioxide Cylinder, visit our website at www.nomorebites.com or call (860) 423-3009 for an authorized dealer in your area.

EPA Reg. No.: 70909-4 EPA Est. No.: XXXXX Net Contents: 20 lbs

Manufactured by:
BioSensory™ Inc.
Windham Mills Technology Center
322 Main Street, Willimantic, CT 06226-3149

Warranty and Disclaimer: BioSensory, Inc. makes no warranty of merchantability, fitness for any particular purpose or otherwise, express or implied, concerning this product or its uses which extend beyond the use of the product under normal conditions in accordance with the statements made on this label.

BioSensory, Dragonfly and mosquito 'cognito are registered trademarks of BioSensory™ Inc. Protected by U.S. Patent Numbers 5,205,084, 5,799,436, and 6,055,766. U.S. and International Patents Pending.