

74559-1

7/7/2019

1/28

UNITED STATES ENVIRONMENTAL PROTECTION AGENCY
WASHINGTON, D.C. 20460



Office of Pesticide Programs

APR -7 2014

Virox Technologies Inc,
2770 Coventry Road
Oakaville, Ontario
L6H 6 R1 Canada

Subject: ACCEL TB
EPA Registration No: 74559-1
Amendment Dated: November 14, 2013


Dear Mr. Swain:

The following amendment, submitted under the provisions section 3(c) (7) (A) of the Federal Insecticide, Fungicide, and Rodenticide Act (FIFRA), as amended to add additional efficacy claims to the label is acceptable. A stamped copy of your labeling is enclosed for your records. This labeling supersedes all previously accepted labeling. The next label printing of this product must use this labeling unless subsequent changes have been approved. You must submit one (1) copy of the final printed labeling before you release the product for shipment with the new labeling. In accordance with 40 CFR 152.13 (c), you may distribute or sell this product under the previously approved labeling for 18 months from the date of this letter. After 18 months, you may only distribute or sell this product if it bears this new revised labeling or subsequently approved labeling. "To distribute or sell" is defined under FIFRA section 2 (gg) and it's implementing regulation at 40 CFR 152.3.

If these conditions are not complied with, the registration will be subject to cancellation in accordance with FIFRA sec.6 (e). Your release for shipment of the product constitutes acceptance of these conditions.

If you have any questions concerning this letter, please contact Zebora Johnson at (703) 308-7080.

2/28

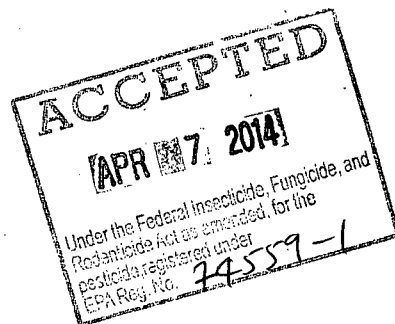

Hydrogen Peroxide (logo) patent pending

[USA Patent #: 7,632,253]

Ready to Use

[All-in-one] [Multi-Surface] One-Step [Hospital] Disinfectant [Cleaner]

[Sanitizer] - Cleaner -Disinfectant - [Deodorizer]

General *Virucide, Bactericide, Tuberculocide, Fungicide, Sanitizer

[Compatible with all surfaces]

[Meets OSHA Bloodborne Pathogen Standard for *HBV & *HCV]

[Restroom] & [Bathroom] [Disinfectant] [Cleaner]

Intended [For] [Commercial] [Industrial] [&] [Institutional] [Residential] [Use]

Active Ingredient:

Hydrogen Peroxide0.5%

Other Ingredients.....99.5%

Total.....100.0%

KEEP OUT OF REACH OF CHILDREN

[All claims backed by third party validation. Reports available at Virox website @
www.virox.com.]

[See reference sheet [enclosed in each case] for [a complete list of pathogenic organisms]

[additional features, claims] [claimed for this product] [for Accel™ TB]].

{the reference sheet information are on page 2, top of page 3 and pages 18 to 20 of the label}

Net Contents: {insert package contents here}

EPA Reg. No. 74559-1

EPA Est. No. 74559-CAN-1

Manufactured By (For):

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes-and/or-options.
{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

3/28

Virox Technologies Inc.
2770 Coventry Road
Oakville, ON, L6H 6R1
1 800 387-7578 www.virox.com

{FRAGRANCE CLAIMS}:

- Fruity Floral Musk [Scent]
- Fruity Green Floral [Scent]
- Fruity Floral [Scent]
- [Light] Floral Scent
- [Light] Fruity Scent

{This list of organisms is for informational purposes. The organisms and related claims may or may not be listed on the final printed label or on a reference sheet and if listed may use a different format.}

***VIRUCIDAL** in the presence of 5% serum load and 1 minute contact time at 20°C on hard, non-porous environmental surfaces.

- Poliovirus Type 1, Strain Brunhilde (ATCC VR-1000)
- HIV-1 (AIDS Virus), Strain HTLV-III_B (HIV-1), (Acquired from Adv. Biotechnologies, Inc.)
- Feline Calicivirus, Strain F9 (ATCC VR-782)
- {Note to reviewer: We will chose one of the these 2 statements for Feline Calicivirus:}*
- Feline Calicivirus
- Norovirus (Feline Calicivirus, as the surrogate)

- Human Coronavirus (ATCC VR-740)
- Influenza A/Hong Kong (ATCC VR-544)
- Herpes Simplex Virus, Type 1 (HSV-1) (ATCC VR-733)
- Herpes Simplex Virus, Type 2 (HSV-2) (ATCC VR-734)
- Rhinovirus Type 37, Strain 151-1 (ATCC VR-1147)
- Rotavirus WA (Acquired from University of Ottawa)
- Hepatitis C Virus (HCV)
- Hepatitis B Virus (HBV)
- Avian Influenza A (ATCC VR-2072)
- Adenovirus type 8 (ATCC VR-1368)

{Note to reviewer: We will choose one or more of these statements depending on available space on the product label.}

- *Respiratory illnesses attributable to Pandemic 2009 H1N1 are caused by Influenza A virus. (This product or product name) is a broad-spectrum hard surface disinfectant that has been shown to be effective against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *This product has demonstrated effectiveness against Influenza A virus and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 Influenza A virus.
- *This product has demonstrated effectiveness against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus.

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike through~~ text means it has been removed.

4/28

*Virucidal activity was determined by the efficacy test methods for virucidal agents intended for inanimate environmental surfaces; ASTM 1053-97 Standard Test Method for Efficacy of Virucidal Agents Intended for Inanimate Environmental Surfaces and EPA protocols for surrogate viral testing.

[*Virucidal: 1 min.]

HOSPITAL DISINFECTANT: BACTERICIDAL in the presence of 5% serum load and 1 minute contact time at 20°C on hard, non-porous environmental surfaces against

Pseudomonas aeruginosa (ATCC 15442) *Staphylococcus aureus* (ATCC 6538) *Salmonella enterica* (formally known as *Salmonella choleraesuis*) (ATCC 10708) *Escherichia Coli* O157:H7 (ATCC 35150) *Staphylococcus aureus* MRSA (ATCC 33592) *Enterococcus faecalis* VRE (ATCC 51575) *Acinetobacter baumannii* (ATCC 19606) *Klebsiella pneumoniae* (ATCC 4352) *Shigella dysenteriae* (ATCC 11835) *Escherichia Coli* with extended beta-lactamase resistance (ESBL) (ATCC BAA-196) *Staphylococcus aureus* (CA-MRSA) (NARSA NRS 384) (Genotype US300) Community Associated Methicillin Resistant *Staphylococcus aureus* (CA-MRSA) (NARSA NRS 123) (Genotype US400) Community Associated Methicillin Resistant

Bactericidal activity was determined by the AOAC Use Dilution Test Method.

[Bactericidal: 1 min.]

TUBERCULOCIDAL in the presence of 5% serum load and 5 minute contact time at 20°C on hard, non-porous environmental surfaces

Mycobacterium bovis (BCG) (OT 451C150)

Tuberculocidal activity was determined by the EPA Quantitative Tuberculocidal Activity Test Method.

[Tuberculocidal: 5 min.]

FUNGICIDAL in the presence of 5% serum load and 10 minute contact time at 20°C on hard, non-porous environmental surfaces

Trichophyton mentagrophytes (ATCC 9533)

Fungicidal activity was determined by the AOAC Fungicidal Activity of Disinfectants Method.

[Fungicidal: 10 min.]

BROAD-SPECTRUM NON-FOOD CONTACT SANITIZING in the presence of 5% serum load and 30 second contact time at 20°C on hard, non-porous environmental surfaces

Klebsiella pneumoniae (ATCC 4352) *Salmonella enterica* (formally known as *Salmonella choleraesuis*) (ATCC 10708) *Pseudomonas aeruginosa* (ATCC 15442) *Staphylococcus aureus* (ATCC 6538) *Staphylococcus aureus* MRSA (ATCC 33592) *Enterococcus faecalis* VRE (ATCC 51575) *Escherichia Coli* O157:H7 (ATCC 35150)

Sanitizing activity was determined by the EPA Sanitizer Test for Inanimate, Non-Food Contact Surfaces and ASTM E1153 Standard Test Method for Efficacy of Sanitizers Recommended for Inanimate Non-Food Contact Surfaces.

[Broad Spectrum Non-Food Contact Sanitizer: 30 seconds]

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes and/or options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

5/28

For Use in [Health Care] [Facilities], [Veterinary] [Clinics], [Animal Housing] [Facilities], [Dental] [Clinics] [Offices], [Life Science] [Laboratories], Medical [Clinics] [Offices], [Industrial & Institutional] [Facilities], and [Hospitals]

{General Uses}

Accel TB is a one-step [hospital-use] germicidal [disinfectant] cleaner and deodorant [odor-counteractant] [odor neutralizer] designed for general cleaning, [and] disinfecting, [deodorizing] [of] hard, non-porous environmental surfaces. It cleans by removing dirt, grime, mold, mildew, and other common soils found in hospitals, nursing homes, schools and colleges, [medical] [dental] offices, veterinary clinics, pet shops, animal & life science laboratories.

Accel TB's non-dulling formula eliminates the time and labor normally required for rinsing. It is designed for use on [Use daily on] [the following] [hard, non-porous environmental surfaces listed on this label made from:] [vinyl], [Naugahyde], painted surfaces, plastic [surfaces], glazed ceramic, glazed porcelain, chrome, stainless steel, aluminum, laminated surfaces and baked enamel surfaces associated with floors, walls, ceilings, tables, chairs, countertops, telephones, glazed tile, sinks.

{Hospitals/Health Care Facilities/Dental Offices/ Life Science Laboratories}

Accel TB is a one-step [hospital-use] [laboratory-use] germicidal [disinfectant] cleaner and deodorant. [odor-counteractant] [odor neutralizer] designed for general cleaning, [and] disinfecting, [deodorizing] [of] hard, non-porous environmental surfaces. Accel TB cleans by removing dirt, grime, food residue, dead skin, blood and other organic matter commonly found in hospitals [in health care facilities] [on medical surfaces] [laboratory settings]. It [also] eliminates odors, leaving [restroom] surfaces smelling clean and fresh. Use where odors are a problem.

Accel TB cleans, disinfects and deodorizes hard, non-porous environmental [hospital] [medical] [dental] [laboratory] surfaces in one step [(with no rinsing required)]. Its non-abrasive formula is designed for use on [Use daily on] [the following] [hard, non-porous environmental surfaces listed on this label made from:] [vinyl], [Naugahyde], painted surfaces, plastic [surfaces], glazed ceramic, glazed porcelain, chrome, stainless steel, laminated surfaces [and baked enamel surfaces associated with floors], walls, ceilings, tables, chairs, countertops, telephones, glazed tile, toilet exteriors, urinal exteriors, sinks found in [health care facilities] [hospitals] [dental offices], [patient rooms], [operating rooms], [ICU areas], [shower rooms], and [locker rooms] [fume hoods and animal cages [found in laboratory settings]]. [It can also be used to pre-clean and disinfect hospital items: wheelchairs, [hospital] [patient] bed rails and linings, wash basins, bed pans, non-critical medical equipment surfaces.

{Veterinary and Animal Housing Facilities}

Accel TB cleans by removing dirt, grime, blood, urine, fecal matter and other common soils found in animal housing facilities, poultry facilities, grooming facilities, farms, kennels, pet stores, veterinary clinics, laboratories or other small animal facilities. It [also] eliminates odors leaving surfaces smelling clean and fresh.

Note: Bracketed [] information is optional text. Text separated by a comma(,) denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

6/28

Accel TB cleans, disinfects and deodorizes hard, non-porous environmental surfaces in one step. Its non-abrasive formula is designed for use on [Use daily on] [Use daily to clean and disinfect] [hard, non-porous surfaces listed on this label made from:] plated or stainless steel, aluminum, chrome, glazed porcelain, glazed tile, laminated surfaces (associated with floors, walls, countertops, cages, kennels, animal equipment) found in [barns, pens and stalls] animal housing facilities.

{For Industrial & Institutional and Miscellaneous Use}

For Use in Public areas, [Retail Businesses], [Office Buildings], [Educational Institutions], [Transportation Terminals], [Lodging Establishments], [Athlete/Recreational Facilities], [Non-food handling areas of Food Services Establishments/Restaurants] and [Manufacturing facilities] *{or insert any of the Industrial & Institutional & Miscellaneous Use site from table 1}*

This product is a one-step germicidal (disinfectant) cleaner and deodorant (odor-counteractant) (odor neutralizer) designed for general cleaning, (and) disinfecting, (deodorizing) (of) hard, non-porous environmental surfaces.

It cleans by removing *{insert any soil from table 2}* found in *{insert any of the Miscellaneous Commercial Use site from table 1}*.

This product [or product name] is designed for use on hard, non-porous environmental surfaces: *{insert any surface material from table 4}* associated with hand touch environmental surfaces, [floors], [walls], [ceilings] – *{or insert any Miscellaneous hard non-porous surface from table 3}* – or – any hard non-porous washable (non-food contact) surface where disinfection is required. (This product's non-dulling formula eliminates the time and labor normally required for rinsing). (It also) reduces odor-causing bacteria leaving surfaces smelling clean and fresh).

{For footbaths in Health clubs, spas and pedicure shops}

(Footbaths (pedicure foot spa equipment) in Health clubs, spas, tanning salons, tanning spas, hair/nail/pedicure salons, barber/beauty shops, salons, tattoo parlors:)

This product is a one-step (hospital-use) (germicidal) disinfectant cleaner, (fungicide), (*virucide) (and) (deodorant) (odor-counteractant) (odor neutralizer) designed for cleaning, (and) disinfecting, and (deodorizing) (on) (of) hard, non-porous footbath surfaces. It cleans by removing body oils, dead tissue, soil and all other buildups or organic matter (found) on (hard nonporous (inanimate) (environmental)) footbath surfaces.

It is designed for use on (Use daily on) (hard, non-porous environmental (inanimate) surfaces) (of) footbaths (pedicure foot spa equipment).

{Soft Surface Sanitization Claims}

For use on soft surfaces [†] *{-or- insert any soft surfaces from table 4}* found in [Hospitals], [nursing homes], [healthcare facilities], [Dental offices] [and] [medical offices].

{Soft Surface Sanitization short claims}

- A proven sanitizer on soft surfaces [†]

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

- An effective soft surface ^F sanitizer
- Cost effective solution laundering -or- dry cleaning hospital curtains
- Great for use on soft surfaces ^F such as [*insert soft surfaces from table 4*]
- Kills microorganisms on [hospital] soft surfaces ^F -or- fabric ^F -or-[*insert soft surfaces from table 4*]
- ^φKills 99.9% of [Enterobacter aerogenes [ATCC 13408]][and][Staphylococcus aureus [ATCC 6538]] on (insert usage surface)
- One-step cleaner sanitizer on soft surfaces ^F
- Removes -and/or- Eliminates odors by killing odor-causing bacteria on [soft surfaces ^F] fabrics ^F] [*-or- insert soft surfaces from table 4*]
- Sanitizes by killing Enterobacter aerogenes and Staphylococcus aureus on soft surfaces ^F in 1 minute
- Sanitizes fabric ^F -or- soft surfaces ^F -or- [*insert soft surfaces from table 4*]
- Sanitizes soft surfaces ^F in one step.
- Sanitizes soft surfaces ^F [in 1 minute]
- Soft surface ^F -or- fabric ^F sanitizer
- Use on [*insert soft surfaces from table 4*] [and other soft surfaces ^F].

Note: Bracketed[]information is optional text. Text separated by a comma(,)denotes-and/or-options. {Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

8/28

{Table 1 - Industrial & Institutional & Miscellaneous Use site }

- Airplanes [Airports]
- Amusement parks
- Bowling Alleys
- Buses
- Non-food handling areas of Cafeterias
- Campers
- Campgrounds
- Churches
- Colleges
- Convenience Stores
- Convention Centers
- Correctional Facilities
- Cruise Ships
- Day Care Centers
- Dorms
- Dormitories
- Elevators
- Factories
- Non-food handling areas of Fast Food Restaurants
- Funeral Homes
- Gas Stations
- Greenhouses
- Health Club[s] [Facilities]
- Hotels
- Industrial Facilities
- Institutional [Bathrooms]
- [Institutional] Laundromats
- Institutions
- Kennels
- Libraries
- Locker Rooms
- Lounges
- Malls
- General Merchandise Stores, Discount Retailers
- Military Installations
- Mortuaries
- Motels
- [Police -and/or- Fire] Vehicles
- Public Areas
- Public Facilities
- Public Restrooms
- Public Telephone[s] [Booths]
- Recreational Centers -or- Facilities
- Rest Stops
- Restrooms -or- Restroom Areas
- Retail and Wholesale Establishments
- Retail Businesses
- [Retail] [Wholesale] Florists
- School Buses
- Schools
- Shelters
- Shippers
- Shopping Centers
- Shops
- Shower Rooms
- Spas [Massage/Facial] [Hair/Nail] [Salons]
- Sports Arenas
- Sports Stadiums
- Subways
- Non-food handling areas of Supermarkets
- Tanning spas
- Tattoo Parlors
- Transportation Terminals
- Trains
- Universities
- Warehouse Clubs

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes -and/or- options. {Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

{Table 2 – Soils }

- Blood
- Body oils
- Dead skin
- Dirt
- Fecal matter
- Finger prints
- Food residue[s] –or-soil[s]
- Grime
- Laboratory stains
- Mold stains
- Other common soils –and/or-stains
- Other organic matter
- Urine

{Table 3 – Miscellaneous hard non-porous surface }

- [bathroom] fixtures
- [bathroom] faucet[s]
- blinds
- BP Monitors
- cabinets
- cell[ular] -or- mobile phones
- chairs
- changing tables
- chemotherapy hoods
- [children's] furniture
- closets
- counters -or- countertops
- desk[s] [tops]
- [diaper -or- infant] changing [tables]
- [restaurant] tables
- door[s] [handle[s]] [frames]
- [filing] [medicine] cabinets
- finished -or- painted walls
- floors [around toilets]
- Hard non-porous surfaces of furniture
- [hand]railings -or- rails
- hard, nonporous areas -or- surfaces behind and under sinks
- [Instrument] Stands
- lamps
- light fixtures -or- switches -or- panels
- lockers
- [medicine] cabinets
- Non-circulating footbath surfaces
- shelves [and drawers]

± hard, nonporous surfaces of

{Table 4 – soft surfaces }

- blinds[‡]
- bedding[‡]
- blankets[‡]
- chairs[‡]
- couches[‡]
- curtains[‡]
- drapes[‡]
- exercise mats[‡]
- gym bags[‡]
- headrests[‡]
- linens[‡]
- mats[‡] (for day care)
- mattresses[‡]
- seat –or- soft cushions[‡]
- shades[‡]
- sheets[‡]
- sofas[‡]
- sports equipment [lining[‡]]
- towels[‡]
- upholstered [armchairs[‡]]
furniture[‡]
- upholstery[‡]
- washcloths[‡]
- window treatments[‡]

[‡] composed of cotton or polyester

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

10/28

{Refill}

To Transfer Accel TB Into Smaller Containers *{1 gallon or less}*:

[Accel TB may be transferred into clean, properly labeled containers for use elsewhere within your facility.] The small container and transfer items (funnels or hand pumps) must be clean and dry. Pour (or pump) product directly into a properly labeled smaller container being careful not to spill any product. Keep containers sealed when not in use. Refill in a well ventilated area.

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes and/or options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

11/28

Effective in the presence of 5% serum load at 20°C on hard, non-porous environmental surfaces

**BACTERICIDAL in 1 minute,
TUBERCULOCIDAL in 5 minutes, and
FUNGICIDAL in 10 minutes against:**

Pseudomonas aeruginosa
Staphylococcus aureus
Salmonella enterica (formally known as *Salmonella choleraesuis*)
Acinetobacter baumannii
Enterococcus faecalis VRE
Escherichia coli O157:H7
Staphylococcus aureus MRSA
Klebsiella pneumoniae (ATCC 4352)
Shigella dysenteriae (ATCC 11835)
Escherichia Coli with extended beta-lactamase resistance (ESBL) (ATCC BAA-196)
Staphylococcus aureus (CA-MRSA) (NARSA NRS 384) (Genotype US300) Community Associated Methicillin Resistant
Staphylococcus aureus (CA-MRSA) (NARSA NRS 123) (Genotype US400) Community Associated Methicillin Resistant
Mycobacterium bovis
Trichophyton mentagrophytes (athlete's foot fungus)

***VIRUCIDAL in 1 minute [against the following enveloped and non-enveloped viruses]:**

(Note to reviewer: We will chose one of the these 2 statements for Feline Calicivirus):

- * Feline Calicivirus
- * Norovirus (Feline Calicivirus, as the surrogate)

- *Hepatitis C Virus (HCV)
- *Human Coronavirus
- *Herpes Simplex Type 1 (HSV-1)
- *Herpes Simplex Type 2 (HSV-2)
- *HIV-1 (AIDS Virus)
- *Rhinovirus Type 37
- *Rotavirus WA
- *Influenza A/Hong Kong
- *Poliovirus Type 1
- *Hepatitis B Virus (HBV)
- *Avian Influenza A [(ATCC VR-2072)]
- *Adenovirus type 8 (ATCC-VR-1368)

(Note to reviewer: We will choose one or more of these statements depending on available space on the product label.)

- *Respiratory illnesses attributable to Pandemic 2009 H1N1 are caused by Influenza A virus. (This product or product name) is a broad-spectrum hard surface disinfectant that has been shown to be effective against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *This product has demonstrated effectiveness against Influenza A virus and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 Influenza A virus.
- *This product has demonstrated effectiveness against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus.

Note: Bracketed[] information is optional text. Text separated by a comma(,) denotes and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

12/28

NON-FOOD CONTACT SANITIZER in 30 seconds against:

Enterococcus faecalis VRE

Escherichia coli O157:H7

Klebsiella pneumoniae

Pseudomonas aeruginosa

Salmonella enterica (formally known as *Salmonella choleraesuis*).

Staphylococcus aureus

Staphylococcus aureus MRSA

^φSoft Surface Sanitization [against the following organisms] in 1 minute:

Enterobacter aerogenes [ATCC 13048]

Staphylococcus aureus [ATCC 6538]

DIRECTIONS FOR USE:

It is a violation of Federal Law to use this product in a manner inconsistent with its labeling.

This product is not to be used as a terminal sterilant/high level disinfectant on any surface or instrument that (1) is introduced directly into the human body, either into or in contact with the blood stream or normally sterile areas of the body, or (2) contacts intact mucous membranes but which does not ordinarily penetrate the blood barrier or otherwise enter normally sterile areas of the body. This product may be used to pre-clean or decontaminate critical or semi-critical medical devices prior to sterilization or high level disinfection.

For Use as a Cleaner and/or Deodorizer:

Apply to surfaces by spray, cloth, sponge, or mop. Wipe surfaces dry [or rinse].

{General Uses}

For Use as a One-Step Cleaner/Disinfectant Product:

1. Pre-clean heavily soiled areas.
2. Apply Solution by spray, cloth, disposable wipe or mop to hard, non-porous environmental surfaces.
3. All surfaces must remain wet for 1 minute. Use a 5 minute contact time for TB and a 10 minute contact for fungi.
4. Wipe surfaces dry [or rinse]. [To avoid build up of surfactants on the surfaces, rinsing is preferred.]

For Use To Clean and Disinfect Life Science Laboratory Surfaces, Instruments, and Glassware:

1. Pre-clean heavily soiled areas.
2. Apply Solution by spray, cloth, disposable wipe or mop to hard, non-porous environmental surfaces or completely immerse pre-cleaned glassware and compatible instruments in the solution.
3. Immerse or allow the surface to remain wet for 1 minute. Use a 5 minute contact time for TB and a 10 minute contact for fungi.
4. For glassware/instrument: Rinse surface thoroughly and let air dry before reuse. For surfaces: Wipe surface dry [or rinse].
5. Change immersion solution after each use [application].

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes and/or options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

*KILLS HIV, HCV and HBV ON PRE-CLEANED ENVIRONMENTAL SURFACES/OBJECTS PREVIOUSLY SOILED WITH BLOOD/BODY FLUIDS in health care settings (Hospitals, Nursing Homes) and other settings in which there is an expected likelihood of soiling of inanimate surfaces/objects with blood / body fluids, and in which the surfaces / objects likely to be soiled with blood / body fluids can be associated with the potential for transmission of Human Immunodeficiency Virus Type 1 (HIV-1) (associated with AIDS), Hepatitis C Virus (HCV) or Hepatitis B Virus (HBV).

SPECIAL INSTRUCTIONS FOR CLEANING AND DECONTAMINATION AGAINST HIV-1 (AIDS Virus), HCV OR HBV OF SURFACES/OBJECTS SOILED WITH BLOOD/BODY FLUIDS.

Personal Protection: Disposable latex or vinyl gloves, gowns, face masks, or eye coverings as appropriate, must be worn during all cleaning of body fluids, blood, and decontamination procedures.

Cleaning Procedures: Blood / body fluids must be thoroughly cleaned from surfaces / objects before application of Accel TB.

Contact Time: Allow surface to remain wet for 1 minute to kill HIV-1, HCV and HBV. Use a 5 minute contact time for TB and a 10 minute contact for fungi.

Disposal of Infectious Material: Blood / body fluids should be autoclaved and disposed of according to Federal, State, and local regulations for infectious waste disposal.

Animal Housing Facilities (Including Veterinary Clinics, Farms and Poultry Houses):

For cleaning and disinfecting the following hard nonporous surfaces: feeding and watering equipment, utensils, instruments, cages, kennels, stables, catteries, etc.

1. Remove all animals and feeds from premises, animal transportation vehicles, crates, etc.
2. Remove all litter, droppings and manure from floors, walls and surfaces of facilities (including pens, chutes, and barns) occupied or traversed by animals.
3. Empty all troughs, racks, and other feeding and watering appliances.
4. Thoroughly clean all surfaces with soap or detergent and rinse with potable water. Saturate surfaces by wiping, [or] spraying [or mopping] with product for a period of 1 minute. Use a 5 minute contact time for TB and a 10 minute contact for fungi.
5. Immerse handling and restraining equipment such as leashes, muzzles, halters or ropes, as well as forks, shovels, and scrapers used for removing litter and manure.
6. Ventilate buildings and other closed spaces.
7. Do not house animals or employ equipment until treatment has been absorbed, set or dried. Thoroughly scrub treated feed racks, troughs, mangers, automatic feeders, fountains, and waterers with soap or detergent, and rinse with potable water before reuse.

To Pre-clean Instruments Prior to Terminal Sterilization or High Level Disinfection [As a pre-cleaning spray]:

1. Place instruments into a suitable container
2. Spray [-or- apply] this product [with] [cloth] [sponge] onto instruments to thoroughly wet all surfaces
3. Let stand for up to 1 minute. Use a 5 minute contact time for TB and a 10 minute contact for fungi.
4. Rinse instruments
5. Follow with an appropriate disinfection process

Note: Cleaning of critical and semi-critical devices must be followed by an appropriate terminal sterilization/high-level disinfection process.

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

To Disinfect Non-Critical[¶], Pre-cleaned Instruments [and medical devices]:

1. Instruments must be thoroughly pre-cleaned to remove excess organic debris, rinsed, and [rough] dried.
2. [Clean and rinse lumens of hollow instruments before filling with this product].
3. Using either tray or an ultrasonic unit, immerse instrument in this product [-or-product name] for 1 minute [at room temperature]. Use a 5 minute contact time for TB and a 10 minute contact time for fungi. [Remove and rinse instrument].
4. [-or- Spray all surfaces of instruments with this product-{or product name} until thoroughly wet. Let stand for 1 minute [at room temperature]. Use a 5 minute contact time for TB and a 10 minute contact time for fungi.
5. Wipe with a clean, damp cloth or paper towel and allow to air dry
6. {only for immersion application} Discard solution after each use

[¶]Non-critical medical devices are items that come in contact only with intact skin.

Note: Critical and Semi-critical devices must be followed up by appropriate terminal sterilization/high-level disinfection process.

For use as a disinfectant, (*virucide) on hard, non-porous (inanimate) (environmental) surfaces of footbaths (pedicure foot spa equipment):

Drain: Drain the water (from) (the unit) (foot spa) (basin) (bowl) and remove any visible debris.

Clean: Thoroughly clean all (hard, no-porous (inanimate) (environmental)) surfaces with this product [or product name] (soap) (detergent); then rinse with water and drain.

Apply : [Saturate] [Apply] this product [-or- product name] on all hard non-porous [inanimate] surfaces with a brush, cloth, mop, sponge, coarse pump, or [trigger] spray [device].

Scrub: Brush or swab thoroughly and allow solution to stand for 1 minute. Use a 5 minute contact time for TB and a 10 minute contact time for fungi.

Rinse: all [[cleaned][treated]]surfaces with fresh water and drain [the rinse water]

To sanitizer Soft Surfaces [†] [Fabrics [†]]:

- 1- Hold bottle upright 6"-8" from surfaces.
 - 2- Spray until fabric is wet. DO NOT SATURATE.
 - 3- Let stand for 1 minute. Allow to air dry
 - 4- [For difficult odors or heavy fabrics, repeat application.][Reapply as necessary].
- {-or-} Spray a light even coating on soiled area [fabric] until damp. Allow area to remain damp for 1 minute. Gently blot area with a clean, damp, color-safe cloth. Repeat as needed (for stubborn stains or heavy fabrics). Let air dry.

Note: Bracketed[]information is optional text. Text separated by a comma(,)denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

15/28

Broad Spectrum Non-Food Contact Sanitizer

Apply to hard non-porous surface; allow to remain wet for 30 seconds. Wipe dry [or rinse]. [No rinsing is required.] For heavily soiled areas a pre-cleaning is required.

{For sizes 1 gallon or less}

STORAGE AND DISPOSAL

PESTICIDE STORAGE: Store in original container in areas inaccessible to small children. Keep securely closed.

CONTAINER HANDLING: Nonrefillable container. Do not reuse or refill empty container. Rinse thoroughly. Offer for recycling [if available] or [Wrap and] Discard in trash.

{For bottles (1 gallon or less) intended to be refilled by the consumer-i.e. not for re-sale}

STORAGE AND DISPOSAL:

PESTICIDE STORAGE: Store this product in areas inaccessible to small children. Keep securely closed.

CONTAINER HANDLING: Do not reuse or refill this container except as described in the directions for use. Refill only with this product [-or-product name]. Offer empty container for recycling. If recycling is not available, discard in trash.

{For sizes over 1 gallon}

STORAGE AND DISPOSAL:

Do not contaminate water, food or feed by storage or disposal.

PESTICIDE STORAGE: Store in dry, well ventilated area away from chemicals, direct light, heat or open flame. Do not mix with other cleaning or disinfecting products.

PESTICIDE DISPOSAL: Wastes resulting from the use of this product may be disposed of on site or at an approved waste disposal facility. For more information on the disposal of unused, unwanted product and the clean up of spills, contact the EPA Regional Office or the Manufacturer for guidance.

CONTAINER HANDLING: Nonrefillable container. Do not reuse or refill this container. Triple rinse (or equivalent). Then offer for recycling or reconditioning, or puncture and dispose of in a sanitary landfill; or incinerate, or, if allowed by state and local authorities, burn. If burned, stay out of smoke.

ENVIRONMENTAL HAZARDS

{for labels with veterinary use patterns}

This product is toxic to birds, fish and aquatic invertebrates. Caution should be used when applying indoors because pets may be at risk.

{for containers of 5 gallons or 50 lbs. or more}

Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans or other waters unless in accordance with the requirements of a National Pollutant Discharge Elimination System (NPDES)

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

16/28

permit and the permitting agency has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact your State Water Board or Regional Office of the EPA.

{Reference to MSDS will not be on the residential use products}

READ M.S.D.S. BEFORE USING PRODUCT

[M.S.D.S. is available on line at *{the URL link for MSDS}*]

[Notice to User: Accel TB may not be suitable for all items or surfaces. Prolonged exposure to copper, brass, anodized aluminum and some coatings should be avoided. If you are uncertain as to the material composition of your item, confirm with the manufacturer before proceeding or visit the Compatibility section on www.virox.com for a listing of compatible materials.]

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes and/or options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

17/28

{Text for residential/household use products only}

{Ingredient information, KOOROC, Reference to "Reference sheet" and Net contents information will stay the same as Commercial Use product}

[For Residential Use]

{Marketing Claims}

ACCEL TB is an effective [cleaner] [disinfectant] [sanitizer] on non-food contact surfaces in [around] [Residential], [Household], [Homecare], [Daycare centers] [settings].

ACCEL TB is a[n] [Antibacterial][Multi-Purpose][Bathroom][Floor][Glass & Surface] [Kitchen[±]] [Restroom] [Cleaner] [Cleaning] [Disinfectant] [Disinfecting] [Sanitizer]. This product is for use in the {insert on or more of the residential/household use sites listed below (page 17)} [common hard nonporous household surfaces].

For everyday cleaning [and disinfecting] [use daily to clean [and disinfect]] [on] hard, non-porous surfaces [where germs are a concern] [made from] {insert any surface material from the surface materials listed below (page 16)} associated with kitchen[±] surfaces, hand-touch surfaces [all over the house], {or – list one or more of the hard non-porous surface listed below (page 16&17)} and other hard [non-food contact] surfaces around the house[hold] [home]. [Not recommended for use on brass], [polished wood], [granite], [marble], [and] [leather].

An effective One-step sanitizer-cleaner for use on hard non-food contact surfaces
[A heavy duty disinfectant and cleaner that] cleans, disinfects and deodorizes in one labor saving step
Cleans [and disinfects] [hard, non-porous surfaces] [all over the house] [kitchens[±] and bathrooms]

Cleans [all over the house] [in kitchen[±]] [and bathrooms]

Cleans [removes] [eliminates] [destroys] stains

Cleans [removes] [eliminates] [destroys] baked-on food

Cleans [removes] [eliminates] [destroys] burnt-on food

Cleans [tough] grease and grime

Cleans [tough] soap scum

Cleans without bleaching

Contains no [abrasives] [bleach]

Cuts [cleans] kitchen[±] [and] [bathroom] [and] household grime and soils []

Easy to use – just spray [and] [walk away]

Effective – Cleans soap scum

/ Easy / Effective: Use [in] [on] [the] {insert one or more residential/household use sites listed below (page 17)}

For non-scratch cleaning of showers and tubs, shower doors and curtains[±], fixtures and toilet bowls. {Note: the sentence above will be used with this claim qualifier}: ± hard, nonporous surfaces of

For multiple cleaning tasks

Note: Bracketed [information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

18/28

For use [in] [Household], [Homecare], [Daycare] settings [as a multi-purpose disinfectant cleaner].
Formulated with patented hydrogen peroxide technology

For everyday use [in kitchens⁺ and] [bathrooms] [restrooms] [all over the house].

For a cleaner, fresher household

For everyday use

For any non-food hard, non-porous surface where germs are a concern.

For use[in] [on] [the] {insert one or more residential/household use sites from the list below} [as a multi-purpose disinfectant cleaner]

Good for most indoor cleaning tasks.

Keeps day care centers clean

Leaves [a fresh, clean scent] [no [dull] [sticky] residue].

Leaves your [home] [house] [washroom] [restroom] smelling clean with a clean fresh scent

Leaves your kitchen⁺ and bathroom with a fresh, clean scent

[No rinse required.] No streaking [or filming]

[Eliminates] [removes] [food] odors

Removes [the most common] [household] allergens [around your home] [around your kitchen⁺] [around your bathroom] [on your floors]⁺⁺

{Note: the sentence above will be used with this claim qualifier}: ⁺⁺This product removes the following [non-living] allergens: [cat dander], [cockroach matter], [cockroach debris], [cockroach particles], [dog dander], [dust mite debris], [pet dander], [pollen particles]

Use this product throughout your home to clean [beverage stains] [dirt] [food stains] [grime] [pet stains] [soap scum]

Use only one product to get a streak-free shine plus antimicrobial action

Will not leave grit or soap scum

[CLAIMS] [ORGANISMS]:

[Bacteria] [Bactericidal]:

[Accel Tb] [When used as directed] [is effective against] [kills] [odor-causing] Bacteria: *Pseudomonas aeruginosa*, *Staphylococcus aureus*, *Salmonella enterica* [formerly known as *Salmonella choleraesuis*], [*Escherichia coli* O157:H7], [*Acinetobacter baumannii*], [Methicillin Resistant *Staphylococcus aureus* (MRSA)], [Vancomycin Resistant *Enterococcus faecalis* (VRE)], [*Klebsiella pneumonia*], [*Shigella dysenteriae*], [*Escherichia Coli* with extended beta-lactamase resistance (ESBL)] [and] [Community Associated Methicillin Resistant *Staphylococcus aureus* (CA-MRSA)] [commonly found] [on hard non-porous inanimate surfaces] [in households] [using approved AOAC test methods] [under Good Laboratory Practices, [GLP's]], [in the presence of 5% serum load] [and] [at] a 1 minute contact time [in 1 minute].

{or}

Kills *Pseudomonas aeruginosa*, *Staphylococcus aureus*, *Salmonella enterica* [formerly known as *Salmonella choleraesuis*], [*Escherichia coli* O157:H7], [*Acinetobacter baumannii*], [Methicillin Resistant *Staphylococcus aureus* (MRSA)], [Vancomycin Resistant *Enterococcus faecalis* (VRE)], [*Klebsiella pneumonia*], [*Shigella dysenteriae*], [*Escherichia Coli* with extended beta-lactamase resistance (ESBL)]

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes and/or options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

19/14

[and] [Community Associated Methicillin Resistant *Staphylococcus aureus* (CA-MRSA)] on hard, non-porous [kitchen†] [bathroom] [restroom] [household] surfaces in 1 minute.

{Note: Blood-borne viruses (HIV, HBV and HCV) and veterinary virus (Avian Influenza) will not be listed on residential/household product label}

*[Viruses] [Virucidal]:
[Accel Tb] [when used as directed] [is effective against]: [Herpes Simplex Virus Type 1], [Herpes Simplex Virus Type 2], [Human Coronavirus], [Rhinovirus Type 37], [Influenza A/Hong Kong], [Poliovirus Type 1], [Rotavirus WA], [Norovirus] [Feline Calicivirus as the surrogate] and Adenovirus type 8 [using approved ASTM test methods] [under Good Laboratory Practices, [GLP's]], [in the presence of 5% serum load] [and] [in] 1 minute [contact time].

{or}

*Kills [Herpes Simplex Virus Type 1], [Herpes Simplex Virus Type 2], [Human Coronavirus], [Rhinovirus Type 37], [Influenza A/Hong Kong], [Poliovirus Type 1], [Rotavirus WA], [Norovirus] [Feline Calicivirus as the surrogate] and Adenovirus type 8 when used as directed on hard, non-porous inanimate surfaces with a 1 minute contact time.

{Note: We will choose one or more of these statements depending on available space on the product label.}

- Respiratory illnesses attributable to Pandemic 2009 H1N1 are caused by Influenza A virus. (This product or product name) is a broad-spectrum hard surface disinfectant that has been shown to be effective against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- This product has demonstrated effectiveness against Influenza A virus and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 Influenza A virus.
- This product has demonstrated effectiveness against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- Kills Pandemic 2009 H1N1 Influenza A virus [formerly called swine flu].

[FUNGI] [FUNGICIDAL]: [When used as directed] [This product is fungicidal against the pathogenic fungi] *Trichophyton mentagrophytes* [the fungus which causes Athlete's Foot] [in the presence of 5% serum load] [and] [in] 10 minutes [contact time] [on hard non-porous surfaces] [found in] [bathroom][bathtub], [shower stalls], [locker rooms], [or] [other hard surfaces commonly contacted by bare feet].

Non-Food Contact Surface Sanitizer for hard non-porous surfaces – [in the presence of 5% serum load] [and] [in] 30 seconds [contact time] [on hard, non-porous environmental surfaces]:

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

20/28

Klebsiella pneumoniae, Salmonella enterica [formerly known as Salmonella choleraesuis], Pseudomonas aeruginosa, Staphylococcus aureus, Escherichia coli O157:H7, [Methicillin Resistant Staphylococcus aureus (MRSA)] and [Vancomycin Resistant Enterococcus faecalis (VRE)]

Malodor[s] [Activity] [Counteractancy] – eliminates [destroys] odors and odor-causing bacteria* on hard, non-porous surfaces in restroom areas, behind and under sinks and counters, and storage areas [and other places where bacterial growth can cause malodors].

{Note to reviewer: Tuberculocidal claim will NOT be on the label with residential use language}

{Other claims-Disinfection}

Accel Tb Disinfects [Deodorizes] [hard, non-porous surfaces] as it cleans.

A disinfecting cleaner for use in {insert residential use sites from the list below (page 17)}

Cleans and disinfects non-food hard nonporous surfaces (all over the house) (kitchens† and) (bathrooms) (restrooms).

Controls (Eliminates) (kitchen†) odor-causing bacteria

Disinfects (Deodorizes) (and Sanitizes) as it cleans

Disinfects (Deodorizes) hard, non-porous surfaces

Disinfects as it cleans

Disinfects - kills germs for a deep down clean

Eliminates bacteria from (kitchen†) (bathroom) (washroom) (restroom) surfaces

Eliminates (kills) odor-causing bacteria

Eliminates odors [caused by bacteria]

Kills antibiotic resistant bacteria**

Kills bacteria

Kills bacteria commonly found in the (kitchen†) (and) (bathroom)

Kills germs

Kills germs while it cleans

Kills household bacteria

Kills (household) bacteria (and sanitizes)

Kills kitchen† and bathroom bacteria

Kills odor-causing bacteria

Kills odor-causing (household) bacteria

Kills (Destroys) (Eliminates) germs

Kills (Destroys) (Eliminates) germs while it cleans

Kills (Eliminates) odor-causing bacteria in the (kitchen†) (bathroom) (restroom) (all around the house)

Kills (kitchen†) (bathroom) (household) germs

Kills bacteria commonly found in kitchens† (in 1 minute)

Kills bacteria and viruses* on hard, non-porous (kitchen†) (bathroom) (restroom) (household) surfaces in 1 minute

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

{Other claims-Virucidal*}

Kills Flu Virus on hard, nonporous surfaces

{Disinfection claim qualifier}

****Kills (99.9% of) *Staphylococcus aureus* MRSA, *Enterococcus faecalis* VRE, [*Escherichia Coli* with extended beta-lactamase resistance (ESBL)] [and] [Community Associated Methicillin Resistant *Staphylococcus aureus* (CA-MRSA)]**

{Note: the following section on summary of claims is optional and might be inserted in a band at the bottom of the label}

FUNGICIDAL: 10 MIN.
VIRUCIDAL: 1 MIN.
BACTERICIDAL: 1 MIN.
BROAD-SPECTRUM NON-FOOD CONTACT SANITIZER: 30 SEC.

DIRECTIONS FOR USE:

It is a violation of Federal Law to use this product in a manner inconsistent with its labeling.

{Packaging Related Statement – Appropriate language will be selected from this list, depending on packaging.}

{For bottles with induction seal}

Unscrew cap, remove induction seal and place the [snap top] [long spout] cap back on the bottle.

{For bottles with sprayer}

{Operating Trigger}

To Operate:

Open hinged cover of sprayer and snap into opening on top. -or- Turn nozzle [counterclockwise] to "spray" -or- "stream" [setting], -or- Adjust [nozzle] to desired pattern.

{Optional Directions for Product Supplied in Refill Bottles: }

Refill only with this product.

{Alternate for Refill Bottle}

To Refill [Spray Bottles]:

[Remove:]

Remove trigger sprayer -or- cap from empty bottle.

[Pour :]

Unscrew cap on refill and pour contents directly into empty bottle. Use a funnel to minimize product spills –or- waste. Pour product into spray bottle over sink or tub basin.

[Use:]

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes–and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

Replace trigger sprayer and use as you normally would.
-or- Unscrew cap and transfer your trigger to this bottle,
-or- Replace cap and use as you normally would.

{Cleaning and General Use}

General [Kitchen[‡]/Bathroom] Cleaning: [Remove cooking ingredients and cooked food from areas to be cleaned.] Spray product directly onto soils and wipe clean. *{-or-}* Directly apply [this product] [-or- product name] with a cloth, microfiber cloth, sponge, mop or trigger sprayer to completely wet surface and wipe clean. No rinsing needed. Repeat for heavily soiled areas. For stubborn stains or heavily soiled areas or tougher jobs, allow product to penetrate [dirt] before wiping.

To Clean/Remove Soap Scum: Spray product onto soils and wipe clean [with a dry paper towel or lint-free cloth or sponge]. *{-or-}* [Just] spray on and wipe off [with a dry paper towel or lint-free cloth or microfiber cloth or sponge]. No rinsing necessary. [For best results, use a dry paper towel or lint-free cloth or microfiber cloth or sponge]. Repeat for heavily soiled areas. For stubborn stains or heavily soiled areas or tougher jobs, allow product to penetrate [dirt -and/or- soap scum] before wiping. [For best results, use regularly to prevent dirt and soap scum build up].

To Clean [Nonporous] Surfaces [and] [or] [small areas of] [Floors]: Spray soiled area, then wipe clean.

For spot cleaning: Spray and wipe clean with damp sponge -or- mop or cloth.

{Deodorization}

To clean and Deodorize Toilets: To clean and deodorize toilet bowl, squirt liberally (1/2 cup) on toilet sides and upper toilet bowl rim. Swab *{-or-}* brush all surfaces and flush.

{or}

To Deodorize: Spray product directly onto [non-porous surfaces] *{or}* {Spray 6-8 inches from the surface} until completely wet. *{-or-}* Directly apply [this product] [-or- product name] with a cloth, microfiber cloth, sponge, mop or trigger sprayer to completely wet surface. Let stand for [contact time listed [below] [or] [on label]] [to kill odor causing [bacteria] [microorganisms] [organisms]]. Allow to air dry [or rinse]. For heavily soiled areas, a pre-cleaning is required: [If streaking is observed, wipe with a clean, damp [cloth or] [microfiber cloth or] [paper towel].]

{Allergen Destruction}

To [clean and] destroy specified allergens: [Set trigger to SPRAY.] Spray, wait 5 minutes, and wipe excess. [Rinse.] Allow to air dry. [If streaking is observed, wipe with a clean, damp [cloth or] paper towel.]

Allergens:

Note: Bracketed[] information is optional text. Text separated by a comma(,) denotes -and/or- options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

23/28

- Cockroach matter -or- particles
- Dust mite matter -or- particles
- Pet dander -or- dog and cat dander

{Disinfection}

For use as a [daily] [one-step] Disinfectant [To Disinfect]: Pre-clean heavily soiled areas. Spray product directly onto [non-porous surfaces] *{or}* [Spray 6-8 inches from the surface] until completely wet. *{-or-}* [Directly] apply [solution] [this product] [-or- product name] with [by] a cloth, microfiber cloth, sponge, mop or trigger sprayer to completely wet [hard] [non-porous] surface. Allow the surface to remain [visibly] wet for [contact time listed [below] [or] [on label]]. Allow [Let] to air dry [or wipe surface dry] [or rinse]. [If streaking is observed, wipe with a clean, damp [cloth or] [microfiber cloth or] [paper towel]].

{The following paragraph (To Kill Fungi) is optional}

To Kill Fungi: Pre-clean heavily soiled areas. Spray product directly onto [non-porous surfaces] *{or}* [Spray 6-8 inches from the surface] until completely wet. *{-or-}* [Directly] apply [solution] [this product] [-or- product name] with [by] a cloth, microfiber cloth, sponge, mop or trigger sprayer to completely wet [hard] [non-porous] surface. Allow the surface to remain [visibly] wet for 10 minutes. Wipe surfaces dry [or rinse] [or allow to air dry].

{Non-food contact sanitization}

For use as a Non-Food Contact Sanitizer: Pre-clean heavily soiled areas. Spray product directly onto [non-porous surfaces] *{or}* [Spray 6-8 inches from the surface] until completely wet. *{-or-}* [Directly] apply [solution] [this product] [-or- product name] with [by] a cloth, microfiber cloth, sponge, mop or trigger sprayer to completely wet [hard] [non-porous] surface. Allow the surface to remain [visibly] wet for 30 seconds. Wipe surfaces dry [or rinse] [or allow to air dry].

STORAGE AND DISPOSAL:

PESTICIDE STORAGE: Store in original container in areas inaccessible to small children. Keep securely closed.

CONTAINER HANDLING: Nonrefillable container. Do not reuse or refill this container. Wrap [container] and put in trash or offer for recycling if available.

{For bottles intended to be refilled by the consumer}

STORAGE AND DISPOSAL:

PESTICIDE STORAGE: Store in areas inaccessible to small children. Keep securely closed.

CONTAINER HANDLING: Do not reuse or refill this container except as described in the directions for use. Refill only with this product [-or-product name]. Offer empty container for recycling. If recycling is not available, discard in trash.

Note: Bracketed[] information is optional text. Text separated by a comma(,) denotes-and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike through~~ text means it has been removed.

{List of surface materials, hard non-porous surfaces and use site for use in the Residential Use products}

{Table 5 - Surface material }

Chrome	Glazed tile	Sealed fiberglass [polyester, vinyl ester and epoxy resins]
Crystal (non-food contact areas)	Linoleum	Stainless steel
Enamel	Metals [except copper and brass]	Synthetic marble
Fiberglass fixtures	Mirrors	Vinyl
Glass	Plastic laminate	
Glazed ceramic	Plastic surfaces	
Glazed porcelain		

{Table 6 - Hard Non-porous surfaces}

Outer surfaces of air vents	Exercise equipment	Plastic laundry basket
Appliances exterior	Exercise mats	Recycling bins
Bathrooms	Exterior of toilet surfaces	Refrigerator / Freezer exterior
Bathroom fixtures	Exterior of pipes	Remote controls
[Bathroom] [kitchen] faucet	Footboards	Sealed granite
Bathroom doorknobs	Finished hardwood	Shelves
Bathtubs	Fixture [(chrome) (stainless steel)]	Shower [door] [curtain] ±
Bed frames	Floor (glazed tile)	Showers [stalls]
[Behind and under] counters±	Floor (vinyl)	Sink [basin]
[Behind and under] sinks±	Furniture±	Stainless steel surfaces
Blood Pressure monitors	Garbage [trash] can [bin]	Stereo consoles
Burner trays	Glazed ceramic tile	Storage bins±
Cabinet s±	Glazed porcelain tile	Stool
Cages	[Hand] railings	Strollers
Cell[ular] – or digital phones	Hard, nonporous surfaces of car	Tables
Chair s± (not including high chairs)	[boat] [trailer] interior	Tabletop
Changing tables	Infant cribs	Telephone
Closets [handles]	[Inside of] drawers	Tiled walls
Computers	Grill exterior	Toilet bowl exterior
Computer keyboards	Laminated surfaces	Toilet handholds
Computer mouse±	Lamps	Toilet rims [seats]
Computer peripherals	Light fixture	Toys±
Computer screen cords	Medicine cabinet	Training toilets
Countertop	Metal blinds	Tools
Cupboard	Metal surfaces	[Bathroom] vanity
Desk[s][tops]	Microwave exterior	Vinyl
Diaper pails	Patio furniture±	[Washable] walls
Door [knobs] [handles] [frames]	Oven exterior	Wash basins
	Packing benches	Walkers
	Phone cradles	Washing machine exterior
	Piano keys	Windows
	Picnic table	Work bench

Note: Bracketed [] information is optional text. Text separated by a comma (,) denotes –and/or– options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

LS/28

± hard, nonporous surfaces of

{Table 7 - Residential/Household use sites }

Basement	Garbage room	Playroom
Bathroom	Kitchen‡	Restroom
Bedroom	Laundry room	Storage room
Dining room	Living room	Tool shed
Exercise room	Nursery [room]	Washroom
Family room	Pet areas	
Garage		

‡Non-food contact surfaces

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes—and/or-options.

{Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

26/28

{Secondary/transfer container label front}

ACCEL TB

Filled by customer

Active Ingredient:

Hydrogen Peroxide0.5%

Other Ingredients.....99.5%

Total.....100.0%

KEEP OUT OF REACH OF CHILDREN

{Secondary/transfer container label front or back}

DIRECTIONS FOR USE:

It is a violation of Federal Law to use this product in a manner inconsistent with its labeling.

Follow the directions for use on the Accel TB label when applying this product.

or {insert appropriate use sites/directions from master label}

STORAGE AND DISPOSAL:

PESTICIDE STORAGE: Store this product in areas inaccessible to small children. Keep securely closed.

CONTAINER HANDLING: Do not reuse or refill this container except as described in the directions for use. Refill only with this product [-or-product name]. Offer empty container for recycling. If recycling is not available, discard in trash.

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes-and/or-options. {Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, **bold** and *italics* are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. ~~Strike-through~~ text means it has been removed.

27/28

{This list of organisms is for informational purposes. The organisms and related claims may or may not be listed on the final printed label or on a reference sheet and if listed may use a different format.}

VIRUCIDAL in the presence of 5% serum load and 1 minute contact time at 20°C on hard, non-porous environmental surfaces

- Poliovirus Type 1, Strain Brunhilde (ATCC VR-1000)
- HIV-1 (AIDS Virus), Strain HTLV-III_B (HIV-1), (Acquired from Adv. Biotechnologies, Inc.)
- Feline Calicivirus, Strain F9 (ATCC VR-782)

(Note to reviewer: We will chose one of the these 2 statements for Feline Calicivirus):

- * Feline Calicivirus
- * Norovirus (Feline Calicivirus, as the surrogate)

- Human Coronavirus (ATCC VR-740)
- Influenza A/Hong Kong (ATCC VR-544)
- Herpes Simplex Virus, Type 1 (HSV-1) (ATCC VR-733)
- Herpes Simplex Virus, Type 2 (HSV-2) (ATCC VR-734)
- Rhinovirus Type 37, Strain 151-1 (ATCC VR-1147)
- Rotavirus WA (Acquired from University of Ottawa)
- Hepatitis C Virus (HCV)
- Hepatitis B Virus (HBV)
- *Avian Influenza A [(ATCC VR-2072)]
- *Adenovirus type 8 (ATCC VR-1368)

(Note to reviewer: We will choose one or more of these statements depending on available space on the product label.)

- *Respiratory illnesses attributable to Pandemic 2009 H1N1 are caused by Influenza A virus. (This product or product name) is a broad-spectrum hard surface disinfectant that has been shown to be effective against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *This product has demonstrated effectiveness against Influenza A virus and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 Influenza A virus.
- *This product has demonstrated effectiveness against Influenza Type A2 (Hong Kong), (VR-544), and is expected to inactivate all Influenza A viruses including Pandemic 2009 H1N1 (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus (formerly called swine flu).
- *Kills Pandemic 2009 H1N1 Influenza A virus.

Virucidal activity was determined by the efficacy test methods for virucidal agents intended for inanimate environmental surfaces; ASTM 1053-97 Standard Test Method for Efficacy of Virucidal Agents Intended for Inanimate Environmental Surfaces and EPA protocols for surrogate viral testing.

HOSPITAL DISINFECTANT: BACTERICIDAL in the presence of 5% serum load and 1 minute contact time at 20°C on hard, non-porous environmental surfaces against

- Pseudomonas aeruginosa* (ATCC 15442) *Staphylococcus aureus* (ATCC 6538) *Salmonella enterica* (formally known as *Salmonella choleraesuis*) (ATCC 10708) *Escherichia Coli O157:H7* (ATCC 35150) *Staphylococcus aureus* MRSA (ATCC 33592) *Enterococcus faecalis* VRE (ATCC 51575) *Acinetobacter baumannii* (ATCC 19606) *Klebsiella pneumoniae* (ATCC 4352) *Shigella dysenteriae* (ATCC 11835) *Escherichia Coli* with extended beta-

Note: Bracketed [] information is optional text. Text separated by a comma(,)denotes-and/or-options. {Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.

28/28

lactamase resistance (ESBL) (ATCC BAA-196) *Staphylococcus aureus* (CA-MRSA) (NARSA NRS 384) (Genotype US300) Community Associated Methicillin Resistant *Staphylococcus aureus* (CA-MRSA) (NARSA NRS 123) (Genotype US400) Community Associated Methicillin Resistant

Bactericidal activity was determined by the AOAC Use Dilution Test Method.

TUBERCULOCIDAL in the presence of 5% serum load and 5 minute contact time at 20°C on hard, non-porous environmental surfaces

Mycobacterium bovis (BCG) (OT 451C150)

Tuberculocidal activity was determined by the EPA Quantitative Tuberculocidal Activity Test Method.

FUNGICIDAL in the presence of 5% serum load and 10 minute contact time at 20°C on hard, non-porous environmental surfaces

Trichophyton mentagrophytes (ATCC 9533)

Fungicidal activity was determined by the AOAC Fungicidal Activity of Disinfectants Method.

BROAD-SPECTRUM NON-FOOD CONTACT SANITIZING in the presence of 5% serum load and 30 second contact time at 20°C on hard, non-porous environmental surfaces

Klebsiella pneumoniae (ATCC 4352) *Salmonella enterica* (formally known as *Salmonella choleraesuis*) (ATCC 10708) *Pseudomonas aeruginosa* (ATCC 15442) *Staphylococcus aureus* (ATCC 6538) *Staphylococcus aureus* MRSA (ATCC 33592) *Enterococcus faecalis* VRE (ATCC 51575) *Escherichia Coli* O157:H7 (ATCC 35150)

Sanitizing activity was determined by the EPA Sanitizer Test for Inanimate, Non-Food Contact Surfaces and ASTM E1153 Standard Test Method for Efficacy of Sanitizers Recommended for Inanimate Non-Food Contact Surfaces.

Note: Bracketed[] information is optional text. Text separated by a comma(,)denotes-and/or-options. {Bracketed Text} is for administrative purposes only and will not appear on the printed label. Variables such as CAPITALIZATION, plurals or singular, bold and italics are optional unless specified in 40 CFR. Listed uses and use sites can be used partially or in their entirety. Underlined text is new. Strike-through text means it has been removed.