

UNITED STATES ENVIRONMENTAL PROTECTION AGENCY WASHINGTON, DC 20460

OFFICE OF CHEMICAL SAFETY AND POLLUTION PREVENTION

September 16, 2022

Jeremy D. Malone Consultant Advanced Biocide Technologies, Inc. c/o Spring Regulatory Sciences 6620 Cypresswood Drive - Suite 250 Spring, TX 77379 Electronic Transmittal: [Jeremy@regulatory.com]

Subject: PRIA Label Amendment – Addition of two organisms Product Name: BIOTAB7 EPA Registration Number: 91399-2 Received Date: February 19, 2021 Action Case Number: 00292519

Dear Jeremy Malone:

The amended label referred to above, submitted in connection with registration under the Federal Insecticide, Fungicide and Rodenticide Act, as amended, is acceptable. This approval does not affect any conditions that were previously imposed on this registration. You continue to be subject to existing conditions on your registration and any deadlines connected with them.

A stamped copy of your labeling is enclosed for your records. This labeling supersedes all previously accepted labeling. Pursuant to 40 CFR 156.10(a)(6), you must submit one copy of the final printed labeling before you release the product for shipment with the new labeling. In accordance with 40 CFR 152.130(c), you may distribute or sell this product under the previously approved labeling for 18 months from the date of this letter. After 18 months, you may only distribute or sell this product if it bears this new revised labeling or subsequently approved labeling. "To distribute or sell" is defined under FIFRA section 2(gg) and its implementing regulation at 40 CFR 152.3.

Should you wish to add/retain a reference to the company's website on your label, then please be aware that the website becomes labeling under FIFRA and is subject to review by the Agency. See FIFRA section 2(p)(2). If the website is false or misleading, the product would be misbranded and unlawful to sell or distribute under FIFRA section 12(a)(1)(E). 40 CFR 156.10(a)(5) lists examples of statements EPA may consider false or misleading. In addition, regardless of whether a website is referenced on your product's label, claims made on the website may not substantially differ from those claims approved through the registration process, FIFRA section 12(a)(1)(B). Therefore, should the Agency find or if it is brought to our attention that a website contains false or misleading statements or claims substantially differing from the EPA approved registration, the website will be referred to the EPA's Office of Enforcement and Assurance.

Page 2 of 2 EPA Reg. No. 91399-2 Action Case No. 00292519

Your release for shipment of the product constitutes acceptance of these conditions. If these conditions are not complied with, the registration will be subject to cancellation in accordance with FIFRA section 6. If you have any questions, please contact Wanda Henson by phone at (202) 566-0650, or via email at henson.wanda@epa.gov.

Sincerely,


Demson Fuller, Product Manager 32 Regulatory Management Branch I Antimicrobials Division (7510P) Office of Pesticide Programs

Enclosure

[Master Label]

{Front panel start}

BIOTAB7



{Alternate Brand Names: Meditab5, Dtab8, Advanced Biocide X, ABX, ABX3, Biotab7 Plus}

[Biocide, Disinfectant, Cleaner and Deodorant]

[Biotab7 meets efficacy standards for broad spectrum and hospital disinfection on hard non-porous surfaces using the AOAC Use- Dilution Test Methods with 500 ppm Biotab7 in 400 ppm hard water and supplemented with 5% soil load against *Staphylococcus aureus* and *Pseudomonas aeruginosa*.]

[Disinfectant, Deodorant, Slimicide, Fungicide, Algaestat, Mildewstat, Cleaner]

[All-In-One, Multi-Surface, One-Step, Bactericidal, Tuberculocidal, Odor Counteractant, Odor Neutralizer]

[Commercial, Medical, Residential, Retail, Industrial, Institutional]

[Hospital [-Grade] Disinfectant Cleaner, Multi-Surface (hard, non-porous) Disinfectant Cleaner, Cleans All Hard, Non-Porous Water Washable Surfaces]

[[Kills [99.9%] Germs][Ordinary Cleaners [don't][can't]]

Active Ingredient:	
Sodium chlorite:	20%
Other Ingredients	80%
Total	100%

{Note to Reviewer: In accordance with 40 CFR 156.68(d), all first aid statements, as prescribed, will appear on the front panel of the product label.}

	FIRST AID
lf in Eyes	Hold eye open and rinse slowly and gently with water for 15 – 20 minutes. Remove contact lenses, if present, after the first 5 minutes, then continue rinsing eye. Call a poison control center or doctor for treatment advice.
If on Skin or Clothing	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15 – 20 minutes. Call a poison control center or doctor for treatment advice.
lf Inhaled	Move person to fresh air. If person is not breathing, call 911 or an ambulance then give artificial respiration, preferably mouth to mouth. Call a poison control center or doctor immediately for treatment advice.
If Swallowed	Have person sip a glass of water if able to swallow. Do not induce vomiting unless told to do so by the poison control center or doctor. Do not give anything by mouth to an unconscious person. Call a poison control center or doctor immediately for treatment advice.
	ontrol center or doctor immediately for treatment advice. Have the product container or label with you poison control center or doctor, or when going for treatment.
NOTE TO PHYS	ICIAN: Probable mucosal damage may contraindicate the use of gastric lavage.

KEEP OUT OF REACH OF CHILDREN DANGER

[See back/side panel for additional precautionary statements]

Net Contents/Weight: {end front panel}

> Page 1 of 19 Biotab7 (91399-2) Advanced Biocide Technologies Inc. Amendment – Label Version (5), August 2, 2022

[Package contains ____ Pouches, ____ oz. (___g) each]
EPA Reg. No: 91399-2
EPA Est. No.: 90133-CHN-001
Manufactured By:
Advanced Biocide Technologies Inc.
523 Sawgrass Corporate Parkway
Sunrise, FL 33325
EMERGENCY #: INFOTRAC 1-800-535-5053
[Advanced Biocide Technologies Inc. and the Advanced Biocide logo are trademarks of Advanced Biocide Technologies Inc. and are registered in the United States and abroad. All rights reserved.]

PRECAUTIONARY STATEMENTS

Hazards to Humans and Domestic Animals: DANGER: Corrosive. Causes irreversible eye damage and skin burns. May be fatal if inhaled. Do not get in eyes, on skin, or on clothing. Wear face shield or goggles and rubber gloves when handling. Wear coveralls worn over long-sleeved shirt and long pants. Wear a NIOSH/MSHA approved respirator appropriate for chlorine dioxide when using a high-pressure sprayer. Open in a well-ventilated area. Avoid breathing vapors. Vacate poorly ventilated area as soon as possible. Do not return until strong odors have dissipated. Wash thoroughly with soap and water after handling and before eating, drinking, chewing gum, using tobacco, or using the toilet. Remove and wash contaminated clothing before reuse. Handlers applying product in an occupational setting must wear gloves.

PHYSICAL OR CHEMICAL HAZARDS: OXIDIZER. Product contains a strong oxidizer. Always flush drains before and after use. Mix with water according to label directions. Extended contact with metals may cause discoloration or pitting. Do not mix with vinegar, hydrochloric, nitric or acetic acid or other cleaning agents. [For containers greater than 5 gallons]

ENVIRONMENTAL HAZARDS: This pesticide is toxic to fish and aquatic invertebrates, oysters, and shrimp. Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans or other waters unless in accordance with the requirements of a National Pollutant Discharge Elimination System (NPDES) permit and the permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact your State Water Board or Regional Office of the EPA. [For containers less than or equal to 5 gallons]

STORAGE AND DISPOSAL: Do not contaminate food or feed by storage or disposal. **STORAGE**: Store away from children and away from food or feed. Keep tightly closed until ready to use. Reclose package tightly after use. Store product in original, unopened containers at or below 25°C (77°F). Keep away from direct sunlight and heat to avoid deterioration. In case of spill, flood areas with large quantities of water. **PESTICIDE DISPOSAL**: Pesticide wastes may be hazardous. Improper disposal of excess pesticide, spray mixture or rinsate is a violation of Federal Law. If these wastes cannot be disposed of by use according to label instructions, contact your State Pesticide or Environmental Control Agency, or the Hazardous Waste Representative at the nearest EPA Regional Office for guidance. **CONTAINER HANDLING**: Non-refillable container. Do not re-use or refill container. Offer for recycling if available or reconditioning if appropriate or place in trash. **ALUMINUM AND PLASTIC BAG HANDLING**: Do not re-use containers. Completely empty container and discard. Do not contaminate food or feed by storage or disposal.

[Warranty: Seller expressly warrants the product conforms to its chemical description. There are no warranties associated with the sale of the product either express or implied, including but not limited to the warranties of fitness for a particular purpose or use.]

[Certified to NSF/ANSI Standard 60 for Drinking Water. Max use level: 30 ppm. (solute)] [Certified to NSF Nonfood Compounds D2 not requiring a rinse, in and around food processing areas] [For use in institutional [, residential] and commercial applications.]

It is recommended, if user is not sure of chlorine dioxide levels, to use a chlorine dioxide test strip or kit such as Hach Colorimeter II.

[Biotab7 is a [patented] formula. It controls microbial contamination and disinfects. Efficacy of Biotab7 depends on degree of activation. The tablets must be fully activated with water. Read instructions carefully prior to use.]

[This product is not to be used as a terminal sterilant/high level disinfectant on any surface or instrument that (1) is introduced directly into the human body, either into or in contact with the bloodstream or normally sterile areas of the body, or (2) contacts intact mucous membranes but which does not ordinarily penetrate the blood barrier or otherwise enter normally sterile areas of the body. This product may be used to preclean or decontaminate critical or semi-critical medical devices prior to sterilization or high level disinfection.]

Emerging Viral Pathogens Claim

This product qualifies for emerging viral pathogen claims per the EPA's 'Guidance to Registrants: Process for Making Claims Against Emerging Viral Pathogens not on EPA-Registered Disinfectant Labels' when used in accordance with the appropriate use directions indicated below.

This product meets the criteria to make claims against certain emerging viral pathogens from the following viral categories:

- Enveloped Viruses
- Large Non-Enveloped Viruses

For an emerging viral pathogen that is a/an	follow the directions for use for the following supporting organism(s) on the label
Enveloped virus	Feline calicivirus
Large Non-Enveloped Viruses	Feline calicivirus

Biotab7 has demonstrated effectiveness against viruses similar to [name of emerging virus] on hard, non-porous surfaces. Therefore, Biotab7 can be used against [name of emerging virus] when used in accordance with the directions for use against feline calicivirus on hard, non-porous surfaces. Refer to the [CDC or OIE] website at [pathogen-specific website address] for additional information.

[Name of illness/outbreak] is caused by [name of emerging virus]. Biotab7 kills similar viruses and therefore can be used against [name of emerging virus] when used in accordance with the directions for use against feline calicivirus on hard, non-porous surfaces. Refer to the [CDC or OIC] website at [website address] for additional information.

Biotab7 is proven effective as a disinfectant on hard, non-porous surfaces against the following in:	
5 Minute Contact Time	1 Minute Contact Time
Staphylococcus aureus ATCC 6538 [S. aureus]	*Feline calicivirus, Strain F-9 ATCC VR-782 [Norovirus]
Methicillin Resistant Staphylococcus aureus ATCC 33591 [MRSA]	*Influenza A [H1N1]/Virginia/ATCC1/2009, ATCC VR- 1736
Pseudomonas aeruginosa ATCC 15442 [P. aeruginosa]	Trichophyton interdigitale ATCC 9533 [Athletes Foot Fungus]
Enterococcus faecalis [E. faecalis] ATCC 51299 [VRE]	Carbapenem-Resistant Klebsiella pneumoniae ATCC BAA- 2146 [CRE]
Escherichia coli ATCC BAA-2469 [CRE]	
Salmonella enterica ATCC 10708 [S. enterica]	Odor
Listeria monocytogenes ATCC 49594 [L. monocytogenes]	Kills odor-causing bacteria, fungi, mold, and mildew.

10 Minute Contact Time	2 Minute Contact Time
Mycobacterium bovis BCG ATCC 35743 [M. bovis] [Tuberculosis] [TB]	Elizabethkingia meningoseptica ATCC 13253 [E. meningoseptica]

DIRECTIONS FOR USE

It is a violation of federal law to use this product in a manner inconsistent with its labeling. The product label must be in possession of the user at the time of application. Read the label before using this product. [See Inside Booklet for Directions for Use]

DILUTION INSTRUCTIONS

[Biotab7 meets efficacy standards for broad spectrum and hospital disinfection on hard non-porous surfaces using the AOAC Use-Dilution Test Methods with 500 ppm Biotab7 in 400 ppm hard water and supplemented with 5% soil load against *Staphylococcus aureus* and *Pseudomonas aeruginosa*.]

[Product has a linear concentration, independent from volume of water or target PPM. It is recommended you wait 1 minute to reach full concentration.]

[Dosing table provides multiple ways target PPM can be reached. Individual solutions will be provided to meet your specific needs.]

[1 gram (0.035 oz.), 6 grams (0.21 oz.), or 20 gram (0.71 oz.) Biotab7® tablets per specified amount of tap water]				
Amount of WaterUseof 1 gramof 6of 20WaterConcentrationtabletsgramgram				
5000 Gallons 1 ppm 11				11
50 Gallons	5 ppm	11	2	1
10 Gallons	20 ppm	9	2	
100 Gallons	100 ppm		72	22
10 Gallons	250 ppm		18	6
50 Gallons 300 ppm 108 3		33		
10 Gallons	500 ppm		36	11
10 Gallons	1000 ppm		72	22
500 Gallons	5000 ppm			5.374

[1 gram (0.035 oz.) , 6 grams (0.21 oz.), or 20 gram (0.71 oz.) Biotab7® tablets per specified amount of tap water]				
Amount of Water	To Achieve Use Concentration of (PPM)	Number of 1 gram tablets	Number of 6 gram tablets	Number of 20 gram tablets
1 Quart		6	1	
1 Gallon		22	4	
5 Gallons	500		18	6
10 Gallons			36	11

[gram(s) of Biotab7® powder		
per speci	fied amount of tap	water]
Amount of	To Achieve Use	gram(s) of
Water	Concentration	Biotab7®
	of (PPM)	powder
5000 Gallons	1 ppm	215
50 Gallons	5 ppm	11
10 Gallons	20 ppm	9
100 Gallons	100 ppm	430
10 Gallons	250 ppm	107
50 Gallons	300 ppm	645
1 Quart	500 ppm	5
1 Gallon	500 ppm	21
5 Gallons	500 ppm	107
10 Gallons	500 ppm	215
10 Gallons	1000 ppm	430
500 Gallons	5000 ppm	107470

Tablets and liquid solution must be handled with care and all procedures must be followed according to the product label and the SDS or Safety Data Sheet.

General Safety Guidelines:

Read Advanced Biocide SDS first. Always be aware of product fumes during mixing. Do not inhale above open containers. Close container quick and tightly and store in cool, dark, well ventilated room. [Ask your supplier before opening package for dosage.]

- 1. Fill an opaque spray bottle or appropriate container with specified amount of tap water
- Slowly add correct number of [Tablets] [gram(s) of Biotab7[®] powder] to Water. Do Not add water to [tablets] [Biotab7[®] powder]. [Tablet] [Biotab7[®] powder] => Water
- 3. Wait 1 minute, stir gently
- 4. Discard unused product after 24 hours or when visibly soiled [or as specified in Use Application Directions]

FOR USE AS A HARD, NON-POROUS SURFACE DISINFECTANT, VIRUCIDE AND FUNGICIDE IN COMMERCIAL, MEDICAL, HEALTH CARE, RESIDENTIAL, INSTITUTIONAL, VETERINARY AND INDUSTRIAL PREMISES, AND EQUIPMENT

Apply a 500 PPM prepared solution directly apply by cloth, mop, sponge, coarse sprayer or by immersion. Treated surfaces must remain wet for 5 minutes. {Note to reviewer: if using reduced contact time for Feline calicivirus, Influenza A, Trichophyton interdigitale and/or Carbapenem-Resistant Klebsiella pneumoniae, the following sentence will be required:} [For [Feline calicivirus], [Influenza A], [Trichophyton interdigitale] and/or [Carbapenem-Resistant Klebsiella pneumoniae], treated surfaces must remain wet for 1 minute.] Wipe dry with a cloth, sponge or mop or allow to air dry. For heavily soiled areas, a preliminary cleaning is required.

[For virucidal activity: BIOTAB7 is an effective virucide against Feline calicivirus and Influenza A when used on hard, non-porous surfaces. Utilize a 500 PPM prepared solution and allow surface to remain wet for 1 minute.]

[For fungicidal activity: BIOTAB7 is an effective fungicide against Trichophyton interdigitale [the athlete's foot fungus] when used on surfaces in areas such as locker rooms, dressing rooms, shower and bath areas and exercise facilities. Utilize a 500 PPM prepared solution and allow surface to remain wet for 1 minute.]

[FOR USE AS A HARD, NON-POROUS SURFACE TUBERCULOCIDE

Apply a 500 PPM prepared solution directly apply by cloth, mop, sponge, coarse sprayer or by immersion. Treated surfaces must remain wet for 10 minutes. Wipe dry with a cloth, sponge or mop or allow to air dry. For heavily soiled areas, a preliminary cleaning is required.]

{Note to Reviewer: Entire Use Applications section is optional unless specific use claimed anywhere else on the label}

USE APPLICATIONS

1. SWIMMING POOL AND SPA

SWIMMING POOL AND SPA CIRCULATION SYSTEMS

- Kills and removes mold stains and slime from pool and spa circulation systems
- Prevents mold stains and slime growth and formation [in pool and spa circulation systems] This product is compatible with [All Spa Treatment Systems]

SPA

CLEANING AND ODOR CONTROL OF HOT TUBS/SPAS

Use Biotab7 to clean hot tubs and spas. Residual byproducts must be monitored as required by the National Primary Drinking Water Regulations (40CFR Part 141) and State Drinking Water Standards. Do not add this product to any automatic dispensing device. Do not apply product when persons are in the spa.

PRIOR TO SPA APPLICATION

Make certain that the pump filter and all spa equipment are working properly. Remove all chlorine or bromine releasing products from spa [Do not use this product if spa contains an in line chlorine or bromine dispensing device that cannot be bypassed]. For best results remove and clean the filter cartridge with a chemical filter cleaner [or by backwashing and/or chemically cleaning sand]. [For best results chlorine or bromine concentrations should be near 0 ppm before applying this product]. FOR ROUTINE SPA MAINTENANCE

INITIAL DOSE

To apply, turn off pump, remove spa cover and filters. [Clean filters with a chemical filter treatment]. Apply one 20-gram tablet Biotab7 inside the [filter port] {or} [filter receptacle] {or} [filter housing] {or} [or skimmer basket] and re-cover spa. Leave general area around spa. After 30 minutes turn pump and circulation jets on for about 5-7 minutes and turn pump off. It may be necessary to turn pump off at the remote cut off switch to disable all circulation in the spa of this product. Leave pump off at least 30 minutes but not longer than 2 hours. Wait approximately 30 minutes before reusing spa. Replace filters prior to entering spa. Application of this product may dislodge mold stains and slime growths from the spa circulation system. If substantial dislodging occurs it may be necessary to drain and refill spa.

ROUTINE MAINTENANCE

Frequency of application is once every 4-6 weeks. Follow INITIAL DOSE application directions. Wait at least 8 hours before use.

WHEN USED FOR SPA REFILL CONDITIONER (PRIOR TO DRAINING AND REFILLING SPA)

Draining and refilling your spa with fresh water at regular intervals is highly recommended. Using this product before draining your spa will remove mold stains and slime in your circulation system. This will help assure a cleaner circulation system when spa is refilled. Follow Initial Dose application directions. Drain and refill spa.

POOL

PRIOR TO POOL APPLICATION

Ensure that pump and filter equipment are working properly. If necessary, clean the filter equipment by backwashing and/or chemical cleaning. Do not add this product through any automatic dispensing device. Apply product when no persons are in the pool. Application of this product may dislodge deposits from the pool circulation system. To help clear water apply a filter aid.

POOL DOSING CHART

1 – 20 gram tablet in skimmer and 1- 20 gram tablet in lint basket for every 1,500-gallon pool capacity (for

a 9,000 gallon pool use 6 – 20 gram tablets in skimmer and 6- 20 gram tablets in lint basket).

WHEN USED FOR ROUTINE POOL MAINTENANCE

INITIAL DOSE

With the pump turned off apply appropriate number of tablets (See dosing chart) to the lint basket of the pump. Turn the pump on until primed. Leave pump on for 1 minute and then turn the pump off. Now apply appropriate number of tablets (See dosing chart) in the skimmer basket Leave pump off at least 6 hours but no longer than 12 hours. Turn pump on and resume normal pump operation schedule. Wait at least 8 hours before use.

ROUTINE MAINTENANCE

Frequency of application is once every 3 - 4 weeks. Follow initial dose application directions for your pool size.

POOL TREATMENT

For pools with a large clarifier demand, hazy water or visible growth of slime and mold stains follow the directions below for treatment.

Brush all visible growth from all areas of pool giving special attention to steps, skimmers, ladders, and lights. Then follow MAINTENANCE INITIAL DOSE instructions above. Observe filter pressure and backwash as needed. Reapply filter aid and continue to filter until pool has been filtered for 24 hours. Clean the filter using a filter cleaner. Within 5 - 7 days begin maintenance program starting with initial dose above.

2. DEODORIZE, STAINS FROM MOLD AND MILDEW

DEODORIZE

Biotab7 eliminates and destroys odors and odor-causing bacteria [.] in [:] {List Sites from Use Site Index}] [and other places where bacterial growth can cause malodors]. Prior to treatment, rooms should be in clean condition. Prepare according to directions at 500 ppm and apply to area with sprayer until covered with mist. Avoid breathing mist. Allow 5-minutes contact time or air dry, then ventilate area. Re-apply as required.

STAINS FROM MOLD AND MILDEW

Spray, pour, or wipe Biotab7 on[.][:] {List Sites from Use Site Index}] [and other] hard surfaces for use against stains caused by mold and mildew. Prepare according to directions at 500 ppm, apply to area. Allow 1-minute contact time. After 30 minutes' rinse with water.

FOAM SOLUTION

Use Biotab7 to eliminate odors on surfaces in dark damp areas. Prepare according to directions at 500 ppm for 10 minutes' contact time.

DEODORIZE PET LITTER BOXES, CARPETS, CONCRETE FLOORS, ETC.

Litter box: Wash out litter box with suitable detergent and rinse with clean potable water. Soak overnight in a solution of 650 ppm. Carpet: Prepare a solution of 500 ppm and add to rug shampoo mix. Allow to air dry. Do not apply until a sample test has been tried and observed for at least 24 hours. The manufacturer accepts no liability for carpet or fabric bleaching. Concrete floor: Clean floor thoroughly. Prepare a solution of 1,250 ppm and apply liberally using mop or spray onto floor. Allow to air dry. Keep Children and pets off treated areas during application and until area is vacuumed.

Animal Bath: Wash animal well with appropriate pet shampoo, rinse with clean water. Prepare a solution of 100 ppm and rinse apply to animal thoroughly. Allow to air dry. Avoid direct contact with animal's eyes, nose, and ears or open wounds.

3. CLEANER AND DEODORIZER FOR FOOD AND DRINK PROCESSING FACILITIES

CONTROL ODOR AND SLIME FORMING BACTERIA IN STAINLESS STEEL TRANSFER LINES AND ON-LINE EQUIPMENT SUCH AS HYDROCOOLERS, PASTEURIZERS, ETC.

Preclean the equipment or line thoroughly before treatment, using a suitable detergent followed by a clean potable water rinse. Prepare solution according to directions at 20 ppm. Fill lines and equipment overnight. Drain and allow to air dry prior to next start-up.

POTATO FACILITIES

Biotab7 can be used in potato facilities. For walls, ceilings, floors, planting and harvesting equipment and truck beds, spray a solution of 100 ppm for 10-minute contact time. To use in potato rinse tanks, flumes and lines, use a chemical feed pump or injector system and apply solution according to directions at 5 ppm.

FRUIT AND VEGETABLE RINSE

Before treatment, whole, uncut fruits and vegetables should be pre-washed and rinsed with clean potable water. Prepare Biotab7 solution according to directions at 5 ppm. Immerse produce in solution for 10 – 20 seconds and rinse with clean potable water.

TO CONTROL ODOR AND SLIME FORMING BACTERIA IN ICE MAKING PLANTS AND MACHINERY

Disassemble and thoroughly clean ice making machinery using a suitable cleaner followed by a potable water rinse. Apply product to the incoming water line of the ice machine via a chemical feed pump or injector system. Prepare solution according to directions at 20 ppm.

CONTROL ODOR AND SLIME FORMING BACTERIA IN COOLING/WARMING WATER FOR CANNING, PASTEURIZERS, PROCESS WATER FOR VEGETABLE/FRUIT RINSES AND ASOCIATED TANKS, FLUMES, LINES, ETC.

All equipment should be precleaned with suitable detergent followed by a rinse with clean, potable. Water systems, including the cooling and warming tanks or spray systems, towers, lines and all water containing parts of the system must be batch loaded at start-up with 5 ppm Biotab7 solution. Prepare a solution according to directions at 5 ppm. Apply using a controlled chemical feed pump or injector system.

4. CLEAN AND DEODORIZE FARM AND AGRICULTURE EQUIPMENT AND PREMISES

SHOE BATH

Product is effective as a shoe bath. Shoe bath should be placed outside of the doorway and used before entering all buildings. Change the solution daily or when the solution appears soiled. Prepare solution according to directions at 1,000 ppm for 5 minutes.

TO PREVENT AIRBORNE AND SURFACE CONTAMINATION OF THE HATCHERY FROM THE TRAY WASHING ROOM AND LOADING PLATFORM

- A. Close doors in the tray washing room to avoid contamination of other hatchery operations. Discard chick downs, egg shells, and cast-off chicks into the trash barrels and transfer the covered containers to the loading platform for disposal.
- B. Wash trays, carriages and other working equipment in a tray washing machine with 300-500 psi water to remove gross filth and soil. As a final rinse prepare a solution according to directions at 20 ppm in high pressure water. Hold cleaned equipment in a closed area for reuse.
- C. Entrance and exit from the tray washing room should be through a foot bath for 5 minutes.
- D. Repeat treatment after each use of the tray washing room.
- E. Wash loading platform as needed to remove gross filth and soil. Wash trash containers discarding the contents to remove gross filth and soil. Prepare solution at 500 ppm and spray trash containers. Allow equipment to air dry.

CLEANER AND DEODORANT IN THE HATCHING AREA

A. As soon as chicks are separated from hatch, remove trash containers with eggshells and down from the area. Remove poultry and feeds from premises, trucks, coops, and crates. Remove litter and droppings from floors, walls and surfaces

occupied or traversed by poultry. Empty all troughs, racks and other feeing and watering appliances. Thoroughly clean surfaces with cleaner and rinse with water.

- B. Prepare solution at 1,000 ppm and spray the entire area for 5 minutes. Allow 10-minute contact time. Ventilate buildings, coops and other closed spaces. Do not house poultry or employ equipment until treatment has dried.
- C. Scrub treated feed racks, troughs, automatic feeders, fountains and waterers with cleaner and rinse with water before reuse.
- D. All workers should use a hand rinse containing a solution of 50 ppm.

FARM EQUIPMENT AND ANIMAL HOUSING BUILDINGS [POULTRY & TURKEY GROW-OUT HOUSES, SWINE PRODUCTION AND HOUSING, BARNS AND LARGE ANIMAL BUILDINGS]

Product cleans, disinfects and deodorizes hard, non-porous surfaces leaving surfaces smelling clean and fresh by removing dirt, grime, and other common soils found in animal housing facilities, livestock, and swine or poultry facilities, grooming facilities, farms, kennels, pet stores, veterinary clinics, laboratories or other small animal facilities. Its non-abrasive formula is designed for use on hard, non-porous surfaces found in (barns, pens and stalls) animal housing facilities.

For disinfection of hard, non-porous surfaces. Follow disinfection procedure for stainless, galvanized and painted steel, copper, aluminum, finished wood, vinyl, plastics, glazed tiles, sealed brick walls, sandwich panels and feeding/drinking equipment:

- A. Remove all animals and feed from areas being treated.
- B. Remove all litter and manure from floors, walls and surfaces of barns, pens, stalls, chutes, and other facilities and fixtures occupied or traversed by animals.
- C. Empty troughs, racks, and other feeding and watering appliances.
- D. Pre-clean visibly soiled surfaces.
- E. Saturate surfaces with solution by using spray, mop, or sponge. Surfaces must remain wet for 5 minutes.
- F. Ventilate buildings and other closed spaces. Do not house animals or employ equipment until treatment has dried.
- G. Immerse clean forks, shovels, and scrapers used for removing litter and manure in the disinfecting solution for 5 minutes. Allow to air dry.
- H. Avoid direct food contact
- I. Prepare according to directions at 1000 ppm for 10-minute contact time.

CLEANER AND DEODORANT OF POULTRY DRINKING WATER

Stage 1: Depending on maintenance history of the pipe network, stage 1 requires from one to several weeks to fully break down the debris in the pipes. Start stage 1 with a prepared solution of 20 ppm and apply at the dosing point. Minimal product will be detected at the drinking-end of the system during this phase as the product is used to wash off and oxidize debris on the surface. Older systems may require more time to remove build-up.

Stage 2: Prepare Stage 2 solution at 5 ppm and use directly in system with automatic injection system.

Note: application specifics may vary by metering system, frequency of replenishment, and overall capacity of drinking container.

TO CLEAN AND CONTROL ODOR IN THE INCUBATOR ROOM

- A. Spray area at least once per week. Prepare solution according to directions at 1,000 ppm for 5 minutes, after removing gross filth or soil with a high-pressure water wash. Wet all surfaces and allow to dry.
- B. Mop floor daily with a prepared solution at 300 ppm.
- C. Prepare a solution of 1,000 ppm for a shoe bath and place at all entrances.
- D. Add a solution of 20 ppm to humidification system or spray the air filters with a solution of 100 ppm to reduce airborne contamination.
- E. Each time the eggs are removed from the incubator, a glove dip solution of 50 ppm is recommended, followed by a solution of 1,000 ppm sprayed on the eggs. The doors to the area must be kept closed to avoid airborne contamination.

TO CLEAN AND CONTROL ODOR WHEN SEPERATING CHICKS IN THE CHICK ROOM, CHICK GRADING BOX AND SEXING ROOM

- A. Remove poultry and feeds from premises, trucks, coops and crates. Remove litter and droppings from floors, walls and surfaces of facilities occupied or traversed by poultry. Empty troughs, racks and other feeding and watering appliances. Thoroughly clean surfaces with cleaner and rinse with water.
- B. Spray the entire area with a solution of 1,000 ppm for 5 minutes. Allow a 10-minute contact time. Ventilate buildings, coops and other closed spaces. Do not house poultry or employ equipment until treatment has dried. Scrub treated feed racks, troughs, automatic feeders, fountains and waterers with cleaner, and rinse with potable water.
- C. All workers in this area must use a hand rinse. Prepare glove dip solution at 50 ppm.
- D. After use, wash area with high-pressure sprayer to remove gross filth and soil. Prepare a solution of 1,000 ppm and use a spray bottle on hands, wire mesh and in empty chick boxes to control contamination and odors from litter. E. Mop floor daily with a solution of 390 ppm. Allow to air dry.

CLEANER AND DEODORANT FOR THE EGG ROOM

- A. Prepare solution of 20 ppm and wash egg room with high pressure sprayer to remove gross filth or heavy soil.
- B. Prepare solution of 1,000 ppm and spray the area for 5 minutes. Cover walls, ceiling, floors, work tablets and benches. Allow to dry for 1 hour or if possible overnight before resuming operations. The washing operations must be conducted once a week or more frequently in cases of heavy contamination.
- C. Mop floors using a prepared solution at 390 ppm. Allow to air dry.
- D. Prepare a solution at 1,000 ppm for a shoe bath and place at entrance to the egg room. Keep doors closed at all times. Prepare a solution of 50 ppm for a glove dip and use when entering and exiting the room. Replace shoe bath and glove dip daily or sooner if traffic is heavy.
- E. Prepare a solution of 40 ppm and add to humidifier water tank to control build-up and airborne spread of odor- causing microorganisms. Prepare a solution of 20 ppm and add to the water supply in the egg washing machine.

CLEANER AND DEODORANT FOR USE IN INCUBATOR HUMIDIFICATION SYSTEMS

Prepare Biotab7 solution and inject into humidification water supply. Prepare according to directions at 300 ppm.

AGRICULTURAL IRRIGATION SYSTEMS AND CUT FLOWERS

Product may be used to treat, control rusts and leaf spot, extend shelf-life of cut flowers; and to remove slimes and inhibit reemergence in irrigation and other non-potable water systems. Use on flooded floors and benches, recycled water systems, humidification and misting systems. Prepare according to directions at 300 ppm.

POTS/FLATS: Apply Biotab7 to used planting devices such as pots and flats. Remove loose soil and plant residue then soak for 10 minutes. Prepare solution according to directions at 500 ppm.

CUTTING TOOLS: Prepare solution according to directions at 500 ppm. Soak cutting tools in solution, allow tools to remain wet for best results. At end of work period, dry and oil tools.

BULBS: Use Biotab7 to treat spoilage causing bacteria of bulbs. Prepare product according to directions at 500 ppm, soak cleaned bulbs for 10 minutes, remove and allow to dry before storage.

CONTROL ODOR AND SLIME FORMING BACTERIA IN ANIMAL CONFINEMENT FACILITIES

To treat animal confinement facilities: Remove all litter and manure from premises and thoroughly clean all surfaces with cleaner. Rinse with water. Prepare Biotab7 solution according to directions at 500 ppm. Use sprayer to saturate all surfaces.

5. CLEANER AND DEODORIZER FOR INDUSTRIAL FACILITIES AND EQUIPMENT

CLEANER AND DEODOERANT FOR WATER STORAGE SYSTEMS ABOARD AIRCRAFTS, TRAINS, BUSES, BOATS, RVs, OFF-SHORE OIL RIGS, ETC.

Clean tanks with cleaner, thoroughly flush with clean, potable water prior to treatment. Prepare the solution according to directions at 500 ppm. Pour the solution into the tank, filling completely. Bleed air out of lines and allow to stand at least 10 minutes. Drain tank and lines and flush with potable water

CONTROL BUILDUP OF ODOR AND SLIME FORMING BACTERIA IN COMMERCIAL WATER FILTRATION SYSTEMS, SAND BEDS, GRAVEL BEDS AND CHARCOAL FILTERS, WITH ACCESSIBLE SERVICE HATCHES

Drain existing water from sand and carbon filters and rinse with clean, potable water. Fill sand filter with potable water. Prepare solution according to directions at 300 ppm and add to sand filter through access hatch. Circulate system 30 minutes. Allow to soak 2 – 3 hours. After treatment, drain system and rinse with clean, potable water.

CLEANER AND DEODORANT FOR TRANSPORTATION, LOADING AND HAULING EQUIPMENT

Clean shipping containers, railroad cars, railroad tanks, cars, trucks, truck trailers, loading chutes, reusable crates and other equipment for transportation of animals, produce or vegetables prior to use. Pressure spray or scrub with solution, covering all exposed areas. Prepare according to directions at 500 ppm for 5-minute contact time.

CLEANER AND DEODORANT FOR VENTILATION SYSTEMS

To treat surfaces for odor causing bacteria associated with ventilation and air conditioning duct work in residential, commercial, and institutional situations. Prior to inspecting, cleaning, treating or working on a ventilation system of its components, the system must be turned off or disconnected from any part of the system not isolated. Mechanically clean, vacuum, or blow free of dirt, dust, mold and debris all duct work using a commercial duct cleaning system or service prior to treatment. The air ducts to be treated must be mechanically sound and free of air leaks. Application of solution: activated solutions sprayed into duct work. All surfaces must be thoroughly wet for at least 10 minutes. Spray application is the preferred method on large surfaces that are easily accessed by removing entry plates or access panels. Avoid excess wetting but be certain coverage is complete on the tops, sides and bottoms of the unlined sheet metal air ducts. All preexisting or treatment created access panels must be resealed or replaced in accordance with Industry Standards after servicing. During application, area must be closed as tightly as possible and sealed. After spraying the area must be opened and aired for 1 hour before re-entry. Mist may be irritating if inhaled. Treat as required.

DEODORIZE HVAC

System Ductwork: Spray Biotab7 into system intake vents while system fan is running. Allow enough spray time for product to contact air duct surfaces. Repeat application as necessary.

Evaporator Coils Drip Pans and Associated Air Conditioning Parts: Air Conditioning system parts must be manually precleaned prior to application using a suitable coil/drip pan cleaner. After cleaning thoroughly spray 500 ppm solution Biotab7 on to cleaned surfaces. Do not wipe off, air dry.

Evaporative Cooler Excelsior Pads

Excelsior pads must be thoroughly washed to remove dirt, debris or slime build-up. Liberally spray Biotab7 onto pads to remove odor causing bacteria and musty odors. Use 500 ppm Biotab7 solution in reservoir water for effective maintenance.

For year-round maintenance; residential homes and apartment complexes should be treated two times per year or more as needed. Commercial/industrial buildings and health facilities should be treated every month.

CAR, TRAIN AND TRUCK WASH WATER USED AT COMMERCIAL CAR WASHES

Biotab7 is effective against odor causing bacteria in waste water commonly used at commercial car wash operations and at facilities engaged in washing trucks, trains, boats and RV's. Waste water facilitates odors and increase disposal costs. Product will eliminate both aerobic and anaerobic bacteria. Prepare according to directions at 500 ppm for 5-minute contact time.

WATER BASED CUTTING FLUID/OILS

Biotab7 will help control bacterial slime and odor, reducing microbiological growth in water-based cutting oils. For batch treatment, prepare solution according to directions at 2 ppm and add to a fresh system. Repeat weekly or on first indication of increased contamination (odor, slime or bacterial count). For continuous treatment, prepare solution according to directions at 1 ppm and add to the system. For heavily contaminated systems, slug-dose with solution prepared according to directions at 20 ppm. After 12 hours, start with the continuous procedure described above.

PULP AND PAPER MILLS

Biotab7 controls slime forming bacteria within paper mill process water. Dose varies with the degree of microbiological and process contamination. Depending on system specific requirements, apply product continuously or intermittently. Repeat intermittent treatments as required to maintain control. Must stay within all local, state and Federal Regulations for discharge. 1 ppm of aliphatic Amines removed for 5.0 ppm of product above a pH of 7.0. Prepare solution according to directions at 5 ppm.

CLEANER AND DEODORANT FOR STORAGE TANKS AND PIPELINES

Empty tank or pipeline and flush with potable water. Add solution to the flush water and circulate through system. Rinse with potable water. Drain. Allow to air dry. Close tanks to protect against contamination. Residual by products must be monitored as required by the National Primary Drinking Water Regulations (40CFR Part 141) and State Drinking Water Standards. Prepare according to directions at 500 ppm for 5-minute contact time.

6. MUNICIPAL WATER TREATMENT

MUNICIPAL WELL WATER

To treat municipal well waters, prepare solution according to directions at 1 ppm and apply using a metering pump, or injector system. Residual by products must be monitored as required by the National Primary Drinking Water Regulations (40CFR Part 141) and State Drinking Water Standards.

WELL WATER TREATMENT

Flush the well casing with Biotab7 to wash off debris. Back wash to increase yield and reduce turbidity. Use a chlorine dioxide test kit to monitor the residual level. Re-treat well if water samples become biologically unacceptable. Residual by products must be monitored as required by the National Primary Drinking Water Regulations (40CFR Part 141) and State Drinking Water Standards. Prepare according to directions at 20 ppm for backwash and 5 ppm thereafter.

7. INDUSTRIAL PROCESS WATER

RETENTION BASINS AND PONDS

Prepare according to directions and add to water to achieve 2-5 ppm. Repeat applications weekly for best results. Do not use where fish are present.

DECORATIVE POOLS, FOUNTAINS, AND WATER DISPLAYS

Prepare according to directions and add to water to achieve a level of 5 – 10 ppm. Do not use when fish are present. NEMATODE WORM ERADICATION

To attack the nematode worm, prepare product for use in the Nematode Contaminated Water. Filtration: Filter with gravel or sand filtration to remove the Nematode bodies. This process is important to remove the nutrition to subsequent micro-organisms. Prepare according to directions at 5 ppm for 4 hours contact time.

INDUSTRIAL COOLING TOWER WATER

Product will control, inhibit or remove slime forming bacteria in recirculating water systems. For use as initial or remedial treatment in cases of significant build-up. Repeat daily until desired results are achieved. Circulate water in normal system operation. Prepare according to directions at 100 ppm.

For once through systems: Prepare solution according to directions at 1 ppm and apply with appropriate method.

Slug dose: Prepare solution according to directions at 20 ppm.

Continuous dose: Prepare solution according to directions at 1 ppm.

DIRECTION TO FLUSH WATER DISTRIBUTION SYSTEMS

Flush water distribution system with product to wash off debris. Back wash the water distribution system to increase yield and reduce turbidity. Use solution as the backwash. Prepare according to directions at 250 ppm for 10 minutes' contact time.

WASTE WATER TREATMENT

Product is effective as both a disinfectant and an oxidant in wastewater treatment. The required dose varies with water conditions and the degree of contamination present. For most municipal and other wastewater systems, a solution of 5 ppm will provide adequate disinfection. For sulfide odor control, between pH 5-9, a minimum of 5 ppm of product should be applied to oxidize 1 ppm of sulfide (measured as sulfide ion). For phenol destruction, at pH less than 8, 1 ppm product will oxidize 1 ppm phenol; at pH greater than 10, 5 ppm product will oxidize 1 ppm phenol. Prepare according to directions at 1 - 5 ppm.

8. CHEMICAL DESTRUCTION AND SCAVENGING

IRON AND MANGANESE REMOVAL

Use the required Biotab7 concentration depending on the measured pH levels and remaining within the limits of all local, state and Federal Regulations for discharge. Precipitate both elements according to the following: inorganic compounds in a soluble state – 1.0 ppm manganese removed for every 2.45 ppm of product above pH 7. 1.0 ppm iron removed for every 1.2 ppm of product above pH 5. Prepare according to directions at 5 ppm.

PHENOL DESTRUCTION

Must stay within all local, state and Federal Regulations for discharge. 1.0 ppm of phenol removed for 5 ppm of Biotab7 solution above pH 10 to Benzoquinone. 1.0 ppm of phenol removed for 5 ppm of product below pH 10 to Carboxylic Acids. Prepare product according to instructions depending on the measured pH levels.

CYANIDE DESTRUCTION

Must stay within all local, state and Federal Regulations for discharge. 1.0 ppm of Cyanide Ion removed for 5 ppm Biotab7 concentration below pH 10 to Cyanate. Continuous treatment rate at 1 - 5 ppm. Treat intermittently at a rate of 5 ppm. Dosing is system dependent. Prepare product according to instructions. Prepare correct concentration depending on the measured pH levels.

HYDROGEN SULPHIDE SCAVENGING

Biotab7 is an effective scavenger of hydrogen sulfide, when hydrogen sulfide is dissolved in water or in a gaseous state. Product is also a powerful scavenger of inorganic or organic sulfides. Product can be used in low and high temperature applications. It is non corrosive to equipment and does not form chlorinated hydrocarbons. The dosage rate varies with each location and local criteria. Determining optimum dose levels requires site-specific trials, optimum is 5 ppm. Prepare according to directions at 5 ppm.

NOX REDUCTION AND EMISSION SCRUBBING

NOX is a precursor to ozone in the atmosphere, and believed to be a contributor to acidic deposition (acid rain). NOX is produced in a variety of different processes, including combustion equipment, gas turbines, incinerators, kilns and power plants. Product can be used in a wet removal (stack rubber) process. The use of stoichiometric amounts of Biotab7 eliminates approximately 95% of the NO in the gas, in concentrations of 20 ppm for short term. Prepare according to directions at 20 ppm and apply in the scrubber system water for the specific application.


Application Use Site and Surfaces:

MEDICAL,	VETERINARY, DENTAL, RESIDENTIAL AND GENER	AL USE SITES
Clinics or Hospitals	Health or Home Care facilities	Ophthalmic offices
Pharmacies	Isolation areas	Homes
Acute Care facilities	Hospices	Physician offices
Ambulance or [Emergency medical] transport vehicles	Manufacturing plants or facilities	Outpatient clinics or Surgical centers[(OPSC)]
Anesthesia rooms or areas	Medical or Physicians or Doctors' offices	Patient Care areas or Rooms or Restrooms
Nursing homes	Intensive Care Units or ICUs	[Pediatric] Exam rooms or areas
Nurse call [device] [button] [and cord] Nursing or Nurses' stations	Neonatal Intensive Care Units [(NICU)] (not for use on medical devices)	Pediatric Intensive Care Units [(PICU)] (not for use on medical devices)
Donation centers	Labs or Laboratories	Physical Therapy rooms or areas
CAT Labs or Laboratories	Newborn or Neonatal nurseries	Transducers/Probes
Central Service areas	Blood Banks	Radiology or X-Ray rooms
Central Supply rooms or areas	[Eye] Surgical Centers	Recovery or Rehabilitation rooms
Critical or Intensive Care Units (not for use on medical devices)	Exam or Examination Rooms (not for use on medical devices)	Respiratory Therapy rooms or areas
Dialysis Clinics or machines (exterior)	Emergency Rooms or ERs (not for use on medical devices)	Surgery or Operating rooms (not for use on medical devices)
Automobile/Airplane/Cruise Ship	Grocery stores	Factories
Bathroom(s)	Gymnasiums/Gyms	Kennels
Buses or Trains	Health Club[s] Facilities	Mortuaries/Morgues
Bowling Alleys	Motels/Hotels	Pet Shops or Stores or areas
Butcher shops	Industrial facilities	Produce or Agriculture areas
Churches	Laundry rooms or Laundromats	Public areas
Colleges/Universities/Schools	Long Term Care facilities	Recreational or Sport centers
Correctional facilities	Kitchens/Restaurants	[Animal or Pet] Grooming facilities
Day Care Centers	Military Installations	Shelters
Dormitories	Residential homes	Storage rooms or areas
Animal Housing facilities	Equine Farms or Farms	Supermarkets
Animal Life Science Labs or Laboratories	Livestock or Swine or Poultry facilities	Veterinary or Vet Clinics or facilities or Hospitals

MEDICAL, VETERINARY, DENTAL, RESIDENTIAL AND GENERAL SURFACES		
Vinyl or Plastic or Painted surfaces	All Hard Non-Porous [Household] surfaces	Chemotherapy hoods
[Diaper or Infant] Changing tables	All Stainless-Steel surfaces	[Tele]phones
Changing tables	[Inner] [Inside of] Drawers	Towel dispensers
Diaper pails	Playpens	Counters/Countertops
Dictating equipment [surfaces]	Locker rooms	Тоуѕ
Doorknobs	Mammography equipment	Autoclaves (at room temperature)
Toilet/Urinal surfaces	Baked enamel surfaces	Bed pans
Transducers	Phlebotomy trays	Blood Glucose monitors
Garbage or Trash cans	Pipes	Cabinet or Closet handles
Animal equipment	Glazed/Ceramic surfaces	Coated Mattresses or Pillows
Grocery Store or Supermarket Carts	Glazed Porcelain or Tile	[TV] Remote[s] control][s]ultrasound
Automatic feeders or troughs or racks	[Mayo] [instrument] stands	laminated surfaces
Cages/Pens/Stalls	Watering appliances or Fountains	Carts
Chairs or Desks or Counters	Light lens covers	[Blood] [Plasma] [Semen] [Milk] [Apheresis]

For any use site that includes electronics or electronic components [please] refer to manufacturer's instructions before use.

{Images and company logos which may be used on packaging}

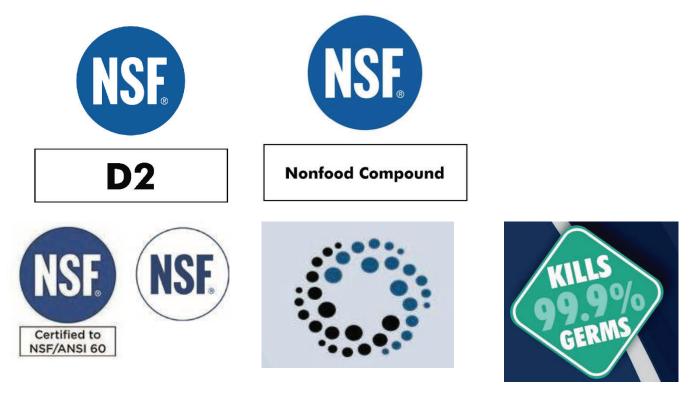



[SubLabel A]

{Note to Reviewer: This sublabel A is required when the product is sold in cases or cartons containing a number of pouches, and the pouches are not for individual sale. The case or carton is still required to contain the full required master labeling of the product on the outside packaging. If pouches are sold individually, full required master labeling of the product is required on the pouch label, and SubLabel A does not apply.}

BIOTAB7

Active Ingredient:	
Sodium chlorite:	20%
Other Ingredients	80%
Total	100%

KEEP OUT OF REACH OF CHILDREN DANGER

See outer [case][carton] labeling for directions for use [and] [,additional precautionary statements] [and] [first aid]. This pouch is not for individual Resale.

EPA Reg. No: 91399-2 EPA Est. No.: 90133-CHN-001 Net Contents/Weight: ____ oz. (___ g) Pouch contains ___ tabs, ___ oz. (__ g) each

[

]

[Scan QR code for full product label & SDS]



{Note to reviewer: the following information is optional on the pouch label with the appropriate referral statement above}

	FIRST AID
If in Eyes	Hold eye open and rinse slowly and gently with water for 15 – 20 minutes. Remove contact lenses, if present, after the first 5 minutes, then continue rinsing eye. Call a poison control center or doctor for treatment advice.
If on Skin or Clothing	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15 – 20 minutes. Call a poison control center or doctor for treatment advice.
If Inhaled	Move person to fresh air. If person is not breathing, call 911 or an ambulance then give artificial respiration, preferably mouth to mouth. Call a poison control center or doctor immediately for treatment advice.
If Swallowed	Have person sip a glass of water if able to swallow. Do not induce vomiting unless told to do so by the poison control center or doctor. Do not give anything by mouth to an unconscious person. Call a poison control center or doctor immediately for treatment advice.
•	ontrol center or doctor immediately for treatment advice. Have the product container or label with you poison control center or doctor, or when going for treatment.
NOTE TO PHYS	ICIAN: Probable mucosal damage may contraindicate the use of gastric lavage.

PRECAUTIONARY STATEMENTS

Hazards to Humans and Domestic Animals: DANGER: Corrosive. Causes irreversible eye damage and skin burns.

May be fatal if inhaled. Do not get in eyes, on skin, or on clothing. Wear face shield or goggles and rubber gloves when handling. Wear coveralls worn over long-sleeved shirt and long pants. Wear a NIOSH/MSHA approved respirator appropriate for chlorine dioxide when using a high-pressure sprayer. Open in a well-ventilated area. Avoid breathing vapors. Vacate poorly ventilated area as soon as possible. Do not return until strong odors have dissipated. Wash thoroughly with soap and water after handling and before eating, drinking, chewing gum, using tobacco, or using the toilet. Remove and wash contaminated clothing before reuse. Handlers applying product in an occupational setting must wear gloves.

PHYSICAL OR CHEMICAL HAZARDS: OXIDIZER. Product contains a strong oxidizer. Always flush drains before and after use. Mix with water according to label directions. Extended contact with metals may cause discoloration or pitting. Do not mix with vinegar, hydrochloric, nitric or acetic acid or other cleaning agents. [For containers greater than 5 gallons]

ENVIRONMENTAL HAZARDS: This pesticide is toxic to fish and aquatic invertebrates, oysters, and shrimp. Do not discharge effluent containing this product into lakes, streams, ponds, estuaries, oceans or other waters unless in accordance with the requirements of a National Pollutant Discharge Elimination System (NPDES) permit and the permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product to sewer systems without previously notifying the local sewage treatment plant authority. For guidance contact your State Water Board or Regional Office of the EPA. [For containers less than or equal to 5 gallons]

]

{The following optional marketing claims can be placed anywhere on the pouch label}
[Disinfectant, Deodorant, Slimicide, Fungicide, Algaestat, Mildewstat, Cleaner]
[All-In-One, Multi-Surface, One-Step, Bactericidal, Odor Counteractant, Odor Neutralizer]
[Commercial, Medical, Residential, Industrial, Institutional]
[Hospital [-Grade] Disinfectant Cleaner, Multi-Surface Disinfectant Cleaner, Cleans All Hard, Non-Porous Water Washable Surfaces]
[[Kills [99.9%] Germs][Ordinary Cleaners [don't][can't]]
[Kills odor-causing bacteria, fungi, mold, and mildew.]

[Biotab7 is proven effective as a disinfectant on hard, non-porous surfaces against the following 5 minute contact time:]
[Staphylococcus aureus ATCC 6538 [S. aureus]]
[Methicillin Resistant Staphylococcus aureus ATCC 33591 [MRSA]]
[Pseudomonas aeruginosa ATCC 15442 [P. aeruginosa]]
[Enterococcus faecalis [E. faecalis] ATCC 51299 [VRE]]
[Escherichia coli ATCC BAA-2469 [CRE]]
[Salmonella enterica ATCC 10708 [S. enterica]]
[Listeria monocytogenes ATCC 49594 [L. monocytogenes]]

[Biotab7 is proven effective as a disinfectant on hard, non-porous surfaces against the following 1 minute contact time:]
[Feline calicivirus, Strain F-9 ATCC VR-782 [Norovirus]
[Influenza A [H1N1]/Virginia/ATCC1/2009, ATCC VR- 1736]
[Trichophyton interdigitale ATCC 9533 [Athletes Foot Fungus]]
[Carbapenem-Resistant Klebsiella pneumoniae ATCC BAA- 2146 [CRE]]

[Biotab7 is proven effective as a disinfectant on hard, non-porous surfaces against the following 2 minute contact time:] [Elizabethkingia meningoseptica ATCC 13253 [E. meningoseptica]]

[Biotab7 is proven effective as a disinfectant on hard, non-porous surfaces against the following 10 minute contact time:] [Mycobacterium bovis BCG ATCC 35743 [M. bovis] [Tuberculosis] [TB]]